

Ford

THE UNIVERSAL CAR

WHOLESALE
Price List of Parts

MODEL T

Effective April 1, 1922

Ford Motor Company

DETROIT, MICHIGAN

Ford Motor Company

FORD FACTORIES AND BRANCHES

Ford Factory, Detroit—*Parent Plant*

Ford Factory, Ford, Ontario, Canada

Ford Factory, Manchester, England

AMERICAN WHOLESALE BRANCHES

Atlanta	Cleveland	Fargo	Los Angeles	Oklahoma City	Salt Lake City
Buffalo	Columbus	Houston	Louisville	Omaha	San Francisco
Cambridge	Dallas	Indianapolis	Memphis	Philadelphia	Scranton
Charlotte	Denver	Jacksonville	Milwaukee	Pittsburgh	Seattle
Chicago	Des Moines	Kansas City, Mo.	Minneapolis	Portland	Washington
Cincinnati	Detroit	Kearney, N. J.	New Orleans	St. Louis	

Instructions for Ordering Parts

- 1—Order all parts through the Authorized Ford Dealer.
- 2—Parts may be ordered in wholesale quantities at a discount of 33⅓% f. o. b. the nearest Ford Branch providing the net amount of the order exceeds \$50.00. When delivery is taken from Dealer's Stock a discount of 25% will apply regardless of quantity ordered.
- 3—Always give Catalog Number and Name of each part ordered.
- 4—Specify whether shipments are to be made by freight or express.
- 5—Remittance by Draft or Money Order must accompany all parts orders placed for shipment from the Ford Branch.

Telegraph Code

To save expense, to expedite ordering and for your convenience, we have arranged a code word for each part of the Ford Model T car. In addition, we list below a brief General Code covering miscellaneous instructions, questions and answers relative to the shipment of parts.

Toperig—Ship to me (us) by express.

Toperkleur—Ship by express to —

Topersteen—Ship to me (us) by freight.

Toper—Ship to me (us) by parcel post.

Topfton—When and how did you ship parts called for in my (our) telegram of —

Topflutch—When and how will you ship parts called for in my (our) telegram of —

Topfwasser—When and how will you ship parts called for in my (our) letter of —

WHOLESALE PRICE LIST OF PARTS

FORD MODEL T 1909-1922

EFFECTIVE APRIL 1, 1922

Part No.	Name of Part	Year	LIST PRICE			Tax	Fac. No.	No. Req. per Car		
			Minimum Wholesale Quan.	Lots of 20 per lot	Lots of 100 per lot				Lots of 1000 per lot	
REAR AXLE										
2500	Rear axle assembly	1909-22	2			\$60 00	MH	95E	1	
2501	Axle housing—right	1915-22	2			8 00	MH	7635C	1	
2502	Axle housing—left	1915-22	2			8 00	MH	7636C	1	
2503E	Axle housing bolt	1913-22	100		\$1 00	\$6 00	03	2854	7	
2503F	Axle housing bolt nut	1909-22	100		1 00	6 00	02	44	7	
2504	Rear axle case gasket	1919-22	20	\$0 30	1 25		03	139	1	
2505	Axle shaft	1912-22	6				1 60	MH	2818	2
2506	Axle shaft washer	1909-22	20	25	1 00		03	39	1	
2508	Axle shaft R. B.	1909-22	6				1 00	253	4	
2509	Axle shaft R. B. sleeve—R	1909-22	6				20	170	2	
2509B	Axle shaft R. B. sleeve—L	1909-22	6				20	161	2	
2510	Axle housing cap	1909-19	20	50	2 00		05	56	2	
2510½	Axle housing cap	1919-22	20	50	2 00		05	56B	2	
2510A	Axle outer roller bearing steel washer	1909-22	20	25	1 60		03	199B	2	
2510B	Axle outer roller bearing felt washer	1909-22	20	60	2 50	15 00	05	54	2	
2512C	Diff. case—left	1914-22	5				1 40	MH	84	1
2513C	Diff. case—right	1914-22	4				90	MH	81	1
2514	Diff. case stud	1909-15	20				05	52	3	
2514B	Diff. case stud	1915-22	20	70	3 00		05	2865	3	
2515	Diff. case stud nut	1909-22	100		1 50	10 00	03	8	3	
2518	Diff. drive gear	1909-22	6				3 00	MH	12B	1
2519	Diff. drive gear screw	1909-22	100		2 00	12 00	03	103	10	
2519A	Diff. gear lock ring	1909-22	20	30	1 00		02	118	2	
2520B	Diff. gear	1909-22	6				1 10	MH	13B	2
2521B	Diff. gear key	1911-22	10		4 00		05	137	2	
2524C	Diff. pinion	1915-22	6				35	MH	141D	3
2526B	Diff. spider	1909-22	6				80	MH	15D	1
2528	Diff. thrust washer	1909-22	10				15	30	2	
2529	Diff. thrust plate	1909-22	10		12 00		15	MH	31	4
2530	Diff. thrust plate pin	1909-16	20		1 50		03	17	4	
2531	Diff. thrust plate pin	1909-16	20		1 00		03	37	2	
2531B	Diff. thrust plate pin	1917-22	20	20	75		02	7640	6	
2532	Diff. housing oil plug	1909-22	6				05	817	1	
2545	Rear axle grease cup	1909-22	2	1 60	7 00		10	76	2	
2547	Rear radius rod	1909-22	20				2 00	152	2	
2548	Radius rod nut	1909-22	100		3 50	25 00	05	77	2	
2549	Radius rod lock nut	1909-22	10		3 00		05	78	2	
2550	Radius rod lock washer	1909-22	100		1 00		02	2823	2	
2551	Radius rod bolt	1909-22	20	70	3 00		05	83	4	
2551B	Radius rod bolt nut	1909-22	100		2 50	18 00	03	60	4	
2557	Hub cam shaft—right	1909-22	6				15	92B	1	
2558	Hub cam shaft—left	1909-22	6				15	61B	1	
2559	Hub cam shaft bushing	1909-22	10				05	173	2	
2562	Cam shaft lever	1909-22	6				10	62	2	
2563	Cam shaft lever pin	1909-22	100		50		02	7	4	
2564	Lever clevis pin	1909-22	100		1 25		03	65	4	
2566	Hub brake shoe	1909-22	10				35	MH	2814	2
2567	Brake shoe support bolt	1909-22	20	70	3 00		05	59	2	
2568	Brake shoe support nut	1909-22	20							
2570B	Brake shoe coil spring	1913-22	20	35	1 50		03	2862	4	
2571	Universal joint assembly	1909-22	6				1 75	151B	1	
2572	Joint knuckle (male)	1909-22	2				50	45B	1	
2573	Joint knuckle (female)	1909-22	2				60	46B	1	
2574	Joint knuckle pin	1909-22	20	20	75		02	6	1	
2575	Joint ring, complete	1909-22	3				60	49B	1	
2576	Joint ring rivets (per set 4)	1909-22	20	12	50		05	50	4	
2577B	Univ. joint housing	1914-22	2				1 25	7609	1	
2578	Joint housing plug	1909-22	20	60	2 50		05	75	2	
2579	Ball joint grease cup	1909-22	10				15	195	1	
2580	Ball cap gasket	1909-22	20	80	3 50	25 00	05	1518	1	
2581	Drive shaft housing front bushing	1909-22	6				30	69	1	
2582	D. S. tubing	1911-22	2				7 50	MH	153B	1
††2583B	D. S. bearing housing	1920-22	2				1 50	MH	191C	1
2584B	D. S. R. B. cap screw	1912-22	20		3 00		05	183B	6	
2584C	D. S. R. B. stud nut	1912-22	20	50	2 00		05	184R	6	
2584D	D. S. R. B. cap screw lock washer	1912-22	100				doz.	05	157	6
2586	D. S. R. B. housing set screw	1911-22	20	90	4 00		05	101R	1	
2587	D. S. roller bearing	1911-22	6				1 25	108	1	

††When ordered to replace malleable type housing also order 2-2591 and 1-2591B

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax

Part No.	Name of Part	Year	Minimum Wholesale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20	Lots of 100	Lots of 1000				
REAR AXLE—Continued										
2588	D. S. R. B. distance plate.	1911-22	20	\$0 25	\$1 00		\$0 05	MH	106R	1
2589	D. S. ball race	1911-22	6				35		186R	1
2589B	D. S. ball bearing assy.	1911-22	6				1 00		185AR	1
2590	D. S. ball retainer	1911-22	20	40	1 75		03		190AR	1
2591	D. S. ball thrust collar.	1911-22	10				25		188	2
2591B	D. S. thrust ball and retainer assembly	1920-22	10				25		162	1
2592	D. S. ball bearing	1911-22	6							
2593	D. S. R. B. sleeve	1911-22	3				1 70		107R	1
2595B	D. S. only	1911-22	3				3 00	MH	87D	1
2596	D. S. sleeve	1911-22	10				80		163B	1
2597B	D. S. pinion	1911-22	10				1 00	MH	163C	1
2597C	D. S. pinion	1911-22	2				1 00	MH	16D	1
2598	D. S. castle nut	1911-22	10				05		124	1
2598B	D. S. pinion key	1911-22	20	80	3 50		05		57B	1
REAR AXLE—60 INCH TREAD										
2600C	Rear axle housing—right	1915-16	2				12 00	MH	2728C	1
2601C	Rear axle housing—left	1915-16	2				12 00	MH	2729C	1
2602B	Rear axle shaft—tapered	1911-16	2				3 00	MH	275	2
2604	Rear radius rod	1909-16	2				2 00		1726	2
FRONT AXLE										
2691	Front axle only	1909-22	2				10 00	MH	202B	1
2694B	Spindle body—right	1911-22	2				1 50	MH	280	1
2694C	Spindle assy.—right	1922	2				2 00	MH	278D	1
2695B	Spindle body—left	1911-22	2				1 50	MH	281	1
2695C	Spindle assy.—left	1922	2				2 00	MH	279D	1
2696	Spindle arm—right or lf.	1911-19	4				50	MH	7716	2
2696C	Spindle arm—right	1919-22	4				50	MH	7715B	1
2696D	Spindle arm—left	1919-22	4				50	MH	7716B	1
2697	Spindle arm nut	1911-22	4							
2704	Stationary cone	1909-22	24		14 50		20		205	2
2705	Adj. cone—right thread	1909-22	24		13 00		20		206	1
2706	Adj. cone—left thread	1909-22	24		13 00		20		207	1
2707	Spindle nut—right thread	1909-22	20	1 60	7 00		10		209B	1
2708	Spindle nut—left thread	1909-22	20	1 60	7 00		10		208B	1
2709	Spindle washer	1909-22	20	25	1 00	\$ 6 00	02		210	2
2710	Spindle bolt with oiler	1910-22	20	3 50	16 00		20		7708	2
2711	Spindle bolt nut	1909-22	20							
2713	Spindle body bush. (pair)	1909-22	20	3 80	16 00		20		223	2
2714	Spindle arm bushing	1909-22	20	30	1 25	9 00	05		225	2
2715	Spindle oiler	1909-22	6				10		218	2
2715B	Spindle bolt oiler assy.	1915-16	10				05		4081	2
2715C	Spindle oiler	1917-18								
2715D	Spindle oiler	1919-22								
2717	Spindle con. rod	1909-22	2				2 50	MH	264	1
2718	Spindle con. rod bolt with oiler	1909-22	20		12 00	100 00	15		7706	2
2719	Spindle con. rod bolt nut	1909-22	100		2 50	15 00	03		220	2
2721	Spindle con. rod yoke	1909-18	2				40		248	1
2721B	Spindle con. rod yoke ball	1919-22	2				25		226	1
2721C	Spindle con. rod yoke	1919-22	2				50		248B	1
2722	Steering yoke clamp bolt and nut	1909-18								
2725B	Steering gear con. rod	1909-22	2				1 00	MH	289	1
2728	Ball socket cap	1909-22	6				10		254B	2
2729B	Ball socket bolt and nut	1909-22								
2733	Front radius rod	1909-19	3				2 00	MH	263	1
2733B	Front radius rod	1919-22	3				1 75	MH	263B	1
2734	Front radius rod nut	1909-19								
2736	Front radius rod ball cap	1909-22	12				12		217	1
2737	Front radius rod ball socket	1911-22	2				25		809B	1
2741	Radius rod ball cap stud	1911-22	20	55	2 50	15 00	03		4365	2
2741B	Radius rod ball cap stud nut	1911-22								
2742	Radius rod ball cap spr g	1911-22	20	40	1 75	10 00	03		292	2
2760	Front axle only—60	1911-16	2				10 00	MH	1720B	1
2761	Steering spindle con.rod —60	1909-16	2				3 00	MH	1725	1
2762	Steer. gear con.rod—60	1909-16	2				1 25	MH	2739	1
WHEELS										
2800	Front wheel—clincher	1909-22	2				7 50		291B	2
2800B	Front wheel—dem. less rim and brgs.—Kelsey	1919-22	2				7 25		291D	2
2800C	Front wheel—dem. less rim and brgs.—Hayes	1919-22	2				7 25		291E	2
2800D	Front wheel—clincher— less hub	1909-22	2				5 00		295	2
2800E	F. and rear wheel—dem. less rim & hub—Kelsey	1919-22	2				4 75		293A	4

††When substituting 2721C for old style yoke, also order 2721B Ball.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Wholesale Quan.	Lots of 20 per lot	Lots of 100 per lot				
WHEELS—Continued									
2800E	F. and rear wheel—dem. less rim & hub—Hayes	1919-22	2			\$ 4 75		293B	4
2801	Front wheel complete R. or L.—dem.—Kelsey	1919-22	2			10 00		7697	1
2801B	Front wheel complete R. or L.—dem.—Hayes	1919-22	2			10 00		7697B	1
2803	Front hub assy. malleable	1909-22	4			1 80		200	2
2803B	Front hub with R B cups pressed steel	1909-22	2			2 00		219	2
2804	Outer race	1909-22	12		\$ 8 00			234	2
2805	Inner race	1909-22	10		13 50			235	2
2806	Outer ball retainer	1909-22	20	\$ 25	1 00			236	2
2807	Inner ball retainer	1909-22	20	25	1 25			237	2
2808	Dust ring	1909-22	20	70	2 50			238	2
2809	Front & rear hub felt washer	1909-22	20	60	2 50	\$ 18 00		239	4
2810	Large balls	1909-22	100		3 00	25 00		241	24
2811	Small balls	1909-22	100		1 50	12 00		249	22
2814C	Rear wheel—clincher	1912-22	2			7 50		2815	2
2814D	Rear wheel—clincher—less hub	1909-22	2			5 00		2816	2
2814E	Rear wheel complete—dem.—Kelsey	1919-22	2			10 00		7698	2
2814F	Rear wheel complete—dem.—Hayes	1919-22	2			10 00		7698B	2
2814G	Rear wheel—dem. less rim—Kelsey	1919-22	2			7 00		2815B	2
2814H	Rear wheel—dem. less rim—Hayes	1919-22	2			7 00		2815C	2
2815C	REAR HUB	1912-22	4			1 50	MH	2819	2
2816B	Rear hub key	1912-22	20	35	1 50	12 00		2863	2
2818	Rear hub brake drum	1909-22	4			40		3B	2
2819	Hub cap	1909-22	20	2 80	12 50			7727	4
2825	Hub bolt	1911-22	100		1 75	9 00		28B	24
2825B	Hub bolt nut	1911-22	100		1 25	7 00		29	24
2827	Hub flange	1911-22	3			20		233B	4
2828	Rear hub lock nut	1912-22	20	90	4 00			242	2
2833	Front hub bear. cup inner	1919-22	6			60		2955	2
2834	Inside spindle cone and roller assembly	1919-22	6			1 10		205B	2
2836	Front hub bearing cup outer	1919-22	6			50		2956	2
2837	Outside spindle cone and roller assembly—right thread	1919-22	6			75		206B	1
2838	Outside spindle cone and roller assembly—left thread	1919-22	6			75		207B	1
2841	Front hub dust cap assy.	1919-22	12		8 00	10		350	2
2845	Demountable rim only—Kelsey	1919-22	2			2 00		8774	4
2845B	Demountable rim only—Hayes	1919-22	2			2 00		8774B	4
2846B	Demountable rim clamp—Kelsey	1919-22	20	1 70	5 00	10		8831B	16
2847	Demountable rim bolt	1919-22	24		4 50	05		8832	16
2848	Dem. rim bit. nut—Hayes	1919-22	24		4 00	05		8834B	16
2848B	Dem. rim bolt nut—Kelsey	1919-22	24		4 00	05		8834	16
2849	Spare rim carrier	1919-22	2			2 25	MH	8848C	1
2849C	Spare rim carrier clamp support and bolt assy.	1921-22	4			15		7511	
FRAME									
2850	Frame assembly	1909-22	2			13 00	MH	2916	1
2851B	Side member—right	1914-22	2			4 00		2914	1
2852B	Side member—left	1914-22	2			4 00		2915	1
2853	Front cross member	1909-22	6			90		303	1
2854B	Rear cross member	1914-22	3			1 20		2913	1
2855	Front corner bracket—R	1909-22	6			15		305	1
2856	Front corner bracket—L	1909-22	6			15		306	1
2857	Rear corner bracket—R	1909-22	6			15		307	1
2858	Rear corner bracket—L	1909-22	6			15		308	1
2859	Front end spacer—L	1909-22	6			10		318B	
2860	Front end spacer—R	1909-22	6			10		319B	
2863	Body bracket	1909-22	6			15		344	4
GASOLINE TANK									
2900B	Gas tank—Sedan	1916-22	2			7 00	MH	7950	
2900C	Gasoline tank	1909-22	2			5 00	MH	1303B	1
2901	Filling plug	1909-22	20	1 80	8 00	10		1317	1
2902B	Sediment bulb	1909-22	6			90		2088	1
2908	Feed cock	1909-22	4			Order 3079			
2909	Feed pipe—40 3/4"	1909-22	4			20		1364	1
2909B	Feed pipe—51 3/8"	1916-22	4			25		7965	
2909C	Feed pipe—66 1/2"	1918-19	4			40		9775R	

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Wholesale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
GASOLINE TANK—Continued										
2909D	Feed pipe—5/8"	1919-22	4				\$ 0 30		8690	1
2910	Feed pipe pack nut	1909-22	20	\$0 90	\$4 00			05	1374	2
2911	Feed pipe—7/8"	1915	4					70	1394R	1
2913	Feed pipe gasket	1909-22	20		1 50			02	5892	
2914	Gas tank support—R	1917-20	2					25	2132	1
2914B	Gas tank support—R	1920-22	2					25	2132B	1
2915	Gas tank support—L	1917-20	2					20	2133	1
2915B	Gas tank support—L	1920-22	2					20	2133B	1
2916	Feed pipe clamp	1921-22	20					02	2118	
MOTOR										
*532CX	Motor assy	1909-22	2						532C	1
x3000C	Cylinder	1909-22	2				22 50	MH	400D	1
x3000B	Cylinder (rebored)	1909-22	2				15 00	MH	400E	1
3001	Cylinder head	1909-22	2				6 00	MH	401C	1
3002	Cyl. head gasket	1909-17	20	6 50	30 00		35	MH	402B	1
3003	Cyl. head cap screw	1909-17	20	70	3 00		05		483B	15
3003B	Cyl. head cap screw	1918-22	20	70	3 00		05		483C	
3004	Cyl. head outlet con.	1909-16	6				35	MH	446C	1
3004B	Cyl. head outlet con.	1917-22	6				35	MH	8719	1
3005	Cyl. head out. con. gasket	1909-22	20	70	3 00		05	MH	445B	1
3007	Cyl. head outlet hose	1909-22	20				15		448B	1
3007	Cyl. head outlet hose clip	1909-22	20	80	3 50		05		607B	2
3008	Cyl. head out. con. screw	1909-22	20	50	2 00		05		550C	2
3009B	Cyl. front cover	1909-19	2				1 00	MH	690B	1
3009C	Cyl. front cover	1919-22	2				1 00	MH	690C	1
3010	Cyl. cover bolt and nut	1909-22		Order 4808 and 2515						
3011	Cyl. cover cap screw	1909-22	20	40	1 75		03		432	3
3012	Cyl. cover felt	1909-22	20	90	4 00		05		504	1
3013	Cyl. cover liner	1909-19	20	25	1 00		02		505B	1
3013B	Cyl. cover liner	1919-22	20	25	1 00		03		505C	1
3014	Cyl. cover and crank case bolt and nut	1909-22		Order 3362 and 2515						
3015	Cyl. water inlet con.	1909-22	6				30	MH	442B	1
3016	Cyl. inlet con. screw	1909-22	20	50	2 00		05		597	2
3017	Time gear cover	1919-22	4				1 00	MH	1754	1
†3017B	Time gear cover	1919-22	4				80	MH	1769	1
3017C	Time gear cover gasket	1919-22	100		1 00		02		1775	1
3017D	Time gear cover plate	1919-22	6				05	MH	1773	1
3018	Cyl. water inlet gasket	1909-22	20	50	2 00		05	MH	596	1
3019	Cyl. water jacket plug	1909-13	10				05		557	3
3019B	Cyl. water jacket plug	1914-22	20		50		02		5919	3
3020	PISTON COMPLETE	1909-22	10				1 70	MH	586C	4
3020C	PISTON COMPLETE	1909-22	10				1 70	MH	683A	4
3020D	PISTON COMPLETE	1909-22	10				1 70	MH	683C	4
3020E	PISTON COMPLETE	1909-22	10				1 70	MH	683B	4
3020F	PISTON COMPLETE	1909-22	10				1 70	MH		4
3021	Piston only	1909-22	10				1 00	MH	418C	4
3021B	Piston only—0025" O. S.	1909-22	10				1 00	MH	418DR	4
3021C	Piston only—03125" O. S.	1909-22	10				1 00	MH	418ER	4
3021D	Piston only—033" O. S.	1909-22	6				1 00	MH	418FR	4
3021E	Piston only—005" O. S.	1909-22	10				1 00	MH	418GR	4
3022	Piston pin	1909-22	20			\$225 00	25		419B	4
3022½	Piston pin bushing (pair)	1909-22	10		20 00		25		668	4
3023	Piston ring	1909-22	20	2 70	12 00		15	MH	422C	12
3023B	Piston ring	1909-22	20	2 70	12 00		15	MH	422ER	12
3023C	Piston ring	1909-22	20	2 70	12 00		15	MH	422DR	12
3023D	Piston ring	1909-22	20	2 70	12 00		15	MH	422FR	12
††3024	CONNECTING ROD	1909-22	10				1 20	MH	641	4
**3024B	Connecting rod	1909-22					1 20	MH		4
3025	Con. rod cap bolt	1909-22	20	80	3 50	22 00	05		489B	8
3026	Con. rod cap bolt nut	1909-22	20	60	2 50	15 00	05		490	8
3029	Con. rod clamp screw	1909-22	20	70	3 00		05		578	4
3030	CRANK SHAFT	1909-22	2				9 00	MH	498B	1
3031	C. S. rear bearing cap	1909-22	6				50		405AR	1
3032	C. S. front bearing cap	1909-22	6				40		406B	1
3033	C. S. center bearing cap	1909-22	6				40		407B	1
3034	C. S. bearing bolt—center and front	1909-22	10				10		408	4
3035	C. S. bearing bolt nut	1909-22		Order 2551B						
3036	C. S. rear bearing bolt	1909-22	10				10		478	2
3038	C. S. bearing liner—center and front	1909-22	100		50	2 50	01		502B	8
3039	C. S. rear bearing liner	1909-22	100		50	2 50	01		503B	4
3040	C. S. starting pin	1909-20	20	60	2 50		05		529B	1
3040B	C. S. starting pin	1920-22	20	60	2 50		05		529C	1
3041	CAM SHAFT	1909-22	2				2 50	MH	410	1
3042	Cam shaft front bearing	1909-22	10		20 00		30		411	1
3043	Cam shaft front bearing	1909-22	10		20 00		30		412B	1
3044	Cam shaft rear bearing	1909-22	10		12 00		15		413	1

xWhen used on car not equipped with starter also order 3017B, 3017C, 3011, 3008 and 3016.

†Used with 3000C cylinder on cars not equipped with starter.

††Connecting rods requiring new bearings will be exchanged at Branch or Factory for 60c each.

Specify with or without starter—Inquire of Branch for Price.

**Special rod for crankshafts worn .025" undersize.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Wholesale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
MOTOR—Continued										
3045	Cam shaft bearing ring	1909-22	20	\$0 25	\$1 00		\$ 0 03		534	2
3046	Camshaft bearing screw	1909-22	20	70	3 00		05		414	2
3047B	Time gear—large	1909-22	6				1 00	MH	415B	1
3048B	Time gear—small	1909-22	6				75	MH	416B	1
3049	Cam shaft gear dowel pin	1909-22	20	30	1 25		03		417	2
3050B	Cam shaft gear lock nut	1909-22	10				10		4453	1
3051	Small time gear key	1909-22	20	50	2 00		05		477	1
3052	Valve	1909-22	32			\$120 00	15		424	8
3052B	Valve— $\frac{1}{8}$ " O. S. stem	1909-22	16			120 00	15		5913	8
3053 $\frac{1}{2}$	Valve bushing	1909-22	10				30		428	8
3054	Valve spring	1909-22	20		4 00		05		431	8
3056	Valve spring seat	1909-22	108		40	3 00	Set of 8	05	425	8
3057	Valve spring seat pin	1909-22	100		40	2 00	of 8	05	429	8
3058	Push rod	1909-22	20	1 80	8 00	65 00	10	MH	426	8
3058B	Push rod— $\frac{1}{8}$ " O. S. stem	1909-22	20	1 80	8 00		10	MH	5914	8
3059 $\frac{1}{2}$	Push rod bushing	1909-22	6				25		427	8
3060B	Exhaust manifold	1913-22	3				1 50	MH	4483	1
3061	Exhaust pipe pack nut	1909-22	10		15 00		20		518	1
3062	Inlet pipe	1909-22	3				1 30	MH	512B	1
3063	Inlet and exh. pipe gasket	1909-22	100		2 00	15 00	03	MH	513	6
3064	Inlet and exh. pipe gland	1909-22	100		1 00	8 00	02		514	6
3065	Inlet and exh. pipe clamp	1909-22	10				10	MH	515	4
3066	Inlet and exh. clamp stud	1909-22	20	60	2 50		05		516	4
3066B	Inlet and exh. clamp stud nut	1909-22	100		1 25	8 00	03		517	4
3068	Breather pipe	1909-22	10		8 00		10	MH	4468	1
3069B	C. C. front end support	1911-17	2				1 00		801C	1
3069C	C. C. front end support	1917-22	2				60		801D	1
3070B	C. C. & cyl. gasket—L	1909-22	20	70	3 00		05		886	1
3071B	C. C. & cyl. gasket—R	1909-22	20	70	3 00		05		887	1
3072	C. C. & cyl. cover cap screw	1909-22	20	55	2 00		03		1388	2
3073	C. C. arm bolt—side	1909-22	20	60	2 50		05		479	2
3074	C. C. arm bolt—top	1909-22	20	50	2 00		05		940	2
3074B	C. C. arm bolt nut	1909-22	Order 2515							
3076B	C. C. front bearing and spring clip	1921-22	6				90		320C	1
3076C	C. C. front bearing and spring clip nut	1921-22	Order 2548							
3077	C. S. front bearing cap	1909-22	6				15		321	1
3078	C. C. front bearing screw	1909-21	20	60	2 50		05		322	2
3078B	C. C. front bearing screw	1921-22	Order 3008							
3078C	C. C. front bearing lock washer	1921-22	20		50		01		5636	2
3079	C. C. oil cock	1909-22	10		12 00		15		1515	2
3080	C. C. drain cup plug	1909-22	Order 2532							
3080B	C. C. drain cup plug gasket	1909-22	20	40	1 75		03	MH	4339	1
3081	C. C. oil tube	1909-22	6				25		543B	11
3083	C. C. arm block	1909-22	6				05		890	2
3083B	C. C. arm block—Truck	1918-22	2				05	TT	890	2
3084	Engine pan—right	1909-22	6				35	MH	1330	1
3085	Engine pan—left	1909-22	6				35	MH	1331B	1
3088B	Engine pan and hood board bolt	1909-22	100		1 50		03		4074	2
3088C	Engine pan and hood board bolt	1909-22	100	35	1 50		03		4073	2
3088D	Engine pan and hood board bolt—Truck	1918-22	20		1 50		03	TT	4073	2
3088E	Engine pan and hood board bolt nut	1909-22	100		1 00	7 00	02		1309	
3100	CRANK CASE	1912-22	2				12 00	MH	1526E	1
3101	Crank case lower cover	1912-22	2				40	MH	1582	1
3101B	Crank case lower cover reinforcement	1912-22	4				30		4378-4379	1
3102B	C. C. lower cover gasket	1912-22	20	1 40	6 00		10		1586	1
3103	C. C. lower cover screw	1912-22	20	25	1 00		03		4328	14
3110	Cylinder valve cover	1912-22	4				15	MH	656	2
3110B	Cylinder valve cover	1921-22	4				30	MH	656B	1
3111B	Cyl. valve cover gasket	1912-22	20	60	2 50		05		660	2
3111C	Cyl. valve cover gasket	1921-22	20				10		660B	1
3112	Cyl. valve cover screw	1912-22	20	50	2 00		03		654	2
3114	C. C. arm with rivets	1909-22	6				30		815B	2
3115	C. C. arm rivet	1909-22	50				doz. 05		312	
COMMUTATOR										
3162	Com. case support bolt	1912-19	10				05		4441	1
3162B	Com. case support bolt	1919-22	10				05		1756	1
3163	Com. case spring	1912-22	10				05		689	1
3165	Com. brush only	1912-22	20				30		4481	1
3176	Com. oiler	1912-16	10				05		2383	1
3176B	Com. oiler	1917-18	10				05		480	1
3176C	Com. oiler	1919-22	20	80	3 50		05		480B	1
3177	Com. felt ring	1912-22	20	30	1 25		03		5930	1

When ordered to replace old style C. C. front frame bearing also order 2-3008, 2-3076C, 2-3078C, 1-3664, 1-3810 and 2-753 cotter.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
COMMUTATOR—Continued										
3206	Com. brush cap	1909-22	20	\$0 35	\$1 50		\$0 02		468	1
3207	Com. brush cap pin	1909-22	100		50		01		466	1
3210	Com. contact point nut	1910-22	100		75		02		472B	8
3220	Com. lock nut	1909-22	20	50	2 00		05		471	1
3221	Com. case with fibre	1912-22	20				60		5908	1
3222	Com. shield	1912-22	20	35	1 50		02		5923	1
MAGNETO										
3250D	Magneto coil assembly	1915-22	2				6 00		5941B	1
3252	Magneto spool support screw	1909-22								
										Order 3371
3254	Magnet bolt	1909-22	20	50	2 00		03		537B	16
3255B	Magnet bolt washer	1911-22	20		50		01		624	16
3257	Magnet brass support	1909-22	20	80	3 50		05		535C	16
3260	Magneto contact assy	1909-22	10		15 00		20	MH	1545	1
3261B	Magneto contact nut	1909-22	20		50		01		1508	2
3261C	Magneto contact screw washer	1909-22	20		50		01		1565	
3262	Magneto contact spring	1909-22	20	70	3 00		05		1509	1
3262B	Magneto contact screw and spring assembly	1919-22	10				10		4350	
3266	Magneto contact fibre screw	1909-22	20		50		01		1505	3
3267	Magneto primary insulating block	1915-22	10				05		4382	
3267B	Magneto contact insulator	1919-22	10				05		1603B	
3267C	Magneto contact insulator shell	1919-22	10				03		8611	
3268	Fly wheel ring gear	1919-22	2				2 00	MH	1885	1
3269C	Fly wheel	1911-19	2				6 00	MH	701B	1
3269G	Fly wheel only	1919-22	2				5 00	MH	701C	1
3269H	Fly wheel with ring gear and magnets assembled	1919-22	2				15 00	MH	5946B	1
3270	Fly wheel cap screw	1909-22	20		8 00		10		721	4
3271	Fly wheel dowel pin	1909-22	20	80	3 50		05		722	2
3272	Magneto coil support shim	1909-22	10		3 50		05		584	1
3276B	Magnet (16)	1915-22	2			set	5 00		5933	16
3277	Magnet clamp	1911-22	20	50	2 00		03		623	16
3277B	Magnet clamp	1913-14	20				10		4499	16
3278	Magnet clamp screw	1911-22	20	50	2 00	\$16 00	03		625	16
3279	Magneto contact washer	1909-22	20	16	75		01		560	1
TRANSMISSION										
3300B	Transmission assy	1919-22	2				35 00	MH	744C	
3301	Trans. reverse plate assy	1909-22	4				2 75	MH	747	1
3304	Trans. reverse gear bushing	1909-22	6				50		705	1
3305	Trans. rev. and S. S. rivet	1909-22	60				doz. 05		708	8
3306	Trans. slow speed plate assy	1909-22	4				2 50	MH	748	1
3309	Trans. slow speed gear bushing	1909-22	6				35		745	1
3310	Trans. brake drum rivet	1909-22	60				doz. 05		711	8
3311	Trans. brake drum assy	1909-22	4				3 00	MH	750	1
3313	Trans. triple gear assy	1909-22	3				1 50	MH	751B	3
3314½	Trans. triple gear flanged bushing	1911-22	12				25		716B	3
3315	Trans. triple gear shaft	1909-22	6				15		715	3
3316	Trans. triple gear riveting pin	1909-22	36				doz. 05		720	24
3317	Trans. driven gear	1909-22	3				80	MH	713	1
3318	Trans. driven gear key	1909-22	12				03		714	2
3320C	Trans. driven gear sleeve bushing	1909-22	6				20		712	2
3320D	Driven gear sleeve washer	1909-22	12				05		776	3
3321	Trans. driving plate assy	1909-22	2				3 50	MH	749	1
3323	Trans. driving plate screw	1909-22								
										Order 3371
3325	Trans. driving plate rivet	1909-22	60				doz. 05		736	8
3327B	Trans. driving plate bush	1909-22	6				15		772	1
3328	Trans. clutch disc—small	1909-22	16		8 00		10	MH	727	12
3329	Trans. clutch disc—large	1909-22	16		8 00		10	MH	728	13
3331	Trans. gear shaft	1909-22	3				1 50	MH	723B	1
3332	Trans. clutch disc drum	1909-22	3				1 50	MH	725B	1
3333	Trans. clutch disc drum key	1909-22	10		4 00		05		726B	1
3334	Trans. clutch disc drum set screw	1909-22	10		4 00		05		752	1
3336	Trans. clutch push ring	1909-22	6				35	MH	770	1
3337	Trans. clutch finger	1909-22	6				15		732B	3
3337½	Trans. clutch finger screw	1909-22	6		3 00		05		756	3
3337B	Trans. clutch finger and screw	1909-22	6				20		765	3

††When using short bushing in making repairs remove driving plate key.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
TRANSMISSION—Continued										
3338	Trans. clutch finger pin	1909-22	10				\$ 0 02	735	3	
3340	Trans. clutch spring	1909-22	6				35	737	1	
3341	Trans. clutch spring support	1909-22	6				15	MH 738	1	
3342	Trans. clutch spring thrust ring pin	1909-22	20	\$ 0 50	\$ 2 00		05	739	1	
3344	Trans. clutch shift	1909-22	6				50	MH 733	1	
TRANSMISSION COVER										
3362	Trans. cover bolt	1909-22	100		2 00	\$ 15 00	05	79		
3362B	Trans. cover bolt nut	1909-22	Order 2515							
3363	Trans. cover gasket (front)	1909-22	20	35	1 25		05	872B	1	
3363B	Trans. cover gasket—short	1909-22	20				03	4358	1	
3367	Trans. cover door screw	1909-22	20	25	1 00		02	430	6	
3368	Universal ball cap (rear)	1909-22	4				30	MH 818	1	
3369	Universal ball cap (front)	1909-22	4				80	MH 819D	1	
3371	Universal ball cap screw	1909-22	20	50	2 00	14 00	03	731	2	
3372	Universal ball cap bolt and nut	1909-22	Order 3362 and 2515							
3375	Trans. cover screw	1909-22	Order 3072							
3376B	TRANS. COVER	1919-22	2				6 50	MH 826E	1	
3377B	Trans. cover gasket	1909-22	20	1 80	8 00	pr	15	885B	1	
3378	Trans. cover door	1911-22	4				15	MH 1546D	1	
3379B	Trans. cover door gasket	1911-22	20	90	4 00		05	1547C	1	
3380	Bendix cover	1919-22	4				20	MH 1763	1	
3381	Bendix cover gasket	1919-22	20	50	2 00		03	1764	1	
3382	Trans. cover rear plate	1919-22	4				05	MH 1761	1	
3383	Trans. cover front plate	1919-22	4				10	MH 1758	1	
TRANSMISSION CONTROL										
3400	Trans. clutch release ring	1909-22	4				20	741	1	
3402D	Clutch lever and shaft	1913-22	4				35	1548		
3403	Clutch lever screw	1909-22	Order 3973							
3403B	Clutch lever screw nut	1909-22	Order 3066B							
3405	Clutch lever pin	1909-22	10		1 00		02	1553	1	
3405B	Clutch release fork—RorL	1913-22	4				15	4345	2	
3406C	Clutch release fork pin	1913-22	Order 3405							
3408	Clutch release fork key	1909-14	10		3 00		05	836	2	
3409	Clutch release fork clamp screw	1909-14	10				10	835	2	
3411	Clutch lever clevis pin	1909-22	Order 2564							
3413	TRANSMISSION BAND ASSEMBLY	1909-22	6				60	MH 838B	3	
(Bands will be exchanged at Branch or Factory at 50 cents each)										
3415	Trans. band washer	1909-22	20	40	1 75		03	840	2	
3416	Trans. band lining	1909-22	24				15	MH 1562A1	3	
3416B	Trans. band lining—set of 3 inc. rivets—in carton	1909-22	8		60 00	set	75	1564	1	
3419	Trans. band adj. screw	1909-22	12		7 50		10	1533	1	
3420	Trans. band adj. screw nut	1909-22	20	60	2 50		05	1532	1	
3421B	Trans. band ear iron rivet	1909-22	100		2 00	doz.	05	843	12	
3422B	Trans. band brass rivet	1909-17	1000		3 60	doz.	05	844B	6	
3423B	Trans. band brass rivet	1909-22	1000		2 50	doz.	05	845B	24	
3425	Trans. band spring	1909-22	20	50	2 25		05	841B	3	
3426	Trans. band adj. nut	1909-22	20	50	2 00		05	851	2	
3427	Slow speed shaft	1909-22	6				15	848B	1	
3428	Slow speed notch	1909-22	6				30	4327	1	
3429	Slow speed notch pin	1909-22	10		1 00		02	1560	1	
3432	Speed lever	1909-22	2				10	862B	1	
3434	Reverse pedal	1909-22	2				60	MH 4324	1	
3435	Brake and rev. pedal shaft	1909-22	10				15	849B	2	
3436	Brake and rev. pedal support	1909-22	6				20	4325	2	
3437	Brake and rev. support bolt	1909-22	20	50	2 00		05	1534	2	
3437B	Brake and rev. support bolt nut	1909-22	Order 2515							
3439	Brake pedal	1909-22	2				60	MH 4323	1	
3440	Clutch pedal	1909-22	2				60	MH 854B	1	
3441	Pedal pin	1909-22	Order 3405							
3442	Clutch pedal support	1909-22	6				20	4326	1	
3443	Clutch pedal support bolt	1909-22	20	50	2 00		05	1536	1	
3443B	Clutch pedal support bolt nut	1909-22	Order 2515							
3445	Slow speed connection	1909-22	6		3 50		05	1540	1	
3446	Slow speed con. lock nut	1909-22	Order 2503F							
3447	Slow speed con. clevis	1909-22	6		7 00		10	802	1	
3448	Controller quadrant	1909-22	3				20	309B	1	
3449	Con. shaft with speed lever	1909-22	2				80	MH 1557	1	

†When ordered to replace cover on cars below 2044100 also order 3402D clutch lever and shaft.

^ Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Wholesale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
TRANSMISSION CONTROL—Continued										
3450	Controller shaft bracket	1909-22	3				\$0 15	311	2	
3452	Controller shaft bracket bolt	1909-22	20	\$0 50	\$2 00	\$15 60	03	315	4	
3452B	Controller shaft bracket bolt nut	1909-22	20	30	1 25	9 00	02	316	4	
3455	Hand brake lever	1909-22	2				1 25 MH	1550	1	
3456B	Hand brake lever pin	1909-22	Order 2574							
3457	Hand brake lever key	1909-17	6				05	874	1	
3458	Hand brake lever pawl	1909-22	10		7 50		10	875	1	
3459	Hand brake lever pawl pin	1909-22	100		1 00		02	876	1	
3460	Hand brake lever pawl rod	1909-22	2				10	877	1	
3462	Hand brake lever pawl lift assy	1909-22	4				15	4363	1	
3463	Hand brake lever pawl lift spring	1909-22	10				02	888	1	
3465	Hub brake lever	1909-22	6				20	864	1	
3466	Hub brake lever pin	1909-22	Order 3405							
3467	Hub brake lever clevis	1909-22	Order 3447							
3468	Hub brake pull rod—R	1909-22	6				50 MH	891B	1	
3469	Hub brake pull rod—L	1909-22	6				50 MH	1513B	1	
3470	Brake rod support—R	1909-22	6	1 40	5 00		10	1367C	1	
3471	Brake rod support—L	1909-22	6	1 40	5 00		10	1398C	1	
3472	Brake rod support bolt	1909-22	100		1 25	6 00	03	1388	2	
3472B	Brake rod sup. bolt nut	1909-22	Order 3088E							
STEERING GEAR										
3500C	Steering gear assy.	1911-22	2				10 00 MH	5042	1	
3501C	St. gear rim	1920-22	2				75	901C	1	
3502	St. gear rim screw	1920-22	24				01	6849	4	
3503D	St. gear spider	1920-22	2				50	902C	1	
3503E	St. gear spider and rim	1909-22	2				1 25 MH	995A2	1	
3504	St. gear cover	1909-22	2				35	5039	1	
3505	St. gear cover screw	1909-22	24				02	910	1	
3506	St. gear cover bushing	1909-22	6				15	914	1	
3506B	St. gr. driv. pinion washer	1909-22	10				02	5026	1	
3507	St. gr. int. gear case and bushing	1909-22	2				1 00	5036	1	
3509	St. gear quadrant	1909-22	2				15	906B	1	
3510	St. gear quadrant rivet	1909-22	24		50		01	5041	2	
3511	St. gear wheel nut	1909-22	12		7 50		10	913	1	
3512C	St. gear tubing assy.	1912-22	2				4 00	5016	1	
3513C	St. tubing flange screw	1913-22	20	25	1 00		03	5018	3	
3514	St. tub. flange screw nut	1913-22	100		75	6 00	02	926	1	
3516C	St. gear post	1912-22	2				1 75	5043	1	
3516D	St. gear post	1922					1 75	5043B	1	
3517	St. gear pinion	1909-22	10		10 00		15	916	3	
3518	St. gear pinion pin—short	1909-22	10				03	917	2	
3518B	St. gear pinion pin—long	1921-22	6				03	918	1	
3519	St. gear drive pinion	1909-22	3				30	911	1	
3520	St. gear drive pinion key	1909-22	10		1 50		03	909	1	
3523	St. gear post castle nut	1909-22	Order 2551B							
3524E	Throttle rod	1912-22	2				40	5038	1	
3525E	Lead rod	1912-22	2				40	5037	1	
3527	Lead & throttle rod spring	1909-22	10				03	935	2	
3528	Lead & throttle rod collar	1909-22	10		1 00		02	936	2	
3529	Lead & throttle rod pin	1909-22	10		50		01	937	5	
3530	Lead rod lever	1909-22	6		7 50		10	946	1	
3531	Throttle rod lever	1909-22	6		7 50		10	947	1	
3532	Lead & throttle rod guide	1909-22	6		3 00		05	938	1	
3534B	Commutator pull rod	1912-22	6				10	2082	1	
3535	Carburetor pull rod	1909-22	6		7 50		10	1329	1	
3536	Ball & socket joint	1909-22	20	1 70	7 50		10	1326	1	
3537	Ball & socket joint nut	1909-22	20	25	1 00		02	1327	1	
3539B	St. brkt. with bushing	1911-22	3				75	996	1	
3539C	St. brkt. with bushing—Truck	1918-22	2				75	TT996	1	
3540	Brkt. bolt and nut—long	1909-22	Order 3073 and 2515							
3541	Brkt. bolt and nut—short	1911-22	Order 3074 and 2515							
3544	St. brkt. felt washer	1909-22	12				03	943	1	
3545	St. brkt. bushing	1909-22	4				20	944-5027	1	
3546	St. brkt. block	1909-22	6				10	945	1	
3546B	St. brkt. block—Truck	1918-22					05	TT945	1	
3547	St. gear ball arm	1909-22	6				50	929B	1	
3548	St. gear ball arm key	1909-22	20	50	2 00		05	930	1	
3549	St. brkt. dust cap—Truck	1918-22	10				05	TT5044	1	
BODY PARTS										
3601B	Body brkt. on body	1910-22	10				10	1624	6	
3601C	Body brkt.—front—R	1921-22	10				20	7267B	1	
3601D	Body brkt.—front—L	1921-22	10				20	7268B	1	
3602D	Body brkt. con. bolt	1909-22	30				03	5653	6	
3602E	Body brkt. con. bolt	1916-22	30				03	2431	6	
3602F	Body brkt. con. bolt nut	1916-22	Order 2719							
3624E	Front floor rubber mat.	1915-22	4				1 00	7299	1	
3626B	Floor board (first)	1915-22	2				35	7296	1	

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Wholesale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
BODY PARTS—Continued										
3626C.	Floor board with plate (first)	1915-22	2				\$ 0 45	4200		
3627B.	Floor board (second)	1915-22	2				35	7297		1
3627C.	Floor board with plate (second)	1915-22	2				45	4201		
3628	Floor board (third)	1915-22	2				60	1404B		1
3628B.	Floor board with plate (third)	1915-22	2				65	7104		
3630	Floor board forward plate for pedals	1909-22	2				10	1400C		1
3632	Floor board rear plate for pedals	1909-22	2				10	1095C		1
3633	Floor board plate for side lever	1909-22	2				05	1094B		1
3634D.	Dash	1913-14	2				3 00	5336		1
3634E.	Dash	1915-16	2				3 50	7462		1
3634G.	Dash	1917-22	2				3 00	8754		1
3638B.	Dash shield	1917-22	4				10	5432B		1
3639	Dash weatherstrip—side	1917-22	6				05	8747		2
3639B.	Dash weatherstrip—top	1917-22	6				20	8752		1
3640C.	Dash brkt.—left	1917-22	6		\$10 00		15	8722		1
3641C.	Dash brkt.—right	1917-22	6		10 00		15	8721		1
3642B.	Dash brkt. to dash bolt.	1917-22	20	\$0 50	2 00		03	8740		4
3642C.	Dash brkt. to dash b. nut.	1917-22	30				03	2427		2
3645	Dash brkt. to dash bolt.	1909-16	30							
3645B.	Dash brkt. to dash b. nut.	1909-16	30							
3653B.	Dash to body brkt. bolt.	1915-22	20	25	1 00		03	4248		2
3653C.	Dash to body brkt. bolt nut.	1915-22	12							
3654	Dash to body gasket	1918-22	12		3 50		05	8769		1
3660C.	Lamp & license brkt. assy.	1915-22	4				50	7506		1
3660D.	Lamp & license brkt. assy.	1915-22	4				40	7505		1
3662	Front license brkt.—R	1920	4				10	287		1
3663	Front license brkt.—L	1920	4				10	288		1
3664	Front license bracket	1921-22	4				15	493		1
3667E.	Front seat cushion	1909-21	2				6 00	MH 8076		1
3667F.	Front seat cushion	1921-22	2				6 00	MH 8076B		1
3670D.	Rear seat cushion	1909-21	2				6 50	MH 7032		1
3670E.	Rear seat cushion	1921-22	2				6 50	MH 7032B		1
3676B.	Rear floor mat	1911-21	2				1 60	1606B		1
3676C.	Rear floor mat	1921-22	2				1 00	1606C		1
SPRINGS										
3800	Front spring	1909-22	4				2 50	MH 332		1
3801	First leaf (main leaf)	1909-22	6				80	2943		1
3802B.	Second leaf	1909-22	6				50	2935		1
3803	Third leaf	1909-16	2				40	356		1
3803B.	Third leaf	1916-22	6				40	2936		1
3804	Fourth leaf	1909-16	2				30	357		1
3804B.	Fourth leaf	1916-22	6				30	2937		1
3805	Fifth leaf	1909-16	2				25	358		1
3805B.	Fifth leaf	1916-22	6				25	2938		1
3806	Sixth leaf	1909-16	2				20	359		1
3806B.	Sixth leaf	1916-22	6				20	2939		1
3807	Seventh leaf	1909-16	2				15	360		1
3807B.	Seventh leaf	1916-22	6				15	2947		1
3808	Front spring clip	1909-22	10				20	325C		2
3809	Front spring clip nut	1909-22	10							
3810	Front spring clip bar	1921-22	6				25	342		1
3811	Front spring tie bolt	1909-22	20	35	1 50		04	1362		1
3811B.	Front spring tie bolt nut	1909-22	20	25	1 00		02	1363		1
3813	Front spring hanger	1909-22	12		12 00		15	246B		4
3815	Spring hanger nut	1909-22	12							
3817	Spring hanger oiler	1909-16	4							
3818	Front spring perch—right	1909-19	4				60	MH 274		1
3818B.	Front spring perch—right	1919-22	6				60	MH 274B		1
3819	Front spring perch—left	1909-19	4				60	MH 275		1
3819B.	Front spring perch—left	1919-22	6				60	MH 275B		1
3820	Front spring perch bush	1909-22	20	50	2 00		05	230		4
3821	Front spring perch nut	1909-21	12							
3821B.	Front spring perch nut	1921-22	12				05	240		1
3823	Front spring leather	1909-22	20	1 50	6 00		10	262		1
3824	REAR SPRING	1909-22	3				7 00	MH 333		1
3825	First leaf (main leaf)	1909-19	2				1 50	361		1
3825B.	First leaf (main leaf)	1918-22	3				1 50	355		1
3826	Second leaf	1909-19	2				1 25	362		1
3826B	Second leaf	1918-22	3				1 25	362B		1
3827	Third leaf	1909-19	2				1 10	363		1
3827B.	Third leaf	1918-22	3				1 10	363B		1
3828	Fourth leaf	1909-19	2				95	364		1
3828B.	Fourth leaf	1918-22	3				95	364B		1
3829	Fifth leaf	1909-19	2				80	365		1
3829B.	Fifth leaf	1918-22	4				80	365B		1

††When used on 1911-16 cars redrill frame.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20	Lots of 100	Lots of 1000				
SPRINGS—Continued										
3830	Sixth leaf	1909-19	2				\$ 0	65	366	1
3830B	Sixth leaf	1918-22	4					65	366B	1
3831	Seventh leaf	1909-19	2					55	367	1
3831B	Seventh leaf	1918-22	4					55	367B	1
3832B	Eighth leaf	1909-22	4					45	368B	1
3833	Rear spring clip	1909-22	10					20	326	2
3834	Rear spring clip nut	1909-22	10							
3835	Rear spring clip bar	1909-22	10					10	329	2
3837	Rear spring tie bolt	1909-22	20	\$ 35	\$ 1 50			04	1352	1
3837B	Rear spring tie bolt nut	1909-22	20	25	1 00			02	1353	1
3840	Rear spring hanger	1909-22	10		12 00			15	9 1/2 B	4
3842	Rear spring leather pad	1909-22	10					10	94	1
3843	Rear spring perch	1909-22	6					40	MH 2804	2
3844	Rear spring perch bush	1909-22	20	70	3 00			05	172	4
3845	Rear spring perch nut	1909-22	20		4 00			05	174	2
3846	Spring perch oiler	1917-22	20	70	3 00			05	2944	4
3847	Front spr'g clamp assembly with bolt and nut	1909-16	20	1 50	6 00			10	374	2
3847B	Front spr'g clamp assembly with bolt and nut	1916-22	20	1 50	6 00			10	2940	2
3848	Rear spr'g clamp assembly with bolt and nut	1909-17	20	1 50	6 00			10	376	2
3848B	Rear spr'g clamp assembly with bolt and nut	1918-22	20	1 50	6 00			10	378	2
REAR SPRING—60 INCH TREAD										
3850	Rear spring	1909-16	2					9 00	MH 1704	1
3851	Rear spring clip	1909-16	2					29	1737	2
3852	Rear spring tie bolt	1909-16	2					10	1738	1
3852B	Rear spring tie bolt nut	1909-16	2							
3853	First leaf (main leaf)	1909-16	2					1 80	1739	1
3854	Second leaf	1909-16	2					1 60	1740	1
3855	Third leaf	1909-16	2					1 40	1741	1
3856	Fourth leaf	1909-16	2					1 20	1742	1
3857	Fifth leaf	1909-16	2					1 00	1743	1
3858	Sixth leaf	1909-16	2					90	1744	1
3859	Seventh leaf	1909-16	2					75	1745	1
3860	Eighth leaf	1909-16	2					60	1746	1
STARTING CRANK										
3900	Starting crank only	1909-22	2					50	519B	1
3901	Starting crank handle	1909-22	5					20	520	1
3902	Starting crank handle bolt	1909-22	20	1 20	5 00			10	521	1
3903	Starting crank sleeve	1909-22	6		6 00			10	523	1
3905	Starting crank ratchet pin	1909-22	20	50	2 00			05	4491	1
3906	Starting crank ratchet	1909-22	6					20	528B	1
3908	Starting crank spring	1909-22	20	40	1 75			05	626	1
3909	Starting crank handle spring	1915-22	20		1 50			03	5911	1
RADIATOR—THERMO SYPHON										
3925	Radiator	1909-16	2					17 00	MH 1100C	1
3925B	Radiator	1917-22	2					17 00	MH 8700B	1
3925C	Radiator less shell	1917-22	2					15 75	MH 8736B	1
3926	Radiator cap	1909-22	10		12 00			15	MH 8714	1
3928	Radiator pad	1909-19	10					05	1105	2
3929	Radiator stud	1909-19	10					05	1162	2
3929B	Radiator stud	1919-22	20		4 00			05	1162B	2
3929C	Radiator stud nut	1909-22	20		2 00			03	1154	2
3930	Radiator stud spring	1909-22	20							
3931 1/2	Radiator stud washer nut	1909-22	20		2 00			03	1161	2
3932	Radiator rod	1909-22	6					15	MH 1111B	1
3934	Radiator rod nut	1909-22	6							
3939	Outlet connection pipe	1909-22	6					35	1121	1
3940	Outlet connection cock	1909-22	6							
3944	Outlet connection hose	1909-22	20	1 80	8 00			10	507B	2
3945	Outlet con. hose clip	1909-22	20	80	3 50			05	554B	4
3947B	Radiator shell	1917-22	2					1 25	MH 8737B	1
3975	Rad. stud spring upper thimble	1919-22	20					02	1115	1
3976	Rad. stud spring lower thimble	1919-22	20					03	1114	1
RADIATOR FAN										
3960	Fan and pulley assembly	1909-20	4					1 25	MH 619	1
3960B	Fan and bracket assy	1920-22	4					1 75	MH 8759B	1
3961	Fan blade	1909-20	6					10	611	4
3961B	Fan blade rivets	1909-20	1000			\$ 1 50 doz.		05	1566	16
3961C	Fan blade assembly	1920-22	4					25	620	1
3962	Driven fan pulley	1909-20	4					80	618	1
3962B	Dr. fan pulley with bush	1920-22	4					70	618B	1
3963	Fan drive pulley	1909-20	6		25 00			30	602	1
3963B	Fan drive pulley	1920-22	4					30	602B	1
3964	Fan belt—23" fabric	1909-16	6					30	609	1
3964C	Fan belt—26" fabric	1917-20	12					30	609B	1

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Wholesale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
RADIATOR FAN—Continued										
3964D.	Fan belt—27" fabric	1920-22	12		\$ 35 00		\$0 40	609C1		1
3964E.	Fan belt—27" rubber	1920-22	20		35 00		40	609C2		1
3966	Fan shaft	1909-20	10				20	606		1
3966B.	Fan shaft	1920-22	10		15 00		25	606B		1
3967	Fan bracket	1909-16	2				40	604		1
3967B.	Fan bracket	1917-22	4				30	604B		1
3968	Fan bracket bolt	1909-22	20	\$2 70	12 00		15	605		1
3970	Fan grease cup	1909-22	12		8 00		10	601		1
3973.	Fan adjusting screw	1909-22	20	30	1 25		03	645		1
3973B.	Fan adjusting screw nut	1909-22	Order 3066B							
3974	Fan driven pulley bush	1917-20	4				15	8757		1
3974B.	Fan driven pulley bush	1920-22	6				15	8757B		2
3980	Fan pulley plug	1920-22	20		2 00		03	633		1
3981	Fan pulley gasket	1920-22	20		1 50		02	634		1
3982	Fan shaft cap	1920-22	20		1 00		02	635		1
3983	Fan shaft felt washer	1920-22	20		1 00		02	637		1
3984	Fan blade screw	1920-22	20		75		01	652		4
3985	Fan blade screw washer	1920-22	Order 3261C							
3986	Fan shaft nut	1920-22	Order 2719							
MUFFLER										
4025	Muffler assembly	1909-20	4				2 00	MH	1200B	1
4025B.	Muffler assembly	1921-22	2				3 00	MH	1200C	1
4026B.	Muffler head—front	1917-20	2				45		1202C	1
4026C.	Muffler head—front	1921-22	2				20		1202D	1
4027	Muffler shell—outer	1909-22	6				25		1203	1
4028	Muffler shell—middle	1909-22	6				20		1204	1
4029	Muffler shell—inner	1909-20	6				15		1205	1
4030	Muffler rod	1909-17	6				10		1206	3
4030B.	Muffler rod	1917-20	6				10		1206B	1
4031	Muffler rod nut	1909-20	Order 2503F							
4032	Muffler head retainer	1921-22	10				02		1210	1
4033	Muffler head retainer bolt and nut	1921-22	Order 4819B and 3514							
4035	Muffler head bolt washer	1921-22	20				01		5508	1
4037B.	Long exhaust pipe	1909-20	3				1 75		1214	1
4037C.	Long exhaust pipe	1920-22	2				2 00	MH	1214B	1
4040B.	Muffler head—rear	1917-21	2				45		1201D	1
4040C.	Muffler head—rear	1921-22	2				20		1201E	1
4041	Muffler head to frame bolt and nut	1917-20	Order 3362 and 3066B							
4041B.	Muffler head to frame bolt and nut	1921-22	Order 3074 and 2515							
HOOD										
4050	Hood	1909-16	2				5 00		1300	1
4050B.	Hood	1917-22	2				5 00	MH	8726	1
4051	Hood handle	1909-22	6				05		1314	2
4052	Hood clip	1909-16	6				10		1310	4
4052B.	Hood clip	1917-22	6				05		8731	4
4053	Hood clip spring	1909-16	20				02		1311	4
4053B.	Hood clip spring	1917-22	20	30	1 25		02		8734	4
4056	Hood board—left	1909-16	6				25		1339	1
4056B.	Hood board—left	1917-22	6				20		8742	1
4057	Hood board—right	1909-16	6				25		1340	1
4057B.	Hood board—right	1917-22	6				20		8741	1
4060B.	Hood support on dash	1915-16	6				1 50		7464	1
4060C.	Hood pad (on dash)	1917-22	6		6 00		08	MH	8711	2
4060D.	Hood pad (on rad. shell)	1917-22	6		12 00		15	MH	8710	1
4061B.	Hood clasp (on dash)	1917-22	6		2 50		05		8720	1
4061C.	Hood clasp (on dash) screw	1917-22	20				02		8763	2
4061D.	Hood clasp (on dash)	1920-22	6		2 50		05		8720B	1
4073	Hood block support— front right	1917-22	12				05		8743	1
4074	Hood block support— front left	1917-22	12				05		8744	1
4075	Hood block support— rear right	1917-22	12				05		8745	1
4076	Hood block support— rear left	1917-22	12				05		8746	1
FORD CARBURETOR (MODEL "G")										
4451A.	Float with lever	1914-21	6				50		6333	1
4452A.	Spray needle assembly	1914-21	6				20		6335	1
4453A.	Gasoline inlet needle	1914-21	6				20		6324	1
6041	Mix chamber	1914-20	4				2 50		6340A	1
6042	Mix chamber top	1912-14-20	4				70		4801	1
6043	Mix chamber top screw	1912-20	10				02		4808	1
6044	Mix chamber top gasket	1914-20	10				02		6317	1
6044B.	Mix chamber bottom gasket	1912-20	10				03		6367A	1
6045	Mix chamber nut	1912-20	6				10		4810	1
6046	Float chamber & bush	1914-20	4				50		6318A	1
6047	Float lever pin	1914-20	10				03		6320A	1
6048	Float valve seat	1914-20	6				10		6321A	1
6049	Float valve seat gasket	1914-19	10				01		6322A	1

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
FORD CARBURETOR (MODEL "G")—Continued										
6051	Spray needle clamp nut	1912-20	6				\$ 0 05		4812A	
6052	Spray nozzle	1914-20	6				30		6341A	
6053	Spray nozzle gasket	1912-14-20	10				01		4820A	
6055	Gas inlet elbow	1913-20	6				10		4859	
6057	Low speed tube with nut	1915-20	4				20		6360	
6058	Low speed tube retaining screw	1912-14-20	6				05		4814	
6060	Low speed boss screw	1912-14-20	10				03		4816	
6061	Strangling tube	1912-14-20	6				15		4817	
6062	Strangling tube retainer	1912-14-20	10				02		4818	
6064	Throttle lever stop screw	1911-21	10				02		4520	
6065	Throttle lever clamp screw	1911-19	10				02		4521	
6068	Throttle plate	1912-14-20	6				10		4517A	
6070	Throttle lever	1912-14-20	6				30		4836B	
6070B	Throttle lever—over-size	1912-14-20	6				30		4836	
6071	Throttle lever adj lock nut	1911-20	10				02		4528	
6074	Aux. throttle plate	1915-20	10				03		6337	
6076	Aux. throttle lever spring	1914-20	10				02		6342	
4494	Aux. throttle lever spring	1910-14	6				05		3128	
6077	Aux. throttle lever assy.	1914-21	6				15		6327	
4463	Float lever holding screw nut	1912-19	10				02		4805	
4464	Float lever holding screw	1913-19	10				03		4853	
6081A	Drain valve plug assy.									
Parts for 1909-13 Carburetors supplied by Holley Kerosene Carburetor Co., Detroit, Mich.										

Order T-6216

KINGSTON CARBURETOR

6101A	Carburetor float assb.	1917-21	6				75		6369	1
6101	Float with lever	1915-16	6				75		6351	1
6102	Throttle lever	1913-20	6				30		4873A	
6103A	Constant air supply lever	1913-20	6				30		6382A	
6104	Gas valve cap	1910-16	6				15		3005	
6105A	Air valve cap	1915-16	6				30		6357	
6105B	Air valve cap	1917-20	6				30		8817	
6106	Float chamber	1915-16	2				2 25		6350	
6106A	Float chamber	1917-20	4				50		6370A	
6107	Mix chamber	1915-16	2				2 75		6352	
6107A	Mix chamber	1917-20	2				2 50		6371A	
6108	Mix chamber gasket	1913-16	6				15		4872	
6108A	Mix chamber gasket	1917-20	10				03		6374	
6109	Throttle gate					Use 6068				
6110	Constant air supply gate	1913-14	6				05		4571B	
6110A	Constant air supply gate	1915-20	6				10		6363A	
6111	Mix chamber nut	1913-20	6				10		4883A	
6114	Gas valve retainer nut	1910-16	6				10		3027	
6115	Spray needle assembly	1910-21	6				40		3010	1
6118	Float to lever and throttle gate screw	1910-16	10				02		3014	
6118A	Float to lever screw	1917-20	10				03		6379	
6120	Throttle lever adj. screw	1913-20	10				03		4875	
6121	Throttle lever clamp screw	1910-20	10				03		3017	
6122	Gas valve operating lever shaft	1913-16	6				15		3004B	
6123	Air valve shaft	1915-20	6				20		6381A	
6124A	Spray needle sleeve					Order 6165				
6125	Constant air supply spring	1913-20	10				03		4570B	
6126	Float valve seat	1915-16	6				15		6359	
6126A	Float valve seat	1917-20	6				20		6380	
6127	Gas valve	1910-16	6				30		3002	
6127A	Gasoline valve	1917-21	6				35		6377	1
6128	Air valve	1915-20	6				30		6355A	
6129	Float valve seat gasket	1915-16	10				03		6361	
6129A	Float valve seat gasket	1917-20	10				03		6373	

Parts for 1909-16 Carburetors supplied by Bryne Kingston Co., Kokomo, Ind.

KINGSTON CARBURETOR (MODEL "L-4")

6150	Carburetor	1921-22	4	\$100 00			6 00		553A1	1
6151	Drain valve body	1921-22	6				15		6383B	
6152	Float chamber	1921-22	4				50		6370B	
6153	Mixing chamber	1921-22	4				2 50		6371B	
6154	Carb. inlet elbow					Order 6055				
6155	Float with lever	1921-22	6				50		6369B	1
6156	Float chamber gasket	1921-22	6				05		6391B	
6157	Mix. chamber gasket					Order 6108A				
6158	Float valve seat gasket					Order 6129A				
6159	Constant air supply lever assy.	1921-22	6				30		6382B	
6160	Throttle lever assy.	1921-22	6				30		4873B	
6161	Spray needle assembly	1921-22				Order 6115				
6162	Drain valve body clamp nut	1921-22	6				05		6395	
6163	Mix. chamber nut	1921-22	6				10		4883B	

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Wholesale Quan.	LIST PRICE			Each	Tax Status	Fac. No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
KINGSTON CARBURETOR (MODEL "L-4")—Continued										
6164	Constant air supply spring			Order 6125						
6165	Spray needle sleeve	1915-21	6				\$0 20		6368	
6166	Float lever pin	1915-21	10				02		6378	
6167	Constant air supply plate	1921-22	6				10		6363B	
6168	Throttle plate	1921-22	6				10		3012B	
6169	Drain valve plug assy.	1915-21	6				10		6385	
6170	Throttle lever adj. screw			Order 6120						
6171	Air valve stop assy.	1921-22	6				10		6397	
6172	Float valve seat	1921-22	6				20		6380B	
6173	Air valve shaft assy.	1921-22	6				20		6381B	
6174	Air valve	1921-22	6				30		6355B	
6175	Gasoline valve	1921-22	6				35		6377B	1

FORD CARBURETOR (MODEL "F")

6200B	Carburetor	1920-22	4	\$100 00			6 00	MH	553A4	
6201	Float with lever	1920-22	6				50		6333B	1
6202B	Float chamber and bushing assy.	1920-22	6				50		6318B	
6203	Float chamber gasket	1920-22	10				03		555B	
6204	Spray nozzle gasket	1920-22	10				02		4820B	
6205	Mixer chamber gasket	1920-22	10				03		6367B	
6206	Throttle lever			Order 6070						
6206B	Aux. throttle lever			Order 6077						
6207	Mixer chamber ("NH")	1920-22	4				2 50		6340B	
6207B	Mixer chamber ("F")	1920-22	4				2 50		6340C	
6208	Adj. needle clamp nut	1920-22	6				05		4812B	
6209	Throttle plate	1920-22	6				10		4517B	
6210	Float lever pin	1920-22	10				03		6320B	
6211	Float chamber screw	1920-22	6				15		6284	
6212	Float valve seat	1920-22	6				10		6321B	
6213	Spray needle assembly	1920-22	6				20		6335B	1
6214B	Spray nozzle	1920-22	6				30		6341C	
6215	Air passage vent plug	1920-22	6				05		6273	
6216	Drain valve plug assy.	1916-22	6				10		6329	
6217	Throttle lever stop screw			Order 6064						
6218	Aux. throttle lever spring			Order 6076						
6219	Float valve seat gasket	1920-22	10				01		6322C	
6220	Gasoline inlet needle	1920-22		Order 4453A						

CARBURETOR ATTACHMENTS

4127A	Carburetor adj rod brkt	1909-22	6				05		1357	1
4129A	Carb. adjusting rod	1909-22	6				20		7920	1
4130	Carb. flange bolt	1909-22		Order 3072						
4130B	Carb. flange bolt nut	1909-22		Order 3066B						
4134	Carb. flange gasket	1909-22	20	50	\$2 00		05	MH	1380B	1
4431	Carb. priming rod	1909-22	12				05		2000	1
4582	Carb. hot air pipe	1912-22	6				20		686	1
4583	Priming bell crank	1919-22	6				15		7691	1
4585	Priming rod plate—Coupe	1919-20	6				15		7664	1
4586	Priming rod plate—Sedan	1919-20	6				15		7665	1
4587B	Priming rod—sedan	1919-22	6				15		6628	1
4588B	Priming rod (Cp., T. C. and Rbt.)	1919-22	6				15		6627	1
4589	Priming rod	1919-22	6				05		8797B	1

FENDERS—56 INCH TREAD

4800B	Front fender—right	1917-22	4				4 00	MH	7976	1
4801B	Front fender—left	1917-22	4				4 00	MH	7977	1
4802F	Rear fender—right	1917-22	4				3 50	MH	8850	1
4803F	Rear fender—left	1917-22	4				3 50	MH	8851	1
4804D	Rear fender iron—R. & L. T. C.	1913-22	6				15		5405	2
4804E	Rear fender iron—right—Cp. & Rbt.	1913-22	2				50		5563	1
4804F	Rear fender iron—left—Cp. & Rbt.	1913-22	2				50		5390	1
4804G	Rear fender iron—R. or L.—Sedan	1916-17	2				25		8154A	2
4804K	Fender iron—R. or L.—Sedan	1918-22	2				15		8154B	2
4804L	Rear fender iron—T. C.	1921-22	2				10		7395	2
4805B	Rear fender iron bolt	1915-22	20	35	1 50		03		7171	6
4805C	Rear fender iron bolt nut	1915-22	100		1 00	\$ 6 00	02		341	
4806B	Fender eye bolt	1909-22	20				05		1942	4
4806C	Fender eye bolt washer	1909-22	20				01		1943	4
4806D	Fender eye bolt nut	1909-22		Order 2825B						
4808	Front fender iron bolt (side)	1910-22	20		2 50	15 00	03		1323	2
4808B	Front fender iron bolt (bottom)	1910-22	20		2 50	15 00	03		347	2
4808D	Front fender iron bolt nut	1910-22		Order 2515						
4808C	Front fender apron to frame bolt	1915-22	20	30	1 25	8 00	03		4088	4

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Each	Tax Status	Fac. No.	No. Req. per Car
			Minimum Wholesale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot				
FENDERS—56 INCH TREAD—Continued										
4808E	Front fender apron to frame bolt nut.	1915-22	Order	3088E						
4809	Front fender iron—R or L	1909-22	2				\$0 60	343	2	
RUNNING BOARDS AND SHIELDS—56 INCH TREAD										
4812	Running board—R. or L.	1909-22	2				1 60	MH	5418	2
4814C	R. B. shield—R.	1917-22	2				2 40	MH	7986	1
4815C	R. B. shield—L.	1917-22	2				2 40	MH	7987	1
4816	R. B. truss rod—front with nuts.	1909-21	4				50	MH	5804	1
4817	R. B. truss rod—rear with nuts.	1909-21	4				50	MH	5805	1
4817B	Truss rod nut.	1909-21	100		\$2 00		03		339	4
4818	R. B. bracket.	1909-22	4				1 00		336	4
4818B	R. B. bracket assy.	1909-22	4				1 30		2926	2
4819	R. B. to rear fender bolt.	1909-20	20	\$0 30	1 25		03		1344B	4
4819B	R. B. to rear fender bolt.	1921-22	20	35	1 50		03		8161	4
4819C	R. B. to rear fender nut.	1909-22	Order	3088E						
4819D	R. B. to rear fender nut.	1909-22	Order	3514						
4820	R. B. to front fender bolt and nut.	1909-20	Order	4808C and 3088E						
4820C	R. B. to front fender bolt.	1921-22	Order	4805B						
RUNNING BOARD—TRUCK										
4830	Running board—R. or L.	1918-22	2				60	MH	TT5418	2
4831	R. B. bracket.	1918-22	2				40		TT2926	4
4832	R. B. bracket brace.	1918-22	2				15		TT2927	2
4833	R. B. bracket rear brace.	1918-22	2				30		TT2929	1
FORD SPARK COIL										
5000	Coil (includes switch)	1909-22	2				9 75	MH	1383	1
5001	Coil (less switch)	1909-22	2				9 00		1383B	1
5002	Coil box with cover.	1914-22	2				2 75	MH	5858	1
5003	Coil box with cover.	1919-22	2				2 00	MH	5858B	1
5004	Coil box cover.	1915-22	2				30		7910	1
5005	Switch cover.	1914-17	4				10		5835	1
5005B	Switch cover.	1918-22	4				10		5835B	1
5006	Switch plug.	1914-22	20	50	2 00		05		5815	1
5007	Coil unit.	1914-22	6	30 00			1 75	MH	5845	4
5008	Vibrator.	1914-22	20	1 30	6 00	45 00	10		6797	4
5009	Vibrator bridge.	1914-22	20	1 80	8 00	60 00	10		6702	4
SWITCH										
5010	Switch assembly (on coil).	1914-22	6				75		5873	1
5012	Switch (ignition) (on instrument board).	1919-22	6				1 30		7675E	1
5013B	Key (switch)—give serial number.	1919-22	6	1 20			10		5815C	1
5014	Starting switch (on floor board).	1919-22	6				75		8792	1
5014B	Starting switch bracket bolt—long.	1920-22	10				03		8760	1
5014C	Starting switch brkt assy.	1922	4				30		8696	1
5014D	Starting switch cover and plunger assy.	1922	4				45		8697	1
5014E	Starting switch cover and plunger assy.—Sedan.	1922	2				45		8698	1
5015	Extension (starting switch plunger)	1919-22	6				10		8793	1
AMMETER										
5016	Ammeter.	1919-22	6				1 00		7680	1
5017	Ammeter lens & rim.	1919-22	6				20		8105	1
5017B	Ammeter lens.	1919-22	6				05		8121	1
BENDIX DRIVE										
5018	Bendix.	1919-22	4				5 00		1883	1
5019	Head (Bendix).	1919-22	4				50		2007	1
5020	Key (Bendix).	1919-22	20		1 50		02		1751	1
5021	Shaft & gear (Bendix).	1919-22	6				4 50		2026	1
5022	Spring (Bendix).	1919-22	6				50		2006	1
5023	Screw (Bendix shaft spring)	1919-22	20		7 50		10		1983	1
5024	Screw (Bendix head spring)	1919-22	100		3 00		05		1781	1
5025	Washer (Bendix spring screw lock)	1919-22	20				03		1782	2
WIRING										
5026	Spark plug wire 14½"	1909-22	20	1 70	7 50		10	MH	1365	1
5027	Spark plug wire (also magneto to coil) 10½"	1909-22	20	1 60	7 00		10	MH	1366	1
5028	Spark plug wire, 7"	1909-22	20	1 40	6 00		10	MH	1376	2
5030	Commutator wire.	1909-22	10				60	MH	7502	1
5031	Com. wire (starter type)	1919-22	10				90	MH	7502B	1
5033	Com. wire loom support	1909-22	10				03		1390	2

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE				Tax Status	Fac. No.	No. Req. per Car
			Minimum Wholesale Quan.	Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot			
WIRING—Continued									
5033B	Commutator wire terminal retainer	1921-22	10				\$ 0 02	2124	2
5033C	Wire on dash clip	1919-22	20				02	7688	7
5034	Wire (ammeter to cut-out) Sedan 33"	1919	6				15	MH 7683	1
5035	Wire (ammeter to cut-out) Sedan 49"	1919-22	6				20	MH 7683B	1
5036	Wire (ammeter to cut-out) Coupe 23"	1919	6				15	MH 7684	1
5037	Wire (ammeter to cut-out) Coupe 41"	1919-22	6				20	MH 7684B	1
5038	Wire (ammeter to ignition switch)	1919-22	6				10	MH 7681	1
5039	Wire (gen. to cut-out)	1919	6				15	MH 7687	1
5040	Wire (terminal block to switch)	1919-22	6				05	MH 8894B	1
5041	Wire (lighting)	1919-22	6				80	MH 7682B	1
5041B	Lighting wire—truck	1921-22	6				1 00	MH,TT7682	1
5042	Wire (switch) Sedan	1919-22	6				60	MH 7685B	1
5043	Wire (switch) Coupe	1919-22	6				60	MH 7686B	1
5044	Block (terminal)	1919-22	6				05	MH 1950	1
5045	Screw (terminal block to dash)	1919-22	12				01	2073	2
5046	Cable (battery to switch)—28 1/4"	1919-22	4				80	MH 1889B	1
5046C	Battery to switch cable—truck	1921-22	2				80	MH,TT1889	1
5047	Cable (battery to switch)—34"	1920	4				85	MH 1889C	1
5047B	Battery to switch cable support—truck	1920-22	2				10	2116	1
5047C	Battery to switch cable support	1920-22	2				10	2112	1
5047D	Battery to switch cable support bush	1920-22	2				05	2113	1
5047E	Battery to switch cable sleeve	1921-22	2				05	2120	1
5048	Cable (ground) 20"	1919	4				70	MH 1890	1
5049	Cable (ground) 9 1/4"	1919-22	4				50	MH 1890B	1
5050	Cable (ground) 11 1/2"	1920	4				60	MH 1890C	1
5051	Cable (switch to motor)	1919-22	4				65	MH 1891	1
5051B	Switch to motor cable sleeve	1921-22	2				30	2119	1
5052	Bolt (battery cable terminal)	1919-22	10				04	1937	2
5052B	Nut (battery cable terminal bolt)	1919-22	10				03	1938	2
CUT-OUTS									
5054	Cut-out (electric)—on dash	1919	2				1 10	7677	1
5055	Cut-out (electric)	1919-22	12				1 10	7677B	1
STARTER PARTS									
5056	Gasket (motor mount'g)	1919-22	20	\$ 35	\$ 1 50		02	1768	
5057	Gasket (gen. head)	1919-22	20	25	1 00		02	1774	
5058	Screw (gen. mounting short)	1919-22	24		1 50		03	1755	
5059	Screw (Bendix cover)	1919-22	24		75		01	1765	
5060	Screw (term. blk. to wire)	1919-22	24		50		01	2015	
5061	Screw (ammeter to plate)	1919-22	24		50		01	5819	
5062	Screw (motor mounting)	1919-22	100		1 00		02	1760	
STARTING MOTOR AND PARTS									
5099	Motor (starting)	1919-22	2				16 00	MH 1877	
5100	Armature	1919-22	2				5 00	1940	
5101	Band (cover)	1919-22	4				10	1801C	
5102	Bracket (brush end)	1919-22	6				40	1868	
5103	Bracket assy. mounting	1919-22	4				1 60	2037	
5104	Brush	1919-22	12				30	1806	
5105	Bushing (shaft, rear)	1919-22	6				30	1759	
5106	Bushing (shaft, front)	1919-22	6				10	1789	
5107	Coil assembly (field)	1919-22	2				2 00	1871	
5108	Holder assem. (brush)	1919-22	6				60	1864B	
5109	Insulator (terminal, outer)	1919-22	20	50	2 00		03	1795	
5110	Insulator (terminal, inner)	1919-22	20	25	1 00		02	1794	
5112	Nut (terminal)	1919-22	20	40	1 75		03	1791	
5113	Screw (field)	1919-22	24				02	1788	
5114	Screw (brush end bracket to yoke)	1919-22	24				doz. 05	1808	
5115	Spring (brush tension)	1919-22	20	70	3 00		05	1809	
5116	Washer (terminal)	1919-22	24				02	1792	

†Also for generator.

†Armature may be exchanged with dealer at \$4.00

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Tax Each	Fac. Status No.	No. Req. per Car
				Lots of 20 per lot	Lots of 100 per lot	Lots of 1000 per lot			
STARTING MOTOR AND PARTS—Continued									
5117	Washer (terminal, inner, steel)	1919-22	24				\$ 0 02	1798	
5118	Yoke (motor) assembly	1919-22	2				5 00	1852	
GENERATOR AND PARTS									
5119	Generator	1919-22	2				16 00	MH	1879
5120	Armature (less bearings)	1919-22	6				5 00		1925
5121	Bearing (small)	1919-22	6				1 20		1838
5122	Bearing (large)	1919-22	6				1 45		1841
5123	Bolt (terminal)	1919-22	24				03		1836
5124	Bracket (brush end)	1919-22	6				30		1894
5125	Brush (large)	1919-22	24		\$16 00		20		1844
5126	Brush (small)	1919-22	24		15 00		20		1845
5127	Disc (large bearing)	1919-22	12				03		1847
5128	Felt (small bearing)	1919-22	12		1 50		03		2033
5130	Head	1919-22	4				50		2044
5131B	Holder (small brush)	1919-22	12		12 00		15		1821
5132B	Ring (brush holder)	1919-22	12				05		1996
5132C	Holder assem. (brush)	1919-22	6				60		1865
5132D	Holder assem. (brush) less small brush holder	1919-22	6				45		1920
5133	Insulator (terminal, outer)	1919-22	20	\$0 50	2 00		03		1827
5134	Nut (terminal)	1919-22	24				03		1818
5134B	Nut (brush holder stud)	1919-22	24				01		6754
5135	Oiler	1919-22	20	1 70	7 50		10		1837
5136	Pin (pinion to shaft)	1919-22	24				05	doz.	1750
5137	Pinion	1919-22	6				40		1752
5138	Retainer (small brg. felt)	1919-22	24				02		1832
5139	Spring (large brush)	1919-22	20	70	3 00		05		1967
5140	Spring (small brush)	1919-22	20	70	3 00		05		1988
5141	Stud (small brush holder)	1919-20	20				05		1823B
5141B	Stud (small brush holder)	1919-22	20	25	1 00		02		1823C
5142	Washer (terminal)	1919-22	100		1 00		02		1831
5142B	Washer (small brush holder stud)	1919-22	24				05	doz.	2058
5143	Winding assembly (field)	1919-22	2				1 50		1978
5144	Wire (brush to terminal)	1919-22	6				08		1851
5145	Yoke (gen.) assembly	1919-22	1				4 00		1887
BATTERY BRACKET AND PARTS									
5150	Bracket assembly	1919-22	2				90		8841
5151	Bolt (clamp)	1919-22	24				03		8846
5151B	Nut (clamp bolt)	1919-22	24				03		8846
5152	Clamp	1919-22	6				05		8844
5152B	Battery clamp—truck	1921-22	6				05		8844B
5153B	Battery support angle—truck	1921-22	2				10		TT8816
5154	Battery box support—truck	1921-22	6				20		TT8817
5155	Battery clamp support—R—truck	1921-22	2				05		TT8818
5156	Battery clamp support—L—truck	1921-22	2				05		TT8819
5158	Battery box—less cover	1921-22	2				50		7671
5159	Battery box cover assy	1921-22	2				25		5491
5160	Battery box cover door	1921-22	2				05		5393
BATTERY (FORD)									
5175	Battery	1919-22	4				22 00	MH	7670
5176	Battery case assy	1919-22	2				1 50		5434
5177	Cell connector	1919-22	6				15		5435
5178	Cell cover	1919-22	6				45		5436AR
5179	Terminal post gasket	1919-22	20				01		5437AR
5180	Rubber jar	1919-22	6				1 25		5438
5181	Terminal post nut	1919-22	20				04		5439AR
5182	Negative group assy	1919-22	6				2 25		5440AR
5183	Positive group assy	1919-22	6				2 25		5441AR
5184	Filler plug with gasket	1919-22	10				15		5444AR
5185	Plate separator	1919-22	100		4 00		05		5445
5186	Positive plate	1919-22	20				30		5427AR
5187	Negative plate	1919-22	20				30		5428AR
SPARK PLUGS									
5200	Spark plug (Bethlehem)	1909-22	20				60		1386A2
*5201	Spark plug "Ford" (Champion)	1909-22	20	9.00 net.	43.00 net.		60		1386A3
5202	Spark plug porcelain (Bethlehem)	1909-22	20				35		3761
**5203	Spark plug porcelain (Champion X)	1909-22	20	4.40 net.	21.00 net.		30		3760A
**5203B	Spark plug porcelain "Ford" (Champion)	1909-22	20	4.40 net.	21.00 net.		30		3760C

*Dealers' contract price .40 net each
 **Dealers' contract price .20 net each
 †Armature may be exchanged with dealer at \$4.00
 Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Minimum List Whole-sale Price Each Quan.	Tax Status	Fac. No.
REPAIR TOOLS				
1349	Hub cap wrench.....	6	\$0	20
1387	Adjustable wrench.....	6	50	1387
1902	Pliers.....	6	25	1903
1917	Double end wrench.....	6	20	1917
2335	Spark plug and cyl. head bolt wrench.....	6	50	5893
2336	Tool roll.....	6	30	1979
2337	Oil can.....	6	30	1384
2338	Tire pump.....	6	1	75
2340	Tire irons, each.....	6	15	4069
2343	Jack.....	6	1	50
3Z-619	Crank shaft bearing bolt wrench.....	6	50	
3Z-698	Cyl. water outlet con. screw brace wrench.....	6		
	Brake shoe support bolt brace wrench.....	6	40	
	D/S bearing housing screw brace wrench.....	6		
5Z-152	Rear axle housing bolt nut wrench.....	6	40	
5Z-153	Socket wrench for crank shaft bear. bolt nut.....	6	60	
5Z-154	Body bracket con. bolt R. & L. wrench.....	6	30	
5Z-155	3/8" L. socket wrench.....	6	45	
5Z-156	Crank shaft bearing bolt wrench.....	6	50	
5Z-157	Con. rod cap bolt nut L. wrench (Cyl. No. 4).....	6	40	
5Z-158	D/S housing stud nut wrench for 1 1/2" nut.....	6	50	
5Z-159	Connecting rod T wrench.....	6	55	
5Z-160	3/8" T socket wrench.....	6	75	
5Z-161	Body bracket connecting bolt T wrench, front and center.....	6	55	
5Z-162	Large cam gear lock nut wrench.....	6	55	
5Z-163	Generator third brush adjusting wrench.....	6	20	
5Z-165	Drive shaft pinion T wrench.....	6	65	
5Z-193	Spindle cone adjusting open end wrench.....	6	25	
5Z-195	3/8" open end wrench.....	6	25	
5Z-196	Rear axle entering wrench.....	6	30	
5Z-204	Exhaust pack nut open end wrench.....	6	1	00
5Z-206	Rear axle nut open end wrench.....	6	65	
5Z-209	Connecting rod clamp screw wrench.....	6	45	
5Z-210	Fly wheel cap screw wrench.....	6	75	
5Z-212	Body bracket connecting bolt holding open end wrench.....	6	25	
5Z-232	Spindle arm bushing driver.....	6	30	
5Z-249	Generator third brush adj. wrench—new style.....	6	20	
5Z-280	Valve grinder.....	6	75	
5Z-285	3/4" hex. brace wrench.....	6	75	
5Z-286	Rear axle nut and housing plug brace wrench.....	6	80	
5Z-287	Rear wheel puller assembly.....	4	1	25
5Z-289	1/2" brace socket wrench.....	6	75	
5Z-290	Piston ring squeezer.....	6	30	
5Z-313	Fixture for assembling roller bearing cups.....	8	00	
5Z-314	Transmission clutch disc drum puller.....	3	1	00
5Z-319	Valve spring lifter.....	6	30	
5Z-322	Tire iron (large).....	6	45	
5Z-323	Bendix shaft head puller.....	2	1	25
5Z-324	Trans. band ratchet wrench.....	6	50	
5Z-325	Con. rod cap bolt nut brace wrench with universal joint for No. 4 connecting rod.....	2	2	50
5Z-326	Small time gear and trans. driven gear puller.....	2	1	50
5Z-361	Large time gear puller.....	2	11	00
20Z-340	Valve seat reamer.....	2	2	00
20Z-340-1	Valve seat reamer cutter.....	2	1	25
21Z-356	Valve seat reamer handle.....	2	75	
REPAIR TOOLS—TRUCK				
5Z-288	Rear wheel puller assembly.....	2	1	50
3389X	Jack.....	2	3	00
COTTER PINS				
		Fac. No.		Fac. No.
1/8" x 1" cotter pins.....	421	3/8" x 1/2" cotter pins.....	66	
5/16" x 3/4" cotter pins.....	753	1/2" x 1/2" cotter pins.....	544	
3/8" x 1" cotter pins.....	82	5/8" x 3/4" cotter pins.....	88	
Price, per dozen.....			05	
Price, per gross.....			25	
Price, per thousand.....			75	

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum List Price		Tax Status
			Whole-sale Quan.	Lots of 20 per lot	
ELECTRIC HORN					
6432X	Electric horn complete		2		\$2 50
7915X	Electric horn terminal wire 9"		6		05. MH
7917BX	Electric horn to switch wire 35 3/8"		6		15. MH
8028X	Horn switch assembly		6		30. MH
ELECTRIC HEADLAMPS (STANDARD 1915-22)					
6511BX	Headlamp assembly—used with dimmer on magneto current (when used on magneto current without dimmer use T 6572X bulb)		2 pr.		7 00
6511CX	Headlamp—two bulb type		2 pr.		7 00
6511DX	Headlamp—with "Tu-Lite" frosted bulb		2 pr.		7 00
6511EX	Headlamp—with "Tu-Lite" clear bulb		2 pr.		7 00
6511HX	Headlamp assembly, 1922		2 pr.		7 00
6511KX	Headlamp assembly, 1922		2 pr.		7 00
6594X	Door assembly—used with 6511DX		6		55
6594BX	Door assembly—with green visor lens		6		65
6594HX	Door assy. with refracting lens, 1922		6		75
6589X	Switch assembly—with screws		6		35. MH
8650X	Headlamp and horn switch assembly		6		40. MH
8892X	Dimmer resistance coil with wires		2		70. MH
6572AX	Headlamp bulb—9 volt—18 c.p.—double contact—used with magneto without dimmer, 1915-18		20	\$40 00	50
6572BX	Headlamp bulb—6-8 volt—16 c. p.—double contact—used with dimmer T8892X without starter or with dimmer T7320X with starter and T6576X or T6576BX lens, 1918-20		20	40 00	50
6572CX	Headlamp bulb—6-8 volt—16 c. p.—single contact—used with storage battery and T6576X or T6576BX lens, 1918-20		20	40 00	50
6572DX	Headlamp bulb—7 volt—bright, 23 c. p., dim, 3 1/2 c. p.—double contact—double filament—frosted—used with T6576X lens, 1919-21		20		60
6572EX	Headlamp bulb—6-8 volt—bright, 18 c. p., dim, 2 3/4 c. p.—double contact—double filament—clear—used with T6576BX lens, 1921		20	45 00	50
6572HX	Headlamp bulb—6-8 volt—bright, 21 c. p., dim, 2 3/4 c. p.—double contact—double filament—used with T6576HX lens, 1922		20	45 00	50
6572KX	Headlamp bulb—6-8 volt—21 c. p.—double contact—used with dimmer T8892X without starter or dimmer T7320X with starter and T6576HX lens, 1922		20	45 00	50
6578X	Door lens gasket		10		05
6576X	Door lens—8 1/2"		10		15
6576BX	Door lens—8 1/2"—with green visor		20	20 00	25
6576HX	Headlamp lens—refracting—in carton, 1922		10 pr.		70
6592X	Plug—with thimble		10	10 00	15
6585X	Reflector		6		75
6585BX	Reflector (dimmer type)		6		75
6580X	Focusing screw		10		05
6591X	Focusing screw spring		10		03
6574X	Bulb socket		10		15
6574BX	Head lamp plug socket		10		15
6586X	Reflector spring		10		05
7487X	Switch to terminal wire—11 3/4" long		10		05. MH
7489X	Lamp to lamp wire—40" long		10		15. MH
7490X	Lamp to ground wire—10 3/4" long		10		05. MH
2122X	Head lamp wire bushing		10		03
4082X	Head lamp and tail lamp wire bushing		10		01
SIDE OIL AND TAIL LAMPS—1915-22					
6561X	Side oil lamp, per pair		2 pr.		4 50
6568X	Tail lamp		2		2 50
7669X	Electric tail lamp assembly		4	\$17 00	1 00
6484BX	Electric tail lamp red lens		10		15
6520X	Bulb (tail lamp and headlamp dimmer) 6-8 volt—2 c. p.—single contact, 1919-22		20	25 00	28
6495X	Electric tail lamp bulb socket		6		20
2107X	Tail lamp wire clip		10		01
2108X	Tail lamp wire spring		10		03
6409X	Tail lamp wire bushing assy.		10		03
6410X	Tail lamp wire bushing support		10		01
TT8821X	Tail lamp to ground wire assy.		6		15. MH
6599X	Side oil and tail lamp fount.		2		50
6956X	Side oil lamp door		2		50
6957X	Tail lamp door		2		30
6966X	Tail lamp white lens and frame		2		20
6460X	Lamp burner		2		25
6483X	Side oil lamp door lens		2		15
6392X	Lamp wick		6		05

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	LIST PRICE			Tax Status
			Minimum Whole-sale Quan.	Lots of 20 per lot	Lots of 100 per lot	
TOURING CAR AND TORPEDO WINDSHIELDS—1915-22						
†7840X	Windshield assembly, less brackets, bolts, nuts and washers		2		\$13 50	MH...
7827X	W/S glass—upper	1915-22	4	\$60 00	3 25	
7828X	W/S glass—lower	1915-22	4	80 00	4 25	
7818BX	W/S hinge assy.—right	1917-22	2		40	
7819BX	W/S hinge assy.—left	1917-22	2		40	
7820AX	W/S upper frame assembly	1915-16	2		1 50	
7820BX	W/S frame assy.—upper	1917-22	2		1 50	
7822AX	W/S upper half assy	1915-16	2		6 50	MH
7822BX	W/S upper half assy	1917-22	2		6 50	MH
7823X	W/S lower half assy	1915-22	2		7 00	MH
7802X	W/S lower frame only	1915-22	2		1 00	
7803X	W/S lower frame filler block	1915-22	2		20	
7839X	W/S frame filler block	1915-16	2		15	
7888X	W/S block (frame filler)—upper	1917-22	2		15	
7810X	W/S hinge bolt	1915-16	10		05	
7845X	W/S bracket—right	1915-22	2		60	
7845BX	W/S bracket—right	1919-22	2		50	
7846X	W/S bracket—left	1915-22	2		60	
7846BX	W/S bracket—left	1919-22	2		50	
7824X	W/S glass clamp	1915-22	6		02	
7801X	W/S frame—upper	1915-16	2		75	
7887X	W/S frame—upper	1917-22	2		75	
3827X	W/S top snap loop	1915-22	2		05	
1154X	W/S hinge bolt nut	1915-22	Order 3929C			
2449BX	W/S glass clamp screw	1915-22	10		01	
2257BX	W/S hinge to frame screw	1915-22	10		02	
292X	W/S hinge spring		Order 2742			
7851X	W/S upper glass stop—nickel	1915-22	6		25	
7852X	W/S lower glass stop—nickel	1915-22	6		25	
7808X	W/S hinge thimble	1915-22	6		05	

†Order 7845X-7846X extra for 1915-16 cars.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	List Price Each	Tax Status
TOURING CAR TOPS—1915-22					
†7940X	Touring car top complete	1915-22			MH
6882X	T. C. storm curtain (R. H.)	1915-22	2	\$2 00	MH
6883X	T. C. storm curtain (L. H.)	1915-22	2	2 00	MH
4966BX	T. C. side curtain (R. H.)	1915-22	2	2 50	MH
4967BX	T. C. side curtain (L. H.)	1915-22	2	2 50	MH
6894X	T. C. center deck complete	1915-22	2	7 50	MH
6886X	T. C. center deck only 9½" x 50"	1915-22	2	4 50	
8913X	T. C. side quarter (R. H.)	1915-22	2	1 50	
8914X	T. C. side quarter (L. H.)	1915-22	2	1 50	
6815X	T. C. side quarter pad	1915-22	2	1 00	
6940X	T. C. back stay and curtain assembly	1915-22	3	3 00	MH
3897X	T. C. wood bow	1913-17	2	75	
8973X	T. C. front and rear extension rib	1918-22	2	40	
8974X	T. C. front and rear upright rib	1918-22	2	40	
4596X	T. C. bow separator—male	1913-17	6	05	
4597X	T. C. bow separator—female	1913-17	6	05	
6832X	T. C. bow separator	1918-22	6	05	
6860AX	T. C. front extension bow socket (R. H.)	1915-17	2	1 00	
6860BX	T. C. front extension rib socket (R. H.)	1918-22	2	1 00	
6861AX	T. C. front extension bow socket (L. H.)	1915-17	2	1 00	
6861BX	T. C. front extension rib socket (L. H.)	1918-22	2	1 00	
3884AX	T. C. rear extension bow socket (R. H.)	1913-17	2	1 60	
3884BX	T. C. rear extension rib socket (R. H.)	1918-22	2	1 60	
3885AX	T. C. rear extension bow socket (L. H.)	1913-17	2	1 60	
3885BX	T. C. rear extension rib socket (L. H.)	1918-22	2	1 60	
6862AX	T. C. front upright bow socket (R. H.)	1915-17	2	1 00	
6862BX	T. C. front upright rib socket (R. H.)	1918-22	2	1 00	
6863AX	T. C. front upright bow socket (L. H.)	1915-17	2	1 00	
6863BX	T. C. front upright rib socket (L. H.)	1918-22	2	1 00	
3882AX	T. C. rear upright bow socket (R. H.)	1913-17	2	1 00	
3882BX	T. C. rear upright rib socket (R. H.)	1918-22	2	1 00	
3883AX	T. C. rear upright bow socket (L. H.)	1913-17	2	1 00	
3883BX	T. C. rear upright rib socket (L. H.)	1918-22	2	1 00	
7831X	Curtain to windshield hook	1915-22	10	03	
7832X	Curtain to body hook	1915-22	10	03	
6837X	Touring car key strap assembly	1913-18	6	05	
8992X	Rib socket cotter	1918-22	10	05	
3924X	T. C. top to windshield strap assembly	1915-22	6	25	
3629X	T. C. rear stay strap assembly complete	1913-22	6	40	
6925X	T. C. curtain to windshield strap assembly	1915-19	6	10	
6926X	T. C. curtain to lamp bracket strap assy.	1915-19	4	10	
3754X	T. C. curtain glove fastener assembly	1913-22	10	05	
6829AX	T. C. duquesne clip—upper	1914-17	10	05	
6829BX	T. C. extension support—upper	1918-22	10	10	
6830AX	T. C. duquesne clip—lower	1914-17	10	05	
6830BX	T. C. extension support—lower	1918-22	10	05	
8937X	T. C. top snap fastener—single	1917-22	10	05	
8938X	T. C. top snap fastener—double	1917-22	10	05	
3314X	T. C. top prop rest with strap	1913-22	4	20	
3858X	T. C. top prop rest arm	1913-22	4	65	
3624X	T. C. bow socket to seat iron japanned nut	1913-22	6	05	
3383X	Curtain celluloid 20" x 50"—.015 thick	1913-22	2	2 20	
3383X	Curtain celluloid 10" x 18"—.015 thick	1913-22	2	40	
4981X	Touring car top visor	1920-22	2	50	

TORPEDO TOP PARTS—1915-22

†7941X	Torpedo top complete	1915-22			MH
4971	Torpedo top—second and third wood bows	1914-18	2	50	
6929X	Torpedo top—first bow	1915-18	2	50	
8772X	Rib—upright	1918-22	2	40	
8988X	Rib—front extension	1918-22	2	40	
8989X	Rib—rear extension	1918-22	2	40	
6870X	Torp. bow socket—upright—(R. H.)	1915-18	2	1 25	
6870BX	Torp. rib socket—upright—(R. H.)	1918-22	2	1 25	
6871X	Torp. bow socket—upright—(L. H.)	1915-18	2	1 25	
6871BX	Torp. rib socket—upright—(L. H.)	1918-22	2	1 25	
6872X	Torp. bow socket—front extension—(R. H.)	1915-18	2	1 00	
6872BX	Torp. rib socket—front extension—(R. H.)	1918-22	2	89	
6873X	Torp. bow socket—front extension—(L. H.)	1915-18	2	1 00	
6873BX	Torp. rib socket—front extension—(L. H.)	1918-22	2	89	
4907X	Torp. bow socket—rear extension—(R. H.)	1913-18	2	1 00	
4907BX	Torp. rib socket—rear extension—(R. H.)	1918-22	2	1 00	
4908X	Torp. bow socket—rear extension—(L. H.)	1913-18	2	1 00	
4908BX	Torp. rib socket—rear extension—(L. H.)	1918-22	2	1 00	
6937X	Torp. side curtain—rear—(R. H.)	1915-22	2	1 50	MH
6938X	Torp. side curtain—rear—(L. H.)	1915-22	2	1 50	MH
6935X	Torp. side curtain—front—(R. H.)	1915-22	2	2 00	MH
6936X	Torp. side curtain—front—(L. H.)	1915-22	2	2 00	MH
6950X	Torp. back curtain assembly	1915-22	3	2 50	MH
6965X	Torp. center deck complete	1915-22	2	4 50	MH
6964X	Torp. top deck only	1915-22	2	2 50	
6962X	Torp. side quarter—(R. H.)	1915-22	2	1 00	
6963X	Torp. side quarter—(L. H.)	1915-22	2	1 00	
6806X	Torp. side quarter pad	1914-22	2	60	
3877X	Torp. prop rest with strap	1913-22	6	60	
4955X	Torp. top visor	1920-22	2	50	

†Inquire of Branch for price.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Price List of Parts for Model T One Ton Truck

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE			Tax Status	Model	No. Fac. Req. No. per Car
				Lots of 100 per lot	Each				
REAR AXLE									
1000	Rear axle assembly	1918-22	2		\$209 00	MH	TT	95	1
1001	Axle housing—right	1918-22	2		18 00	MH	TT	4	1
1002	Axle housing—left	1918-22	2		18 00	MH	TT	5	1
1003	Axle housing bolt	1918-22	20		03		TT	52	13
1003B	Axle housing bolt nut	1918-22		Order 2719					
1004	Axle housing cap	1918-22	6		50	MH	TT	133	1
1005	Axle housing cap gasket	1918-22	20	\$1 50					
1006	Axle housing cap screw	1918-22	20		05		TT	72	4
1007	Axle housing cap screw lock wire	1918-22	20		01		TT	140	1
1008	Axle housing gasket—upper	1918-22	10		02		TT	138	1
1009	Axle housing gasket—lower	1918-22	10		06		TT	139	1
1010	Axle brake housing plate—right	1918-22	6		50	MH	TT	147	1
1011	Axle brake housing plate—left	1918-22	6		50	MH	TT	148	1
1012	Axle housing drain plug	1918-22	10		05		TT	136	2
1013	Axle shaft	1918-22	2		5 00	MH	TT	48	2
1014	Axle shaft cotter	1918-22	24		doz. 05		TT	165	2
1015	Axle shaft nut	1918-22	20	9 00	15		TT	166	2
1016	Axle shaft washer	1918-22	20	2 50	03		TT	135	2
1017	Axle shaft dust cap	1918-22	10		03		TT	56	2
1018	Axle shaft inner ball bearing assy.	1918-22	2		6 50		TT	125	2
1019	Axle shaft outer roller bearing	1918-22	2		1 75		TT	171	2
1020	Axle shaft outer roller bearing sleeve	1918-22	2		60		TT	170	2
1021	Axle shaft bearing felt	1918-22	20	6 50	10		TT	143	4
1022	Axle shaft bearing retainer	1918-22	10		05		TT	20	2
1023	Axle shaft bearing retainer washer	1918-22	20	2 00	03		TT	23	2
1024	Axle shaft felt retainer assembly	1918-22	10		10		TT	144	2
1025	Axle shaft felt retainer cup	1918-22	10		03		TT	145	2
1026	Axle shaft felt retainer plate	1918-22	10		03		TT	146	2
1027	Diff. gear	1918-22	2		1 50	MH	TT	13	2
1028	Diff. gear case R. or L. half	1918-22	2		2 50	MH	TT	11	2
1029	Diff. gear case bolt	1918-22		Order 1063					
1031	Diff. gear lock ring	1918-22	10		02		TT	118	2
1032	Diff. pinion	1918-22	2		80	MH	TT	14	2
1033	Diff. pinion shaft	1918-22	2		20		TT	15	1
1034	Drive shaft	1918-22	2		8 00	MH	TT	87	1
1036	D. S. tube assembly	1918-22	2		15 00	MH	TT	153	1
1037	D. S. tube flange gasket	1918-22	20	1 25	02		TT	194	1
1038	D. S. tube flange screw	1918-22		Order 1006					
1039	D. S. felt	1918-22	10		05		TT	109	1
1040	D. S. felt container	1918-22	10		63		TT	110	1
1041	D. S. to worm coupling	1918-19	2		1 00		TT	85	1
1041B	D. S. to worm coupling	1920-22	2		1 00		TT	85B	1
1042	D. S. to worm coupling pin	1918-22	10		01		TT	86	2
1043	Worm	1918-22	2		12 00	MH	TT	16	1
1043B	Worm—5½ to 1	1918-22	2		12 00	MH	TT	16B	1
1044	Worm gear	1918-22	2		13 00	MH	TT	12	1
1044B	Worm gear—5½ to 1	1918-22	2		13 00	MH	TT	12B	1
1045	Worm cotter	1918-22		Order 1014					
1046	Worm roller bearing	1918-22	2		1 30		TT	108	2
1047	Worm roller bearing retainer	1918-22	10		02		TT	106	1
1048	Worm roller bearing sleeve	1918-22	2		2 00		TT	107	2
1049	Worm roller bearing housing screw	1918-22	10		05		TT	101	2
1050	Worm thrust bearing collar	1918-22	2		1 00		TT	114	2
1051	Worm thrust ball and separator assy.	1918-22	2		1 25		TT	123	1
1052	Worm thrust bearing plate	1918-22	2		15		TT	22	1
1053	Worm thrust bearing retainer	1918-22	2		25		TT	111	1
1054	Worm thrust bearing retainer nut	1918-22		Order 1015					
1055	Worm thrust bearing retainer pin	1918-22	10		01		TT	112	1
1056	Brake shoe	1918-22	4		2 00	MH	TT	2814	2
1057	Brake shoe lining, each	1918-22	10		40	MH	TT	58	4
1058	Brake shoe lining rivet	1918-22	100		doz. 05		TT	68	40
1059	Brake shoe spring	1918-22	10		05		TT	67	2
1060	Brake shoe bolt	1918-22	10		15		TT	59	2
1060B	Brake shoe bolt nut	1918-22		Order 2828					
1061	Brake expander	1918-22	4		40		TT	61	2
1062	Brake expander lever	1918-22	4		15		TT	62	2
1064	Brake expander adjustment collar	1918-22	4		20		TT	175	2
1065	Brake expander bushing	1918-22	4		10		TT	173	2
1066	Brake expander pin	1918-22	4		01		TT	7	2
1067	Brake expander link	1918-22	10		08		TT	176	4
1068	Brake expander link pin	1918-22	20		03		TT	177	8
1069	Brake rod	1918-22	4		30	MH	TT	119	2
1070	Brake rod support—right	1918-22	6	5 00	10		TT	120	1
1071	Brake rod support—left	1918-22	6	5 00	10		TT	121	1
1072	Brake rod support bolt	1918-22	10		02		TT	181	2
1072B	Brake rod support bolt nut	1918-22		Order 3088E					
1073	Rear radius rod	1918-22	2		5 50		TT	152	2
1074	Rear radius rod bolt—front	1918-22	10		20		TT	84	1
1075	Rear radius rod bolt—rear	1918-22	10		15		TT	83	4
1075B	Rear radius rod bolt nut	1918-22		Order 2828					
1076	Universal joint bushing	1918-22	2		40		TT	69	1

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.

Part No.	Name of Part	Year	Minimum Whole- sale Quan.	LIST PRICE		Tax	Fac.	No.	
				Each	Model				Status
				of 100 per lot				per Car	
SPRING									
1077.	Rear spring—right or left, each	1918-22	2		\$5 00	MH	TT	333	2
1078.	Spring leaf No. 1	1918-22	2		1 20		TT	334	2
1079.	Spring leaf No. 2	1918-22	2		70		TT	362	2
1080.	Spring leaf No. 3	1918-22	2		68		TT	363	2
1081.	Spring leaf No. 4	1918-22	2		55		TT	364	2
1082.	Spring leaf No. 5	1918-22	2		50		TT	365	2
1083.	Spring leaf No. 6	1918-22	2		45		TT	366	2
1084.	Spring leaf No. 7	1918-22	2		40		TT	367	2
1085.	Spring leaf No. 8	1918-22	2		35		TT	368	2
1086.	Spring leaf No. 9	1918-22	2		30		TT	331	2
1087.	Spring bushing	1918-22	2		20		TT	332	2
1088.	Spring clip	1918-22	2		45		TT	326	2
1089.	Spring clip nut	1918-22	10	\$9 00	10		TT	327	4
1091.	Spring clip plate	1918-22	4		20		TT	329	2
1092.	Spring tie bolt	1918-22	4		30		TT	330	2
1093.	Spring tie bolt nut	1918-22	Order 1089						
1094.	Spring tie bolt cotter	1918-22	24		doz. 05		TT	328	2
1095.	Spring clamp	1918-22	4		10		TT	375	2
1096.	Spring clamp bolt	1918-22	4		04		TT	376	2
1096B.	Spring clamp bolt nut	1918-22	Order 3514						
1097.	Spring perch	1918-22	2		80	MH	TT	2804	2
1098.	Spring perch nut	1918-22	Order 1015						
1099.	Spring perch cotter	1918-22	Order 1014						
1100.	Spring perch bushing	1918-22	4		25		TT	172	2
1101.	Spring perch bushing spacer	1918-22	10		05		TT	169	4
1102.	Spring hanger assembly	1918-22	6		30		TT	91	4
WHEELS									
1105B.	Rear wheel—dem. Kelsey	1919-22	2		25 00		TT	7698	2
1105C.	Rear wheel—dem. Hayes	1919-22	2		25 00		TT	7698B	2
1105D.	Rear wheel—dem.—less rim and hub— Kelsey	1919-22	2		11 50		TT	2817AR	2
1105E.	Rear wheel—dem.—less rim and hub— Hayes	1919-22	2		11 50		TT	2817BR	2
1106B.	Dem. rim only—Kelsey	1919-22	2		5 50		TT	8774	2
1106C.	Dem. rim only—Hayes	1919-22	2		5 50		TT	8774B	2
1107B.	Clamp and nut assembly—Kelsey	1919-22	20		15		TT	8807	12
1108B.	Clamp bolt	1919-22	20		10		TT	8832	12
1109.	Rear wheel complete, less tire	1918-20	2		18 00		TT	99	2
1110.	Rear wheel complete, with solid tire	1918-20	2			MH	TT	7645	
1111.	Rear hub	1918-22	2		3 50		TT	40	2
1112.	Rear hub flange	1918-22	2		60		TT	149	2
1113.	Rear hub brake drum	1918-22	2		2 00		TT	3	2
1114.	Rear hub bolt	1918-22	20	3 50	05		TT	28	12
1114B.	Rear hub bolt nut	1918-22	20		03		TT	29	12
1116.	Rear hub cap	1918-22	6		35		TT	150	2
1117.	Rear hub key	1918-22	10		03		TT	26	2
1118.	Rear hub felt	1918-22	10	4 00	05		TT	162	2
FRAME									
1119.	Frame assembly	1918-22	2		30 00	MH	TT	300	1
1120.	Side member—right	1918-22	2		10 00		TT	301	1
1121.	Side member—left	1918-22	2		10 00		TT	302	1
1122.	Front cross member	1918-22	2		1 00		TT	303	1
1123.	Rear cross member	1918-22	2		4 00		TT	304	1
1124.	Front corner bracket—right	1918-22	2		15		TT	305	1
1125.	Front corner bracket—left	1918-22	2		15		TT	306	1
1125B.	Front end spacer—right	1918-22	2		15		TT	319	1
1125C.	Front end spacer—left	1918-22	2		15		TT	318	1
1126.	Rear cross member gusset plate	1918-22	2		25		TT	307	2
1127.	Rear cross member reinforcement	1918-22	2		35		TT	325	2
TRANSMISSION CONTROL									
1133.	Speed lever	1918-22	2		10		TT	862	1
1134.	Controller shaft with speed lever	1918-22	2		75	MH	TT	1557	1

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company, 20/21 represents the price of the goods and 1/21 represents excise tax.