

Ford

THE UNIVERSAL CAR

Price List of Parts

MODEL T

Effective July 1, 1924

Ford Motor Company

DETROIT, MICHIGAN

July 1, 1924

Prices subject to change without notice

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

IMPORTANT

INSIST on getting **GENUINE** Ford Parts when your Ford car needs repairing. Don't allow "bogus" or imitation Parts to go in your car.

Parts Price List Index

	Page
Ammeter.....	25
Axle—Front.....	7
Axle—Rear.....	4
Battery.....	28
Battery Bracket and Parts.....	28
Bendix Drive.....	25
Body Parts.....	17
Carburetor.....	21
Carburetor Attachments.....	23
Carburetor Parts.....	21
Coil and Parts—Spark.....	25
Commutator.....	13
Cotter Pins.....	29
Cut-outs.....	27
Fan.....	19
Fenders.....	23
Frame.....	8
Gasoline Tank.....	8
Generator and Parts.....	27
Hood.....	19
Horn.....	29
Lamps.....	29
Magneto.....	13
Motor.....	9
Muffler.....	19
Radiator—Thermo Syphon.....	18
Running Boards and Shields.....	23
Spark Plugs.....	28
Springs.....	17
Starter Parts.....	27
Starting Crank.....	18
Steering Gear.....	15
Switch.....	25
Tools.....	28
Tops.....	32
Transmission.....	13
Transmission Control.....	14
Transmission Cover.....	14
Truck Parts.....	35
Wheels.....	7
Windshields.....	31
Wiring.....	25

Ford Motor Company

FORD FACTORIES AND BRANCHES

Ford Factory, Detroit—*Parent Plant*
 Ford Factory, Ford, Ontario, Canada
 Ford Factory, Manchester, England

AMERICAN WHOLESALE BRANCHES

Atlanta	Cleveland	Fargo	Los Angeles	Oklahoma City	Salt Lake City
Buffalo	Columbus	Houston	Louisville	Omaha	San Francisco
Cambridge	Dallas	Indianapolis	Memphis	Philadelphia	Seattle
Charlotte	Denver	Jacksonville	Milwaukee	Pittsburgh	Washington
Chicago	Des Moines	Kansas City, Mo.	Minneapolis	Portland	
Cincinnati	Detroit	Kearny, N. J.	New Orleans	St. Louis	

FOREIGN BRANCHES, ASSOCIATED COMPANIES AND SERVICE STATIONS

Antwerp, Belgium	Copenhagen, Denmark	Montevideo, Uruguay	Toronto, Ont.
Barcelona, Spain	Havana, Cuba	Montreal, Que.	Trieste, Italy
Bordeaux, France	London, Eng.	Regina, Sask.	Vancouver, B. C.
Buenos Aires, Argentina	London, Ontario	Sao Paulo, Brazil	Winnipeg, Manitoba
Calgary, Alta.	Manchester, Eng.	St. John, N. B.	

There are Ford Dealers in all Principal Cities

Instructions for Ordering Parts

- 1—Order all parts through the nearest Branch or Dealer.
- 2—Always give Catalog Number and Name of each part ordered.
- 3—Mail and Parcel Post orders must be accompanied by an amount sufficient to cover Postage.
- 4—All prices are net f. o. b. Branch, Factory or Dealer.
- 5—Specify how shipments are to be made.
- 6—Orders for parts should be written separately from correspondence pertaining to other matters.

Telegraph Code

To save expense, to expedite ordering and for your convenience, we have arranged a code word for each part of the Ford Model T car. In addition, we list below a brief General Code covering miscellaneous instructions, questions and answers relative to the shipment of parts.

- | | |
|--|--|
| Toperig —Ship to me (us) by express. | Topfton —When and how did you ship parts called for in my (our) telegram of _____ |
| Toperkleur —Ship by express to _____ | Topfutch —When and how will you ship parts called for in my (our) telegram of _____ |
| Topersteen —Ship to me (us) by freight. | Topfwasser —When and how will you ship parts called for in my (our) letter of _____ |
| Toper —Ship to me (us) by parcel post. | |

PRICE LIST OF PARTS


FORD MODEL T 1909-1924

EFFECTIVE JULY 1, 1924

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	Req. per Car
REAR AXLE								
2500	Rear axle assembly	1909-24		\$55 00	MH.	Aband	95E	1
2501	Axle housing—right	1915-24		8 00	MH.	Absolve	7635D	1
2502	Axle housing—left	1915-24		8 00	MH.	Absume	7636D	1
2503E	Axle housing bolt	1913-24	$\frac{3}{8}$ " x $1\frac{1}{2}$ "	03		Ajoy	2854	7
2503F	Axle housing bolt nut	1909-24		02		Doric	44	7
2504	Rear axle case gasket	1919-24		03		Abraum	139	1
2505	Axle shaft	1912-24		1 50	MH.	Abode	2818	2
2506	Axle shaft washer	1909-24	$1\frac{1}{2}$ " dia. fibre	02		Abound	39	1
2507	Axle shaft nut	1909-24		05		Abode	242	2
2508	Axle shaft roller bearing	1909-24	$2\frac{1}{2}$ " x 4"	75		Abraze	253	4
2509	Axle shaft R. B. sleeve—R.	1909-24	4" long	15		Abay	170	2
2509B	Axle shaft R. B. sleeve—L.	1909-24		15		Abate	161	2
2510	Axle housing cap	1909-19	$2\frac{1}{2}$ " dia.	05		Abroad	56AR	2
2510 $\frac{1}{2}$	Axle housing cap	1919-24		05		Abridge	56B	2
2510A	Axle outer R. B. steel washer	1909-24	$2\frac{1}{2}$ " dia.	02		Absinthe	199B	2
2510B	Axle outer R. B. felt washer	1909-24	$2\frac{1}{2}$ " dia.	05		Absist	54	2
2512C	Diff. case—left	1914-24		1 50	MH.	Abut	84	1
2513C	Diff. case—right	1914-24		90	MH.	Ache	81	1
2514B	Diff. case stud	1915-24	$\frac{3}{8}$ " x $2\frac{1}{2}$ "	05		Ale	52BR	3
2514C	Diff. case bolt	1922-24		05		Algol	52C	3
2515	Diff. case stud nut	1909-24		03		Egret	8	5
2518	Diff. drive gear	1909-24	40 teeth	2 50	MH.	Accost	12B	1
2519	Diff. drive gear screw	1909-24	$\frac{3}{8}$ " x $\frac{1}{2}$ "	03		Accoy	103	10
2519A	Diff. gear lock ring	1909-24		02		Acetic	118	2
2520B	Diff. gear	1909-24	24 teeth	90	MH.	Ace	13B	2
2521B	Diff. gear key	1911-24	$1\frac{3}{8}$ " long	05		Acrid	137	2
2524C	Diff. pinion	1915-24	12 teeth	35	MH.	Admire	14D	3
2526B	Diff. spider	1909-24		75	MH.	Adduce	15D	1
2528	Diff. thrust washer	1909-24	$3\frac{3}{8}$ " dia. metal	15		Adieu	30	2
2529	Diff. thrust plate	1909-24	$3\frac{3}{8}$ " dia. steel	15	MH.	Adjoin	31	4
2531B	Diff. thrust plate pin	1917-24		02		Age	7640	6
2532	Diff. housing oil plug	1909-24	$\frac{3}{8}$ " x 24 thds.	05		Agger	817	1
2545	Rear axle grease cup	1909-24		10		Ajar	76A2	1
2547	Rear radius rod—R.	1909-24		1 25	MH.	Altar	152	1
2547B	Rear radius rod—L.	1909-24		1 25	MH.	Altaic	158	1
2548	Radius rod nut	1909-24	$\frac{3}{8}$ " x 18 thds.	05		Amass	77	2
2549	Radius rod lock nut	1909-24	$\frac{3}{8}$ " x 18 thds.	05		Amber	78	2
2550	Radius rod lock washer	1909-24		05		Ambush	2823	2
2551	Radius rod bolt	1909-24	$\frac{1}{2}$ " x $1\frac{1}{2}$ "	02		Ampite	83	4
2551B	Radius rod bolt nut	1909-24		03		Armor	60	4
2557	Hub cam shaft—right	1909-24	$3\frac{1}{8}$ " long	10	MH.	Amuck	92B	1
2558	Hub cam shaft—left	1909-24	$3\frac{1}{8}$ " long	10	MH.	Anchor	61B	1
2559	Hub cam shaft bushing	1909-24	$\frac{1}{8}$ " bore, $\frac{1}{2}$ " dia.	05		Ancient	173	2
2562	Cam shaft lever	1909-24	$\frac{1}{2}$ " bore	10	MH.	Arab	62	2
2563	Cam shaft lever pin	1909-24	$\frac{3}{8}$ " x $\frac{1}{2}$ "	02		Arbor	7	4
2564	Lever clevis pin	1909-24	$\frac{3}{8}$ " x 1"	02		Arcade	65	4
2566	Hub brake shoe	1909-24	Cast iron	35	MH.	Arctic	2814	2
2567	Brake shoe support bolt	1909-24	$\frac{1}{2}$ " x $1\frac{1}{2}$ "	05		Argus	59	2
2568	Brake shoe support nut	1909-24	Order 2551B					
2570B	Brake shoe coil spring	1913-24	$3\frac{3}{8}$ " long	03		Asug	2862	4
2571	UNIVERSAL JOINT ASSEMBLY	1909-24		1 50		Ashore	151B	1
2572	Joint knuckle (male)	1909-24		50		Ashust	45B	1
2573	Joint knuckle (female)	1909-24		60		Askew	46B	1
2574	Joint knuckle pin	1909-24	$\frac{3}{8}$ " x $1\frac{1}{2}$ "	02		Asleep	6	1
2575	Joint ring, complete	1909-24	$3\frac{3}{8}$ " dia.	50		Astert	49B	1
2576	Joint ring rivets (per set 4)	1909-24	$\frac{3}{8}$ " x $1\frac{1}{2}$ "	05		Atche	50	4
2577B	Univ. joint housing	1914-24		1 00		Atoll	7609	1
2578	Joint housing plug	1909-24	$\frac{1}{2}$ " x 20 thds.	05		Atom	75	2
2579	Ball joint grease cup	1909-24	$\frac{1}{4}$ " pipe thds.	15		Attic	195	1
2580	Ball cap gasket	1909-24		05		Auburn	1518	1
2581	Drive shaft housing front bushing	1909-24	Babbitt	30		Balkish	69	1
2582	D. S. tubing	1911-24		7 00	MH.	Ballad	153B	1
2583B	D. S. bearing housing	1920-24	Forging	1 40	MH.	Ballice	191C	1
2584B	D. S. R. B. cap screw	1912-24	$\frac{1}{2}$ " x $4\frac{3}{8}$ "	05		Balneal	183B	6
2584C	D. S. R. B. stud nut	1912-24		03		Feast	184R	6
2584D	D. S. R. B. cap screw lock washer	1912-24	per doz.	05		Balneary	157	6
2586	D. S. R. B. housing set screw	1911-24	$\frac{1}{2}$ " x 20 thds.	05		Banco	101R	1
2587	D. S. roller bearing	1911-24	$2\frac{3}{8}$ " long	1 00		Balsam	108	1
2588	D. S. R. B. distance plate	1911-24	$2\frac{3}{8}$ " dia.	05	MH.	Bandlet	106R	1
2589	D. S. ball race	1911-24	$2\frac{3}{8}$ " dia.	25		Bandon	186R	1

††When ordered to replace malleable type housing also order 2-2591 and 1-2591B.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax

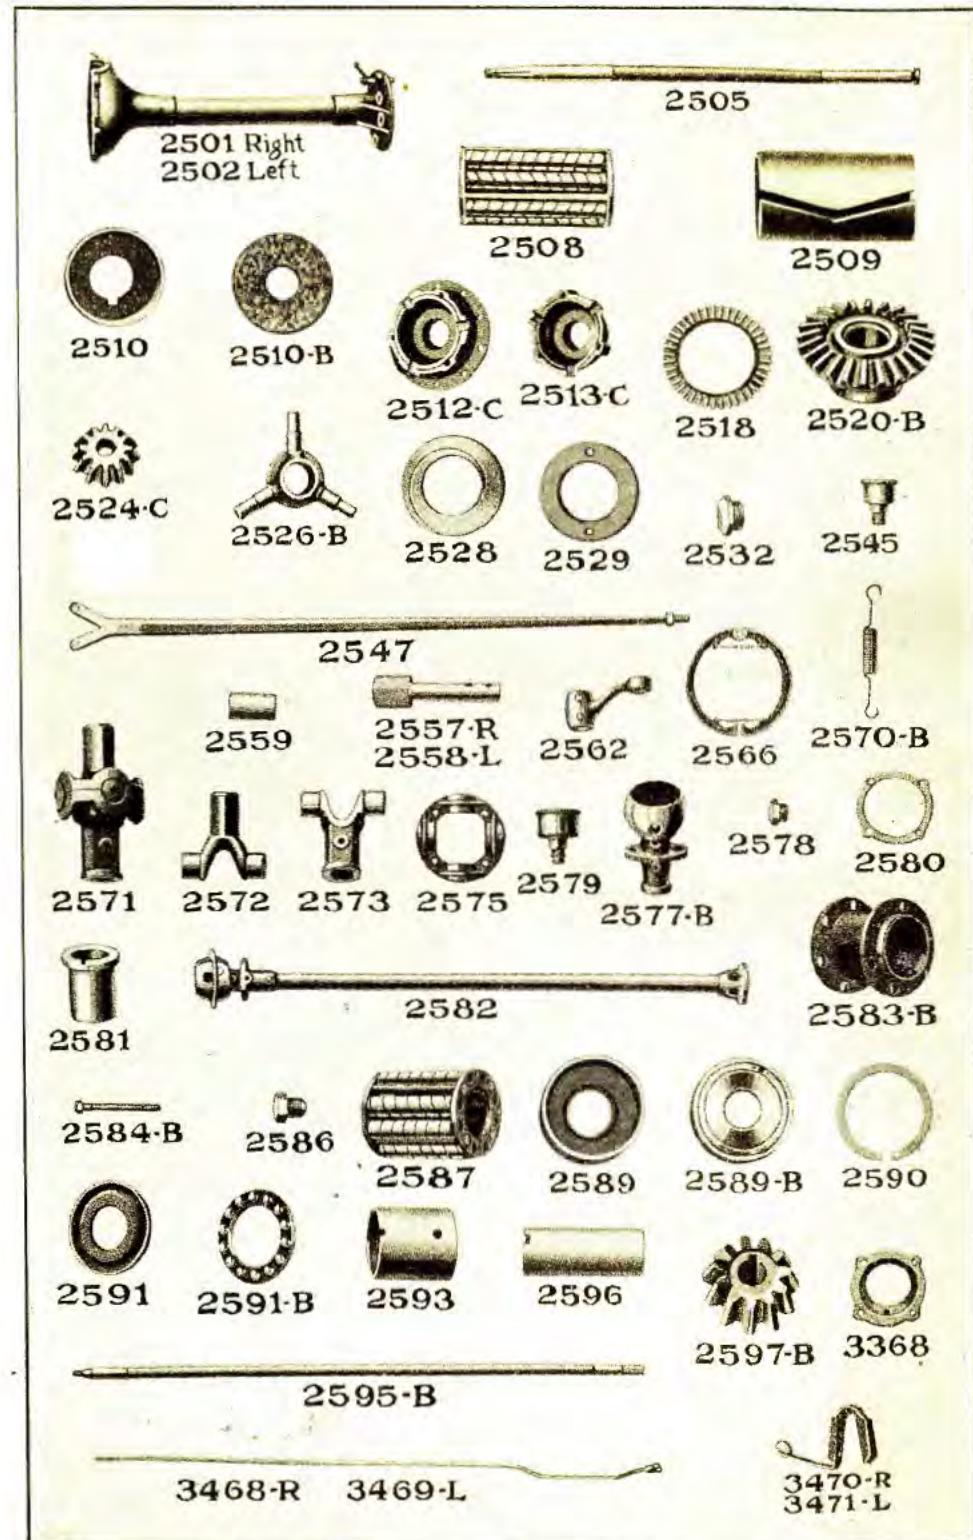

Insist upon genuine Ford Parts

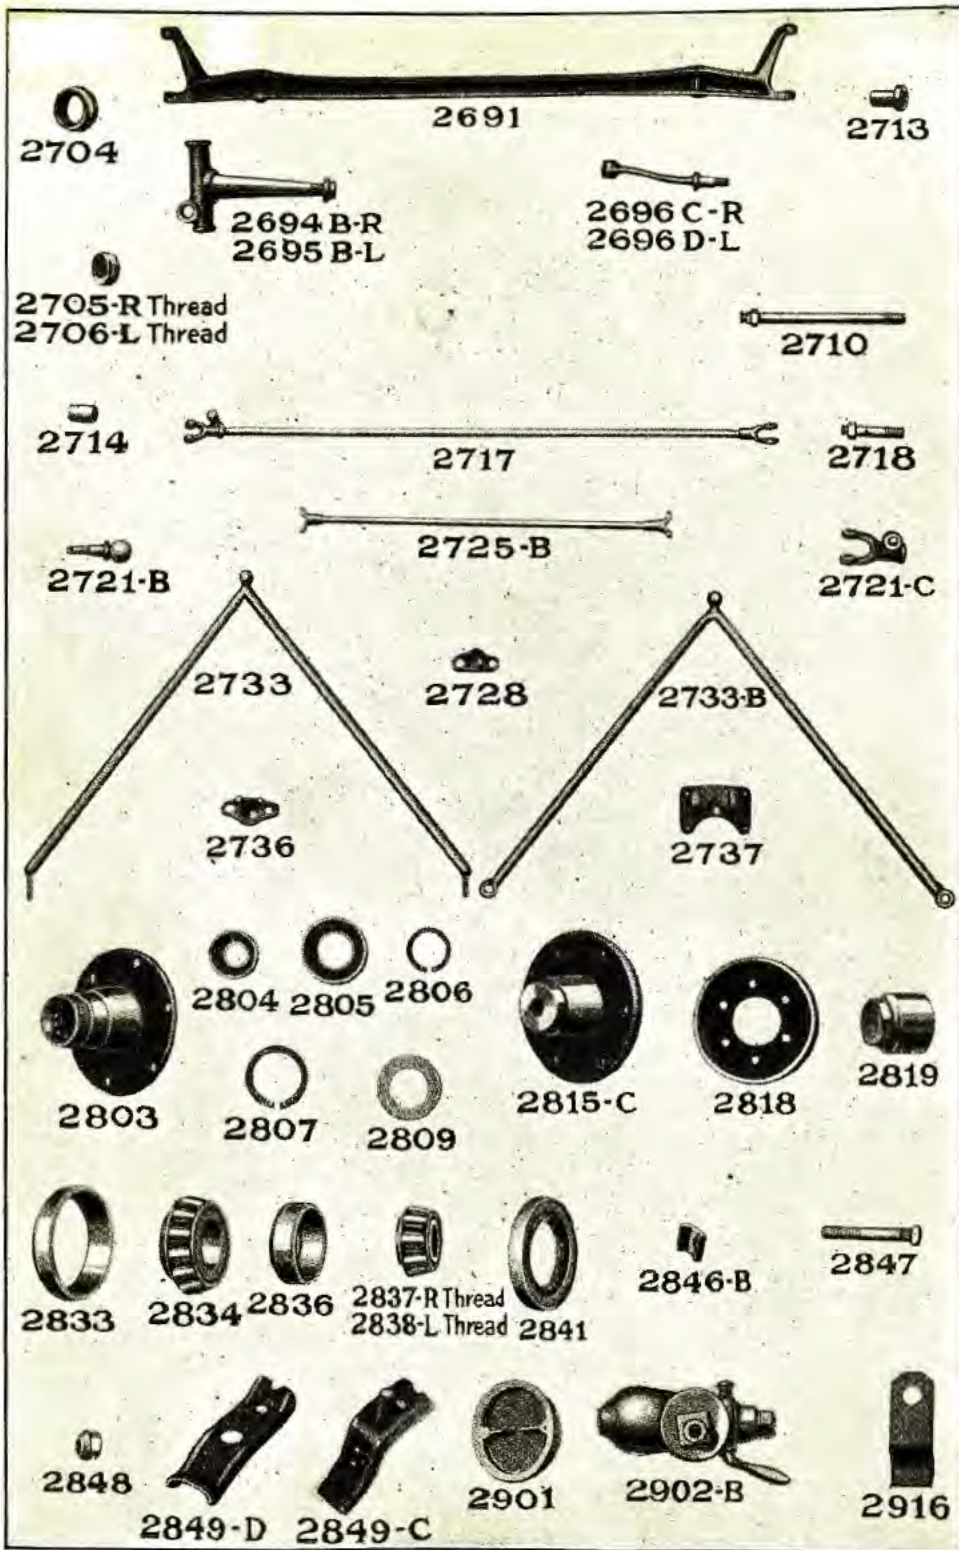


Plate No. 2

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	Req. No.
REAR AXLE—Continued								
2589B	D. S. ball bearing assy.	1911-21		\$ 0 90		Bander	185AR	1
2590	D. S. ball retainer	1911-21	2 1/4" dia.	03		Bandroe	190AR	1
2591	D. S. ball thrust collar	1911-24	2 3/4" dia.	20		Bandault	188	2
2591B	D. S. thrust ball and retainer assembly	1920-24		20		Bandala	162	1
2592	D. S. ball bearings	1911-21	Order 2811					
2593	D. S. R. B. sleeve	1911-21	2 5/8" dia., 2 3/4" long	1 50		Bangle	107R	1
2595B	D. S. only	1911-24	1 1/4" x 53 H	3 00	MH	Banjo	87D	1
2596	D. S. sleeve	1911-24	1" bore, 3 1/4" long	60		Banshee	163B	1
2597B	D. S. pinion	1911-24	Standard, 11 teeth	1 00	MH	Banwort	16C	1
2597C	D. S. pinion	1911-24	Low gear, 10 teeth	1 00	MH	Banneret	16D	1
2598	D. S. castle nut	1911-24	5/8" x 18 thds.	08		Banket	124	1
2598B	D. S. pinion key	1911-24		05		Banker	57B	1

FRONT AXLE

2691	Front axle only	1909-24	56" tread	9 00	MH	Barber	202B	1
2694B	Spindle body—right	1911-24	Less cones and washer	1 50	MH	Barbican	280	1
2695B	Spindle body—left	1911-24	Less cones and washer	1 50	MH	Barbiton	281	1
2696	Spindle arm—right or left	1911-19		50	MH	Barbism	7716	2
2696C	Spindle arm—right	1919-24		45	MH	Barm	7715B	1
2696D	Spindle arm—left	1911-24		45	MH	Barry	7716B	1
2697	Spindle arm nut	1911-24	Order 2548					
2704	Stationary cone	1909-24	1 1/4" bore	15		Barless	205A	2
2705	Adj. cone—right thread	1909-24	1 1/4" x 16 thds.	15		Barley	206A	1
2706	Adj. cone—left thread	1909-24	1 1/4" x 16 thds.	15		Barrack	207A	1
2707	Spindle nut—right thread	1909-24	1 1/4" x 16	05		Barrow	209B	1
2708	Spindle nut—left thread	1909-24	1 1/4" x 16	05		Baron	208B	1
2709	Spindle washer	1909-24	1 1/4" hole x 1 3/8"	02		Barras	210	2
2710	Spindle bolt with oiler	1910-24	1 1/4" x 6 3/4"	20		Barter	7708	2
2711	Spindle bolt nut	1909-24	Order 2551B					
2713	Spindle body bush, (pair)	1909-24	1 1/4" bore	20		Bartram	223	2
2714	Spindle arm bushing	1909-24	1 1/4" bore, 1 1/4" dia., 1" L.	05		Barwood	225	2
2715D	Spindle oiler	1919-24	Order 3176C					
2717	Spindle con. rod	1909-24	46 1/2" long	1 75	MH	Basalt	264	1
2718	Spindle con. rod bolt with oiler	1909-24	1 1/4" x 2 1/4"	15		Basan	7706	2
2719	Spindle con. rod bolt nut	1909-24	1 1/4" x 20 thds.	03		Bashful	220	2
2721B	Spindle con. rod yoke ball	1919-24		20	MH	Baroko	226B	1
2721C	Spindle con. rod yoke	1919-24		49	MH	Barse	248B	1
2725B	Steering gear con. rod	1909-24	Includes ball sockets	80	MH	Baslard	289	1
2728	Ball socket cap	1909-24		10		Basent	254B	2
2729B	Ball socket bolt and nut	1909-24	Order 3362 & 2515					
*2733B	Front radius rod	1909-24		1 50	MH	Bedazzle	263B	1
2736	Front radius rod ball cap	1909-24		10		Beaufet	217	1
2737	Front radius rod ball socket	1911-24		20		Beckon	809B	1
2741	Radius rod ball cap stud	1911-24		03		Plateau	4365	2
2741B	Radius rod ball cap stud nut	1911-24	Order 2515					
2742	Radius rod ball cap spr'g.	1911-24		03		Bicep	292	2

WHEELS

2800	Front wheel—clincher	1909-24	30" x 3"	6 00		Becomb	291B	2
2800B	Front wheel—dem.	1919-24	Less rim & brgs.	6 50		Barytom	291DR	2
2800C	Front wheel—dem.	1919-24	Less rim & brgs., Kelsey	6 50		Basanite	291E	2
2800D	Front wheel—clincher—less hub	1909-24		4 00		Basaltine	295AR	2
2800E	Front and rear wheel—dem.—less rim & hub	1919-24	Kelsey	4 00		Basillak	293AR	4
2800G	Front wheel—dem.	1919-24	Less rim & brgs.—Ford	6 50	MH	Basquish	291G	2
2800H	Front and rear wheel—dem.—less rim & hub	1919-24	Ford	4 00	MH	Bassetto	293CR	4
2801	Front wheel comp. R or L—demountable	1919-24	Rim and R. B. Cups included, Kelsey	8 75		Bersave	7697A	2
2801B	Front wheel comp. R or L—demountable	1919-24	Rim and R. B. Cups included, Hayes	8 75		Besech	7697B	2
2801C	Front wheel comp. R or L—demountable	1919-24	Rim and R. B. Cups included, Ford	8 75	MH	Beatify	7697GR	2
2803	Front hub assembly	1909-24	With ball brgs.	1 60		Bedew	200	2
2803B	Front hub with R B cups	1909-24		2 00		Bedouin	219	2
2804	Outer race	1909-24	1 1/4" dia.	10		Bedfere	234	2
2805	Inner race	1909-24	2 3/8" dia.	15		Bedight	235	2
2806	Outer ball retainer	1909-24	1 1/2" dia.	02		Bedim	236	2
2807	Inner ball retainer	1909-24	2 1/4" dia.	03		Bedside	237	2
2808	Dust ring	1909-24	Steel, 2 1/4" dia.	03		Bedward	238	2
2809	Front and rear hub felt washer	1909-24	2 1/2" dia.	05		Bedtje	239	4
2810	Large balls, each	1909-24	1 1/2"	04		Beefing	241	24
2811	Small balls, each	1909-24	3/8"	03		Beemol	249	22

*Substitute 2733B, with spring perches, for 2733.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	No. per Car	Req.
WHEELS—Continued									
2814C	Rear wheel—clincher	1912-24	30" x 3 1/2"	\$ 6 50		Beggah	2815	2	
2814D	Rear wheel—clincher—less hub	1909-24		4 25		Basifier	2816	2	
2814E	Rear wheel comp.—dem.	1919-24	Kelsey	8 50		Begin	7698A	2	
2814F	Rear wheel comp.—dem.	1919-24	Hayes	8 50		Behoney	7698B	2	
2814G	Rear wheel—dem.	1919-24	Less rim, Kelsey	6 25		Bashless	2815B	2	
2814J	Rear wheel comp.—dem.	1919-24	Ford	8 50	MH	Bedagat	7698CR	2	
2814K	Rear wheel—dem.	1919-24	Less rim—Ford	6 25	MH	Bedaggle	2815E	2	
2815C	REAR HUB	1912-24		1 25	MH	Begol	2819	2	
2816B	Rear hub key	1912-24	3/4" x 1/4" x 2 1/2"	03		Begloom	2863	2	
2818	Rear hub brake drum	1909-24	3" hole, 8" dia.	40		Beguiler	3B	2	
2819	Hub cap	1909-24	2 1/2" x 2 1/2" thds.	15		Behave	7727	4	
2825	Rear hub bolt	1911-24	3/8" x 2 1/2" x 16 thds.	03		Beclay	28B	24	
2825B	Hub bolt nut	1911-24		03		Elk	29	24	
2826	Front hub bolt	1911-24		03		Belgian	27	12	
2827	Hub flange	1911-24	6" dia.	20		Bellow	233B	4	
2828	Rear hub lock nut	1912-24	5/8" x 18 thds.	05		Bengal	242	2	
2833	Front hub bearing cup—inner	1919-24		50		Benip	2955	2	
2834	Inside cone and roller assembly	1919-24		1 10		Bent	205B	2	
2836	Front hub bearing cup—outer	1919-24		40		Bepad	2956	2	
2837	Outside cone and roller assy.—right thread	1919-24		75		Beplay	206B	1	
2838	Outside cone and roller assy.—left thread	1919-24		75		Beplume	207B	1	
2841	Front hub dust cap assy.	1919-24		10		Besunk	350	2	
2845	Demountable rim only	1919-24	Kelsey	1 50		Bethrone	8774AR	4	
2845B	Demountable rim only	1919-24	Hayes	1 50		Bejape	8774B	4	
2845C	Demountable rim only	1919-24	Ford	1 50		Bedrench	8774CR	4	
2845D	Demountable rim only	1923	Ford	1 50			8774D	4	
2846B	Demountable rim clamp	1919-24	Kelsey	10		Betor	8831B	16	
2846C	Demountable rim clamp and nut assembly	1922-24	Ford	15		Betuline	8807	16	
2847	Demountable rim bolt	1919-24		05		Bewax	8832A	16	
2848	Dem. rim bolt nut	1919-24	Hayes	05		Benison	8834B	16	
2848B	Dem. rim bolt nut	1919-24	Kelsey	05		Belabor	8834A	16	
2849	Spare rim carrier	1919-24		2 25	MH	Belamy	8848C	1	
2849C	Spare rim carrier clamp support and bolt assy.	1921-24		15	MH	Belvra	7511	1	
2849D	Spare rim carrier clamp	1919-24		10		Benedict	7312C	1	
2870	Spare rim carrier brkt.—R	1919-22		50		Belate	8824AR	1	
2870B	Spare rim carrier brkt.—R	1922-24		50		Belle	8824B	1	
2871	Spare rim carrier brkt.—L	1919-22		50		Bellite	8825AR	1	
2871B	Spare rim carrier brkt.—L	1922-24		50		Belfch	8825B	1	
FRAME									
2850	Frame assembly	1909-24		13 00	MH	Belone	2916	1	
2851B	Side member—right	1914-24		4 00		Benign	2914	1	
2852B	Side member—left	1914-24		4 00		Berdash	2915	1	
2853	Front cross member	1909-24	22 3/4" long.	90		Beluga	303	1	
2854B	Rear cross member	1914-24		1 20		Bendlet	2913	1	
2855	Front corner bracket—R	1909-24		15		Benumb	305	1	
2856	Front corner bracket—L	1909-24		15		Bequest	306	1	
2857	Rear corner bracket—R	1909-24		15		Besiege	307	1	
2858	Rear corner bracket—L	1909-24		15		Bespawl	308	1	
2859	Front end spacer—L	1909-24		10		Benzoin	318B	1	
2860	Front end spacer—R	1909-24		10		Bestial	319B	1	
2863	Body bracket	1909-24	On frame.	10		Bestow	344	4	


GASOLINE TANK

2900B	Gas tank	1916-24	Sedan	6 00	MH	Binocle	7950	1	
2900C	Gasoline tank	1909-24	Elliptical	4 00	MH	Blacid	1303B	1	
2901	Filling plug	1909-24	2 1/2"	10		Biblist	1317	1	
2902B	Sediment bulb	1909-24	With pet cock	90		Bickers	2088	1	
2908	Pet cock	1909-24	Order 3079						
2909	Feed pipe	1909-24	40 3/4" (Car and Truck)	25		Billet	1364	1	
2909B	Feed pipe	1916-24	51 3/4"	30		Bismuth	7965AR	1	
2909C	Feed pipe	1918-19	66 1/2"	35		Bisque	9775R	1	
2909D	Feed pipe	1909-24	56 1/2"	35		Betray	8690	1	
2909E	Feed pipe	1924	48 3/4"				7965B	1	
2909F	Feed pipe	1924					7965C	1	
2910	Feed pipe pack nut	1909-24	3/2" x 18 thds.	05		Billow	1374	2	
2911	Feed pipe	1915-24	78"	60		Becrap	1394R	1	
2913	Feed pipe gasket	1909-24		02		Fester	5892	2	
2914	Gas tank support—R	1917-20	For round tank	25		Bistort	2132	1	
2914B	Gas tank support—R	1920-24	For elliptical tank	20		Bitume	2132B	1	

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	No. per Car	Req.
GASOLINE TANK—Continued									
2915	Gas tank support—L	1917-20	For round tank	\$ 0 20		Bivous	2133	1	
2915B	Gas tank support—L	1920-24	For elliptical tank	20		Blzarre	2133B	1	
2916	Feed pipe clamp	1921-24		01		Blacken	2118	1	
MOTOR									
2990	Engine assembly	1909-24				MH	Calamite	532C	1
2991	Cylinder assembly	1909-24	(Oversize cylinder)	55 00		MH	Calamus	449	1
x3000C	Cylinder	1909-24		25 00		MH	Calcox	400D	1
x3000B	Cylinder (bore 1/8" oversize)	1909-24		15 00		MH	Calche	400E	1
3001	Cylinder head	1909-24		6 00		MH	Cabin	401C	1
3002	Cyl. head gasket	1909-24		30		MH	Caboose	402B	1
3003	Cyl. head cap screw	1909-17	7/8" x 2 1/4"	05			Cackle	483B	15
3003B	Cyl. head cap screw	1918-24	7/8" x 3 1/4"	05			Chub	483C	1
3004	Cyl. head outlet con.	1909-16		35		MH	Cadow	446C	1
3004B	Cyl. head outlet con.	1917-24		30		MH	Canis	8719	1
3005	Cyl. head outlet con. gasket	1909-24		05		MH	Caddy	445B	1
3006	Cyl. head outlet hose	1909-24	2" x 4'	15			Cadet	448B	1
3007	Cyl. head outlet hose clip	1909-24	2 3/8" dia.	05			Cadger	607B	2
3008	Cyl. head outlet con. screw	1909-24	1 1/8" x 1 1/4"	05			Cadmean	550C	2
3009B	Cyl. front cover	1909-19		1 00		MH	Cage	690B	1
3009C	Cyl. front cover	1919-24	Starter type	1 00		MH	Canard	690C	1
3010	Cyl. cover bolt and nut	1909-24	Order 4808 & 2515						
3011	Cyl. cover cap screw	1909-24	3/8" x 1 1/4"	03			Cafoot	432	3
3012	Cyl. cover felt	1909-24	Felt	05			Caitiff	504	1
3013	Cyl. cover liner	1909-19	Paper	02			Cajole	505B	1
3013B	Cyl. cover liner	1919-24	Paper—Starter type	02			Cajom	505C	1
3014	Cyl. cover and crank case bolt and nut	1909-24	Order 3362 & 2515						
3015	Cyl. water inlet con.	1909-24	Cast iron	30		MH	Calcine	442B	1
3016	Cyl. inlet con. screw	1909-24	1 1/8" x 1 1/2"	03			Caldron	597	2
3017	Time gear cover	1919-24	Starter type	90		MH	Calco	1754B	1
3017B	Time gear cover	1919-21		90		MH	Calix	1754AR	1
3017C	Time gear cover gasket	1919-24		01			Candid	1775	1
3017D	Time gear cover plate	1919-24		05		MH	Canine	1773	1
3018	Cyl. water inlet gasket	1909-24	Copper	03		MH	Calfey	596	1
3019B	Cyl. water jacket plug	1914-24		02			Canon	5919	3
3021	Piston only	1909-24	3 3/4" dia.	95		MH	Callous	418CR	4
3021B	Piston only	1909-24	.0025" oversize	95		MH	Chopin	418DR	4
3021C	Piston only	1909-24	.03125" oversize	95		MH	Chord	418ER	4
3021D	Piston only	1909-24	.033" oversize	95		MH	Chute	418FR	4
3021E	Piston only	1909-24	.005" oversize	95		MH	Chyle	418GR	4
3021F	Piston and pin assy.	1909-24	3 3/4" dia.	1 20		MH	Chymac	4473C	4
3021G	Piston and pin assy.	1909-24	.0025" oversize	1 20		MH	Chymef	4473DR	4
3021H	Piston and pin assy.	1909-24	.03125" oversize	1 20		MH	Chymig	4473ER	4
3021J	Piston and pin assy.	1909-24	.033" oversize	1 20		MH	Chymoh	4473FR	4
3021K	Piston and pin assy.	1909-24	.005" oversize	1 20		MH	Chymuj	4473GR	4
3021L	Piston only	1909-24		95		MH	Chyneb	418H	4
3021M	Piston only	1909-24	.0025" O. S.	95		MH	418I		
3021N	Piston only	1909-24	.005" O. S.	95		MH	418J		
3021P	Piston only	1909-24	.03125" O. S.	95		MH	418K		
3021Q	Piston only	1909-24	.033" O. S.	95		MH	418L		
3021R	Piston and pin	1909-24		1 20		MH	4473H		
3021S	Piston and pin	1909-24	.0025" O. S.	1 20		MH	4473IR		
3021T	Piston and pin	1909-24	.005" O. S.	1 20		MH	4473JR		
3021U	Piston and pin	1909-24	.03125" O. S.	1 20		MH	4473KR		
3021V	Piston and pin	1909-24	.033" O. S.	1 20		MH	4473LR		
3022	Piston pin	1909-24		30			Callot	419B	4
3022 1/2	Piston pin bushing	1909-24	934" O. D.	20			Callow	668AR	4
3022C	Piston pin bushing	1909-24	872" O. D.	20			Calloze	668B	4
3023	Piston ring	1909-24	1 1/2" x 3 3/4"	15			Calny	422C	12

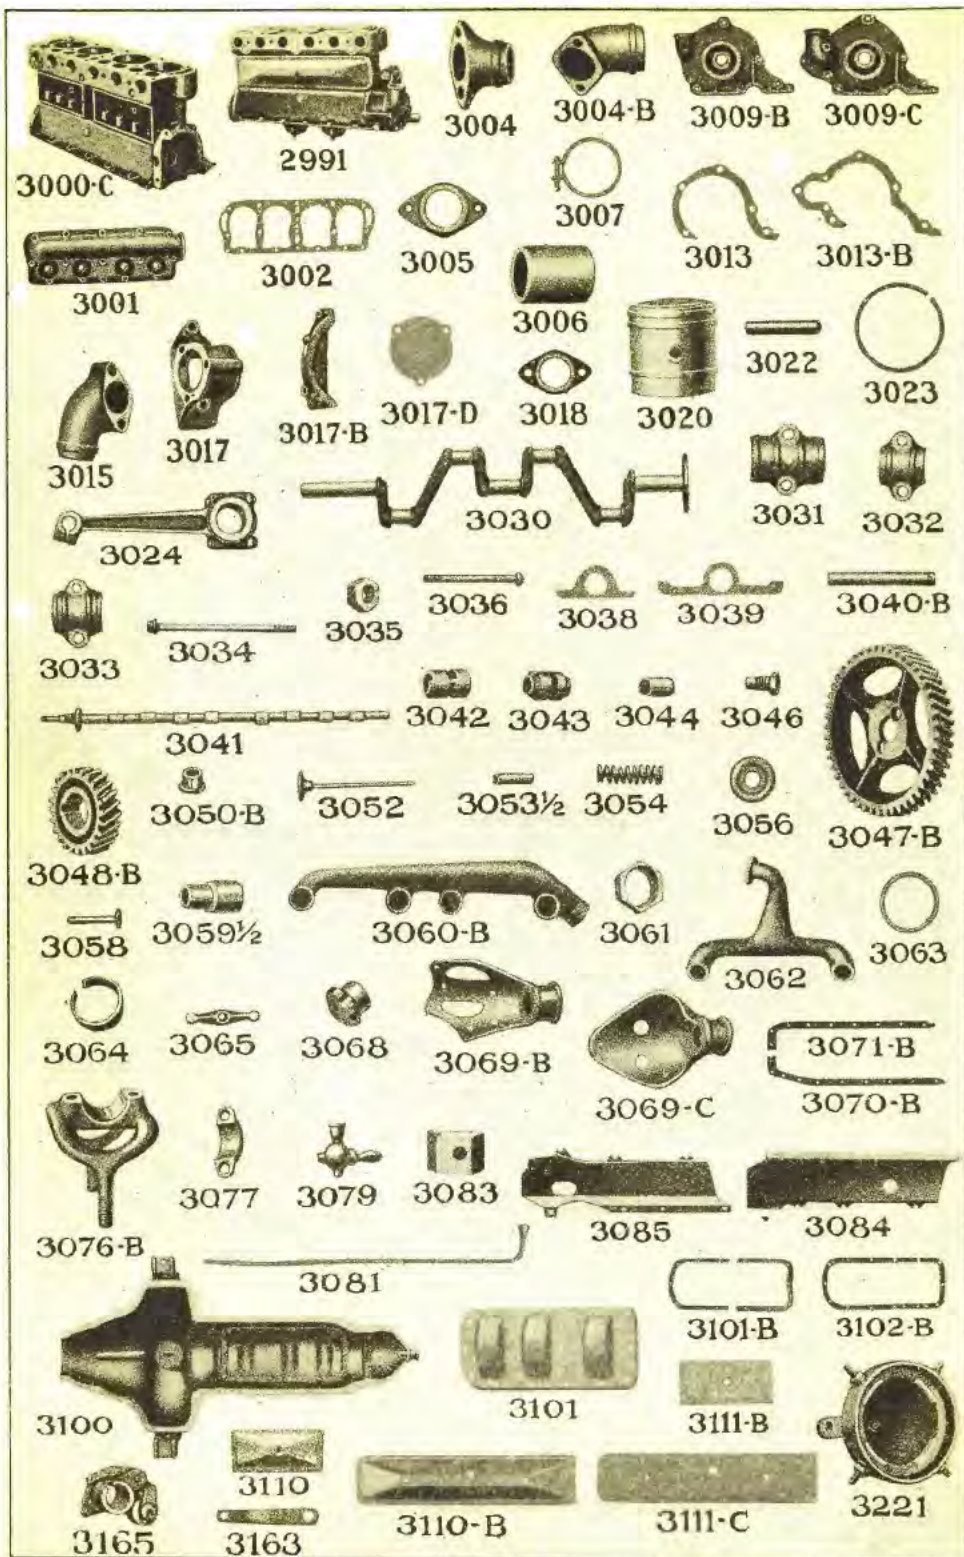

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	No. per Car	Req.
MOTOR—Continued									
3038	C. S. bearing liner—center and front.	1909-24	1 1/8" long, brass.	\$ 0 01		Cannon	502B	8	
3039	C. S. rear bearing liner.	1909-24	3" long, brass.	01		Canny	503B	4	
3040	C. S. starting pin.	1909-20	3/8" x 2 3/4"	05		Canoe	529B	1	
3040B	C. S. starting pin.	1920-24		05		Capable	529C	1	
3041	CAM SHAFT.	1909-24		2 50	MH	Canreen	410	1	
3042	Cam shaft front bearing.	1909-24	2" long.	35		Canter	411AR	1	
3042B	Cam shaft front bearing.	1924		35			411B	1	
3043	Cam shaft center bearing.	1909-24	2 1/8" long.	35		Canthus	412B	1	
3044	Cam shaft rear bearing.	1909-24	1 1/8" long.	15		Canto	413	1	
3045	Cam shaft bearing ring.	1909-24	1 1/8" x 1 1/8"	03		Canvas	534	2	
3046	Camshaft bear'g setscrew.	1909-24	1/8" x 5/8"	05		Capelin	414	2	
3047B	Time gear—large.	1909-21	Spiral.	90	MH	Clang	415B	1	
3048B	Time gear—small.	1909-24	Spiral.	60	MH	Claret	416B	1	
3049	Cam shaft gear dowel pin.	1909-24	3/8" x 1 1/8"	02		Capra	417	2	
3050B	Cam shaft gear lock nut.	1909-24		10		Captive	4453	1	
3051	Small time gear key.	1909-24		03		Capsize	477	1	
3052	Valve.	1909-24	Standard.	15	MH	Capstan	424B	8	
3052B	Valve.	1909-24	oversize stem.	15	MH	Cake	424AR	8	
3053 1/2	Valve bushing.	1909-24	5/8" O. D. x 2" long.	25		Captain	428	8	
3054	Valve spring.	1909-24		05		Capture	431	8	
3056	Valve spring seat.	1909-24		05		Carack	425	8	
3057	Valve spring seat pin.	1909-24		05		Caranx	429	8	
3058	Push rod.	1909-24	Standard.	10	MH	Carat	426B	8	
3058B	Push rod.	1909-24	oversize stem.	10	MH	Canтата	426AR	8	
3059 1/2	Push rod bushing.	1909-24	Iron.	25		Chippy	427	8	
3060B	Exhaust manifold.	1913-24		1 25	MH	Chirp	4483	1	
3061	Exhaust pipe pack nut.	1909-24	1 1/8" x 18 thds.	20		Chitter	518	1	
3062	Inlet pipe.	1909-24		1 00	MH	Chloris	512B	1	
3063	Inlet & exh. pipe gasket.	1909-24	1 1/8" O. D. copper.	02	MH	Choker	513	6	
3064	Inlet & exh. pipe gland.	1909-24	1 1/8" dia. iron.	01		Chopper	514	6	
3065	Inlet & exh. pipe clamp.	1909-24	2 1/2" long.	10	MH	Choral	515	4	
3066	Inlet & exh. clamp stud.	1909-24	3/8" x 3 1/2"	05		Chorus	516	4	
3066B	Inlet & exh. clamp stud nut.	1909-24		03		Humbler	517	1	
3068	Breather pipe.	1909-24	1 1/2" long.	10	MH	Chuck	4468	1	
3069B	C. C. front end support.	1911-17		1 00		Clam	801C	1	
3069C	C. C. front end support.	1917-24		75		Clack	801D	1	
3070B	C. C. & cyl. gasket—left.	1909-24	Cork.	05		Cider	886	1	
3071B	C. C. & cyl. gasket—right.	1909-24	Cork.	05		Cigar	887	1	
3072	C. C. and cyl. cover cap screw.	1909-24	3/8" x 1"	03		Cinter	1388	2	
3073	C. C. arm bolt—side.	1909-24	3/8" x 2 1/2"	05		Crocer	479	2	
3074	C. C. arm bolt—top.	1909-24	3/8" x 3 1/2"	05		Heath	940	2	
3074B	C. C. arm bolt nut.	1909-24	Order 2515.						
3075B	C. C. front bearing and spring clip assy.	1921-24		80		Cirrut	2921B	1	
3076B	C. C. front bearing and spring clip.	1921-24		60		Circean	320C	1	
3076C	C. C. front bearing and spring clip nut.	1921-24	Order 2548.						
3077	C. C. front bearing cap.	1909-24	Iron.	10		Clzar	321	1	
3078	C. C. front bearing screw.	1909-24	1/8" x 1 1/2"	05		Clabber	322	2	
3078B	C. C. front bearing screw.	1921-24	Order 3008.						
3078C	C. C. front bearing lock washer.	1921-24		01		Clachan	5636	2	
3079	Crank case oil cock.	1909-24		15		Clamber	1515	2	
3080	C. C. drain cup plug.	1909-24	Order 2532.						
3080B	C. C. drain cup plug gask.	1909-24		03	MH	Chif	4339	1	
3081	Crank case oil tube.	1909-24		20		Cleavast	543B	1	
3083	Crank case arm block.	1909-24	Wood.	05		Clergy	890	2	
3084	Engine pan—right.	1909-24		30	MH	Clicket	1330	1	
3085	Engine pan—left.	1909-24		30	MH	Clentage	1331B	1	
3088B	Engine pan and hood board bolt.	1909-24	1/4" x 3 1/4"	03		Pitter	4074	2	
3088C	Engine pan and hood board bolt.	1909-24	1/4" x 3 3/8"	03		Pitpan	4073	2	
3088D	Engine pan and hood board bolt.	1918-24	Truck.	03		Shamble	4073	2	
3088E	Engine pan and hood board bolt nut.	1909-24		01		Missive	1309		
3100	CRANK CASE.	1912-24		11	00	MH	Closet	1526E	1
3101	Crank case lower cover.	1912-24	6 1/8" x 15 1/2"	35	MH	Closure	1582	1	
3101B	Crank case lower cover reinforcement.	1912-24		25		Clothes	4378-4379	1	
3102B	C. C. lower cover gasket.	1912-24	Cork.	10		Clotting	1586	1	
3103	C. C. lower cover screw.	1912-24	1/4" x 1 1/2"	03		Cloutlet	4328	14	
3110	Cylinder valve cover.	1912-24	3 3/4" x 8"	15	MH	Clovate	656A	2	
3110B	Cylinder valve cover.	1921-24		20	MH	Clown	656B	1	
3111B	Cyl. valve cover gasket.	1912-24	Cork.	05		Cloven	660A	2	
3111C	Cyl. valve cover gasket.	1921-24	Cork.	10		Cloyme	660B	1	

When ordered to replace old style C. C. front frame bearing also order 2-3008, 2-3076C, 2-3078C, 1-3664, 1-3810 and 2-753 cotter.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

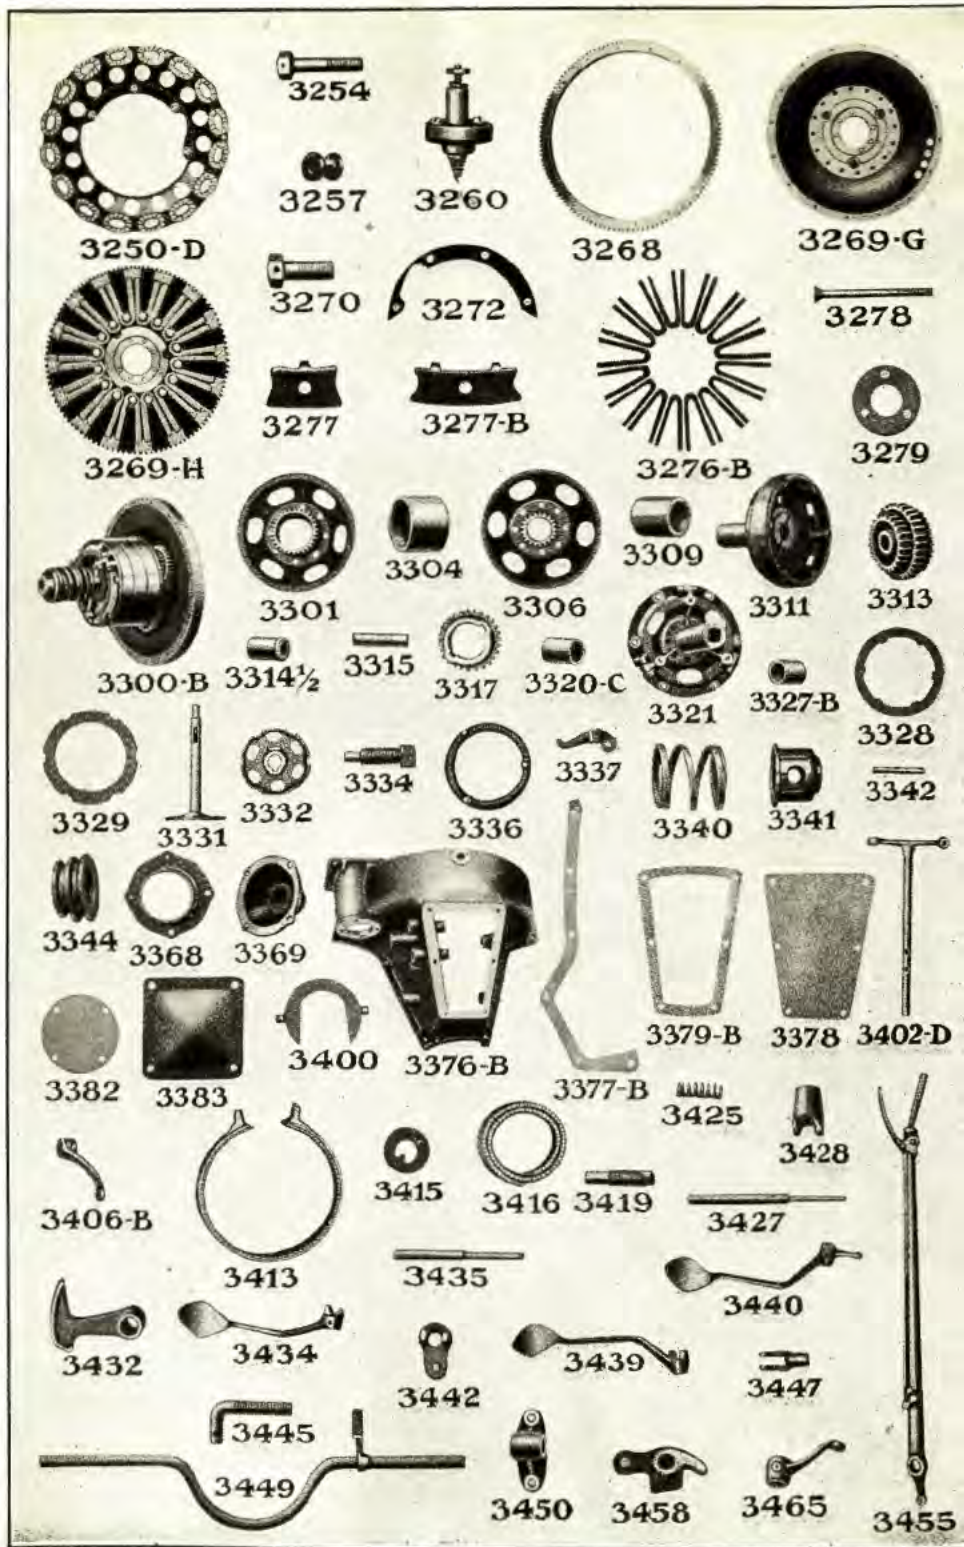


Plate No. 4

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	No. per Car	Req.
MOTOR—Continued									
3112	Cyl. valve cover screw	1912-24	3/8" x 2 1/4"	\$ 0	03	Compone.	654	2	
3114	C. C. arm with rivets	1909-24		30		Cloth	815B	2	
3115	Crank case arm rivet	1909-24		05		Clothier	312		
COMMUTATOR									
3162	Com. case support bolt	1912-19	3/8" x 2 1/4" x 24 thds.	05		Connote	4441	1	
3162B	Com. case support bolt	1919-24	Starter type	05		Constrict	1756	1	
3163	Com. case spring	1912-24	3 1/4" C. to C.	05		Conoid	689	1	
3165	Com. brush only	1912-24		20		Conquest	4481	1	
3176C	Com. oiler	1919-24		05		Cooke	480C	1	
3177	Com. felt ring	1912-24	Felt	02		Coombox	5930	1	
3206	Com. brush cap	1909-24	3/8" dia.	02		Convert	465B	1	
3207	Com. brush cap pin	1909-24	1/8" x 3/8"	01		Convict	466	1	
3210	Com. contact point nut	1910-24	1/4" hex.	01		Cooper	472B	8	
3220	Com. lock nut	1909-23	3/8" x 18 thds.	03		Grater	471	1	
3221	Com. case with fibre	1912-24		50		Crato	5908	1	
3222	Com. shield	1912-24		02		Crash	5923	1	
MAGNETO									
*3250D	Magneto coil assembly	1915-24	Used with 3/4" magnets	6	00	Crafr	5941B	1	
3252	Mag. spool support screw	1909-24	Order 3371						
3254	Magnet bolt	1909-24	3/8" x 1 1/2"	03		Corbeil	537B	16	
3255	Magnet bolt washer	1911-24	3/8" hole, 3/4" dia.	01		Corupt	624	16	
3257	Magnet brass support	1909-24	3/8" x 3/4", brass	05		Cordial	535C	16	
3260	Magneto contact assy.	1909-24	On trans. cover	20		MII	Cormus	1545	1
3261B	Magneto contact nut	1909-24		01		Cornute	1508	2	
3261C	Magneto contact screw washer	1909-24		01		Cornel	1565		
3262	Magneto contact spring	1909-24	Coil spring	05		Cornise	1509	1	
3262B	Magneto contact spring and spring assb.	1919-24		10		Corsage	4350		
3266	Mag. contact fibre screw	1909-24	1/2" long	01		Cortile	1505	8	
3267	Magneto primary insulating block	1915-24		03		Crumple	4382		
3267B	Mag. contact insulator	1919-24		05		Crush	1503B		
3267C	Magneto contact insulator shell	1919-24		03		Crutch	8611		
3268	Fly wheel ring gear	1919-24	For starter	90		MII	Cousin	1385	1
3269C	Fly wheel	1911-19		6	00	MH	Cosmic	701B	1
3269G	Fly wheel only	1919-24	Starter type	5	00	MII	Cozy	701C	1
3269H	Fly wheel with ring gear and magnets assmbld.	1919-24	Starter type	15	00	MII	Cranch	5946B	1
3270	Fly wheel cap screw	1909-24	3/8" x 1 1/2"	10			Cossack	721	4
3271	Fly wheel dowel pin	1909-24	1/8" x 1 1/8"	05			Costard	722	2
3272	Magneto coil support shim	1909-24	Sheet steel	05			Costrel	584AR	1
3272B	Magneto coil support washer	1909-24		doz.	05		584B	4	
3276B	Magnet, per set (16)	1915-24	3/8"	4	00		Court	5933	16
3277	Magnet clamp	1911-24		03			Cotland	623	16
3278	Magnet clamp screw	1911-24	2 1/4" x 24 thds., brass	02			Cottage	625	16
3279	Magneto-contact washer	1909-24	On trans. cover—cork	01			Cough	560	1
TRANSMISSION									
3300B	Transmission assembly	1919-24	Less gear and magnets	35	00	MH	Daciam	744C	
3301	Trans. reverse plate assy.	1909-24		2	40	MH	Dacoit	747	1
3304	Trans. reverse gear bushing	1909-24	2 1/2" ream	40			Daddy	705	1
3305	Trans. rev. & S. S. rivet	1909-24	1/2" x 1 1/4"	doz.	05		Dado	708	8
3306	Trans. slow speed plate assembly	1909-24		2	30	MH	Dagger	748	1
3309	Trans. slow speed gear bushing	1909-24	1 1/2" ream	30			Dairy	745	1
3310	Trans. brake drum rivet	1909-24	3/8" x 1 1/4"	doz.	05		Daisy	711	8
3311	Trans. brake drum assy.	1909-24		2	40	MH	Dakir	750	1
3313	Trans. triple gear assy.	1909-24		1	40	MH	Dallop	751B	3
3314 1/2	Trans. triple gear flanged bushing	1911-24	1 1/8" dia. x 1 1/8"	20			Dalriad	716B	3
3315	Trans. triple gear shaft	1909-24	1 1/8" dia x 2 1/2"	15		MII	Dalrotz	715	3
3316	Trans. triple gear riveting pin	1909-24	3/8" x 1 1/8"	doz.	05		Damar	720	24
3317	Trans. driven gear	1909-24	27 teeth	70		MH	Damask	713	1
3318	Trans. driven gear key	1909-24		03			Dampen	714	2
3320C	Trans. driven gear sleeve bushing	1909-24	1 1/2" long	20			Dark	712	2
3320D	Driven gear sleeve washer	1909-24		05			Darken	776	3
3321	Trans. driving plate assy.	1909-24		3	00	MH	Dannock	749	1
3323	Trans. driving plate screw	1909-24	Order 3371						
3325	Trans. driving plate rivet	1909-24	3/8" x 3/4"	doz.	05		Darner	736	8

*Magneto coil assembly from car less than 1 year old may be exchanged with dealer at \$2.00 each.
 †Magnets may be exchanged with dealer at \$1.75 per set.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	No. per Car	Req.
TRANSMISSION—Continued									
3327B.	Trans. driving plate bushing	1909-24	1 1/2" x 1 1/4"	\$ 0 15		Daris	772	1	
3328	Trans. clutch disc-small	1909-24	6" dia.	10	MH	Dauphin	727	12	
3329	Trans. clutch disc-large	1909-24	6 1/4"	10	MH	Davine	728	13	
3331	Trans. gear shaft	1909-24	1" dia. x 7 1/2" over all	1 25	MH	Decurt	723B	1	
3332	Trans. clutch disc drum	1909-24	4 1/8" dia.	1 25	MH	Deeply	725B	1	
3333	Trans. clutch disc drum key	1909-24		05		Defalk	726B	1	
3334	Trans. clutch disc drum set screw	1909-24	3/8" x 3/8"	05		Defeat	752	1	
3336	Trans. clutch push ring	1909-24	6 1/4" O. D.	35	MH	Defle	770	1	
3337	Trans. clutch finger	1909-24		15	MH	Define	732B	3	
3337 1/2	Trans. clutch finger screw	1909-24	3/8" x 3/4" x 2 1/2" thds.	05		Defleur	756	3	
3337B.	Trans. clutch finger and screw	1909-24		20	MH	Defix	765	3	
3338	Trans. clutch finger pin	1909-24	1 1/4" x 1 1/2"	01		Deform	735	3	
3340	Trans. clutch spring	1909-24	2 3/8" dia. x 2 3/4" long	25		Defoue	737	1	
3341	Trans. clutch spring support	1909-24		10	MH	Delator	738	1	
3342	Trans. clutch spring thrust ring pin	1909-24	1/8" x 2 3/8"	03		Delete	739	1	
3344	Trans. clutch shift	1909-24		45	MH	Delight	733	1	

TRANSMISSION COVER

3362	Trans. cover bolt	1909-24		03		Era	79		
3362B.	Trans. cover bolt nut	1909-24	Order 2515						
3363	Trans. cover gasket (front)	1909-24	3/8" x 1 1/2" x 15 1/2" felt	05		Defy	872B	1	
3367	Trans. cover door screw	1909-24	1/8" x 1 1/2"	02		Demain	430	1	
3368	Universal ball cap (rear)	1909-24	5 3/8"	30	MH	Demargh	818	6	
3369	Universal ball cap (front)	1909-24	Bearing included	80	MH	Demarch	819D	1	
3371	Universal ball cap screw	1909-24	3/8" x 1 1/2"	03		Demisc	731	2	
3372	Universal ball cap bolt and nut	1909-24	Order 3362 & 2515						
3375	Trans. cover screw	1909-24	Order 3072						
3376B.	TRANS. COVER	1919-24	Starter type	7 00	MH	Den	826E	1	
3377B.	Trans. cover gasket	1909-24	Cork	10		Dennet	885B	1	
3378	Trans. cover door	1911-24	9 1/2" long	15	MH	Dental	1546D	1	
3379B.	Trans. cover door gasket	1911-24	Cork	05		Denude	1547C	1	
3380	Bendix cover	1919-24		15	MH	Tendon	1763	1	
3381	Bendix cover gasket	1919-24		03		Tingh	1764	1	
3382	Trans. cover rear plate	1919-24		05	MH	Deputy	1761	1	
3383	Trans. cover front plate	1919-24		05	MH	Descry	1758	1	

TRANSMISSION CONTROL

3400	Trans. clutch release ring	1909-24	3 1/2" long	20	MH	Detail	741	1	
3402D.	Clutch lever and shaft	1913-24		30	MH	Disdain	1548		
3403	Clutch lever screw	1909-24	Order 3973						
3403B.	Clutch lever screw nut	1909-24	Order 3066B						
3405	Clutch lever pin	1909-24	1/4" x 1 1/8"	01		Detour	1553	1	
3406B.	Clutch release fork—right or left	1913-24		15	MH	Deuce	4345	2	
3406C.	Clutch release fork pin	1913-24	Order 3405						
3411	Clutch lever clevis pin	1909-24	Order 2564						
3413	TRANSMISSION BAND ASSEMBLY	1909-24	(Bands will be exchanged by dealers at 45c each.)	60	MH	Disblame	838B	3	
3415	Trans. band washer	1909-24	2 1/2" hole x 3/8" dia.	03		Discre	840	2	
3416	Trans. band lining	1909-24		25	MH	Disedge	1562	3	
3416B.	Trans. band lining—set of 3, inc. rivets—in carton	1909-24		1 00		Disenroll	1564	1	
3419	Trans. band adj. screw	1909-24	3/4" x 3 3/8"	10		Disfriar	1533	1	
3420	Trans. band adj. screw nut	1909-24		05		Dislimb	1532	1	
3421B.	Trans. band ear iron rivet	1909-24	1/8" x 3/8"	05		Dismal	843	2	
3422B.	Trans. band brass rivet	1909-17	1/8" x 1 1/2"	05		Dismast	844B	6	
3423B.	Trans. band brass rivet	1909-24	1/8" x 1 1/2"	05		Dismaw	845B	24	
3425	Trans. band spring	1909-24	Coil	03		Dispark	841B	3	
3426	Trans. band adj. nut	1909-24	1/8" x 20 thds.	05		Displat	851	2	
3427	Slow speed shaft	1909-24	5/8" x 9 3/8"	15	MH	Disputz	848B	1	
3428	Slow speed notch	1909-24		25	MH	Distrand	4327	1	
3429	Slow speed notch pin	1909-24	1/4" x 1 1/8"	01		Disrobe	1560	1	
3432	Speed lever	1909-24		10	MH	Distaff	862B	1	
3434	Reverse pedal	1909-24		50	MH	Disting	4324	1	
3435	Brake and rev. pedal shaft	1909-24	5/8" dia. x 7 1/2"	15	MH	Distrite	849B	2	
3436	Brake and rev. pedal support	1909-24		15		Distune	4325	2	
3437	Brake and rev. support bolt	1909-24	3/8" x 1 1/2"	05		Ditcher	1534	2	
3437B.	Brake and rev. support bolt nut	1909-24	Order 2515						

†When ordered to replace cover on cars below 2044100 also order 3402D clutch lever and shaft.
‡When using short bushings in making repairs remove driving plate key.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	No. per Car	Req.
TRANSMISSION CONTROL—Continued									
3439	Brake pedal	1909-24		\$ 0 50	MH	Dittoot	4323	1	
3440	Clutch pedal	1909-24		50	MH	Ditty	854B	1	
3441	Pedal pin	1909-24	Order 3405						
3442	Clutch pedal support	1909-24		15		Dookad	4326	1	
3443	Clutch pedal support bolt	1909-24	3/8" x 2"	05		Doorga	1536	1	
3443B.	Clutch pedal support bolt nut	1909-24	Order 2515						
3445	Slow speed connection	1909-24		05		Doree	1540	1	
3446	Slow speed con. lock nut	1909-24	Order 2503F						
3447	Slow speed con. clevis	1909-24		10		Dormier	802	1	
3448	Controller quadrant	1909-24	On frame	20		Dormouse	309B	1	
3449	Controller shaft with speed lever	1909-24		60	MH	Doron	1557	1	
3450	Controller shaft bracket	1909-24	On frame	15	MH	Dorrer	311	2	
3452	Controller shaft bracket bolt	1909-24		03		Fog	315	4	
3452B.	Controller shaft bracket bolt nut	1909-24		02		Frolle	316	4	
3455	Hand brake lever assy	1909-24		1 00	MH	Dotant	1550	1	
3456B.	Hand brake lever pin	1909-24	Order 2574						
3457	Hand brake lever key	1909-17		05		Doublet	874	1	
3458	Hand brake lever pawl	1909-24		05		Doucet	875	1	
3459	Hand brake lever pawl pin	1909-24	1/8" x 1 1/8"	01		Doura	876	1	
3460	Hand brake lever pawl rod	1909-24		10	MH	Dovecote	877	1	
3462	Hand brake lever pawl lift assembly	1909-24	Handle and spring	10		Dovekle	4363	1	
3463	Hand brake lever pawl lift spring	1909-24		02		Dawcet	888	1	
3465	Hub brake lever	1909-24		15	MH	Dawdy	864	1	
3466	Hub brake lever pin	1909-24	Order 3405						
3467	Hub brake lever clevis	1909-24	Order 3447						
3468	Hub brake pull rod—L.	1909-24	54 1/2" long	30	MH	Drongo	891B	1	
3469	Hub brake pull rod—R.	1909-24	54 1/2" long	30	MH	Dropax	1513B	1	
3470	Brake rod support—L.	1909-24		10		Dropsy	1367C	1	
3471	Brake rod support—R.	1909-24		10		Drugger	1398C	1	
3472	Brake rod support bolt	1909-24	1/4" x 1 1/2"	01		Methol	1308	2	
3472B.	Brake rod support bolt nut	1909-24	Order 3088E						
STEERING GEAR									
3500C.	Steering gear assembly	1911-24	51" long	10 00	MH	Estopped	5044	1	
3501C.	Steering gear rim	1920-24	16"	70		Estuary	901C	1	
3502	Steering gear rim screw	1909-24	No. 9, 3/8"	01		Eblis	6849	4	
3503D.	Steering gear spider	1920-24	16"	55	MH	Etager	902C	1	
3503E.	St. gear spider and rim	1909-24	16"	1 25	MH	Eulogic	995A2	1	
3504	St. gear cover	1909-24	2 1/2" x 18 thds.	35	MH	Echole	5039	1	
3505	St. gear cover screw	1909-24	No. 6, 32 x 1/4"	01		Ecope	910	1	
3506	St. gear cover bushing	1909-24	1" long steel	15		Echo	914	1	
3506H.	St. gear driving pinion washer	1909-24	Steel	03		Elf	5026	1	
3507	St. gear internal gear case and bushing	1909-24		1 00	MH	Egg	5036	1	
3509	St. gear quadrant	1909-24		10	MH	Ectype	906B	1	
3511	St. gear wheel nut	1903-24	3/8" x 16 thds.	10		Edict	913	1	
3512C.	St. gear tubing assy.	1912-24		4 00	MH	Ethicer	5016	1	
3513C.	St. tubing flange screw	1913-24	1/4" x 1 1/4"	03		Platter	5018	3	
3514	St. tubing flange screw nut	1913-24		02		Harrow	926	1	
3516C.	St. gear post	1912-21		1 75	MH	Estricked	5043	1	
3516D.	Steering gear post	1921-24		1 75	MH	Esturie	5043B	1	
3517	St. gear pinion	1909-24	12 teeth	15	MH	Egad	916	3	
3518	St. gear pinion pin—short	1909-24	3/8" x 1 1/8"	02		Egest	917	2	
3518B.	St. gear pinion pin—long	1921-24		02		Egoism	918	1	
3519	St. gear drive pinion	1909-24	12 teeth	30	MH	Egger	911	1	
3520	St. gear drive pinion gear	1909-24	1 1/2" sq. x 1 1/2"	03		Egma	909	1	
3523	St. gear post castle nut	1909-24	Order 2561B						
3524E.	Throttle rod	1912-24	47 1/2"	30	MH	Euter	5038	1	
3525E.	Lead rod	1912-24	51 1/2"	30	MH	Evans	5037	1	
3527	Lead & throttle rod spring	1909-24		02		Elite	935	2	
3528	Lead & throttle rod collar	1909-24	1/2" bore x 1 1/2"	02		Elope	936	2	
3529	Lead & throttle rod pin	1909-24	1/4" x 1 1/2"	01		Elvan	937	5	
3530	Lead rod lever	1909-24		10	MH	Embank	946	1	



Plate No. 5

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	No. per Car	Req.
STEERING GEAR—Continued									
3544	St. brkt. felt washer	1909-24		\$ 0 02		Endow	943	1	
3545	St. brkt. bushing	1909-21	3/4" bore, brass, 2 pieces	10		Envault	944-5027	1	
3545B	St. brkt. bushing	1921-24		20			944	1	
3546	St. brkt. block	1909-24	Wood	10		Empact	945	1	
3546B	St. brkt. block	1918-24	Truck	10		Drift	TT945	1	
3547	St. gear ball arm	1909-24		40		MH. Eparch	929B	1	
3548	St. gear ball arm key	1909-24		03		Ephod	930	1	
3549	St. brkt. dust cap	1918-24	Truck	05		Drum	TTS044	1	
BODY PARTS									
3601B	Body bracket on body	1910-24	Center	10		Fabric	1624	2	
3601C	Body bracket—front—R.	1921-24	T. C., Rbt. & Coupe	20		Fabulist	7267B	1	
3601D	Body bracket—front—L.	1921-24	T. C., Rbt. & Coupe	20		Fabulize	7268B	1	
3601E	Body bracket—rear	1913-24	Rbt. and Coupe	05		Facetal	5650	2	
3601F	Body bracket—rear—R.	1921-24	T. C.	20		Facial	7137C	1	
3601G	Body bracket—rear—L.	1921-24	T. C.	20		Facient	8001B	1	
3602E	Body bracket con. bolt	1916-24	3/8" x 1 1/4"	03		Pilgrim	2431	6	
3602F	Body brkt. con. bolt nut	1916-24	Order 2710						
3624E	Front floor rubber mat	1915-24	28 1/4" x 29 1/4" Tr. & Rbt.	90		Faith	7299	1	
3626C	Floor board with plate (first)	1915-24		50		MH. Farrago	4200	1	
3627C	Floor board with plate (second)	1915-24		50		MH. Fascia	4201	1	
3628B	Floor board with plate (third)	1915-24		65		MH. Fascine	7104	1	
3630	Floor board forward plate for pedals	1909-24	2 1/8" x 3 1/4"	10		MH. Fateful	1400C	1	
3632	Floor board rear plate for pedals	1909-24	2 1/8" x 4 1/4"	10		MH. Father	1095C	1	
3633	Floor board plate for side lever	1909-24	2 3/8" x 8 3/4"	05		MH. Fathom	1094B	1	
3634D	Dash	1913-14		7 00		Flango	5336	1	
3634E	Dash	1915-16		5 00		MH. Fleet	7462	1	
3634H	Dash (steel)	1917-23		2 25		MH. Frislet	8754BR	1	
3634J	Dash (steel)	1923-24		2 25		MH. Frislv	8754C	1	
3638B	Dash (shield)	1919-24		10		Faubage	5432B	1	
3639	Dash weatherstrip—side	1917-23		05		Flicker	8747	2	
3639B	Dash weatherstrip—top	1917-23		15		Floren	8752R	1	
3640C	Dash bracket—left	1917-23		20		Foal	8722	1	
*3640D	Dash bracket—left	1923-24		15		Foele	8722B	1	
3641C	Dash bracket—right	1917-23		20		Fowl	8721	1	
*3641D	Dash bracket—right	1923-24		15		Fowler	8721B	1	
3642B	Dash brkt. to dash bolt	1917-24		03		Rodent	8740	4	
3642C	Dash bracket to dash bolt nut	1917-24	Order 3514						
3653B	Dash to body brkt. bolt	1915-24	Touring car	03		Planet	4248	2	
3653C	Dash to body brkt. bolt nut	1915-24	Order 4805C						
3654	Dash to body gasket	1918-24		05		Feaze	8769		
3660C	Tail lamp and license bracket assembly	1915-24	Touring car, Sedan	25		MH. Flour	7506AR	1	
3660D	Tail lamp and license bracket assembly	1915-24	Runabout and 1916-17 Coupelet	25		MH. Flute	7505	1	
3660E	Lamp and license brkt. & support assy.	1923-24	T. C. & Roadster without starter and dem. rims	75		MH. Fluva	7506B	1	
3661	Lamp and license brkt. support	1923-24	T. C. & Roadster with starter, without dem. rims	25		MH. Fluwl	8767B	1	
3662	Front license bracket—R.	1920		10		MH. Fluffy	287	1	
3663	Front license bracket—L.	1920		10		MH. Fluently	288	1	
3664	Front license bracket	1921-24		10		MH. Fluxion	493	1	
3667E	Front seat cushion	1909-21		6 00		MH. Farce	8076A	1	
3667F	Front seat cushion	1921-24		6 00		MH. Farcal	8076B	1	
3670D	Rear seat cushion	1909-21		6 50		MH. Forum	7032A	1	
3670E	Rear seat cushion	1921-24		6 50		MH. Forthy	7032B	1	
3676B	Rear floor mat	1911-21	30" x 28" wool	1 00		Flatus	1606BR	1	
3676C	Rear floor mat	1911-24		75		Flaut	1606C	1	
3680	Pedal shield	1924		15			1096	1	
3681	Rear deck lock key	1916-24	Coupe and Roadster	10			9484	1	
SPRINGS									
3800	Front spring	1909-24		2 50		MH. Gadan	332	1	
3801	First leaf (main leaf)	1909-24		80		Goif	2943	1	
3802B	Second leaf	1909-24		45		Goose	2935	1	
3803B	Third leaf	1916-24		40		Gopher	2936	1	
3804B	Fourth leaf	1916-24		30		Gosling	2937	1	
3805B	Fifth leaf	1916-24		25		Gossip	2938	1	
3806B	Sixth leaf	1916-24		20		Gothic	2939	1	
3807B	Seventh leaf	1916-24		15		Gaily	2947	1	
3808	Front spring clip	1909-20		20		Galena	325C	2	
3809	Front spring clip nut	1909-24	Order 2551B						
3810	Front spring clip bar	1921-24		25		Gallate	342	1	
3811	Front spring tie bolt	1909-24	1/2" x 2 1/4"	04		Galley	1362	1	
3811B	Front spring tie bolt nut	1909-24		02		Galleon	1363	1	

*Substitute for 3634G—Wood dash *Used with steel dash.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word No.	Fac. No.	No. per Car	Req.
SPRINGS—Continued									
3813B	Front spring hanger	1909-24		\$ 0 25		Gambise	246C	2	
3814	Front spring hanger bar	1909-24		05		Gambiar	7648	2	
3815	Spring hanger nut	1909-24	Order 2719						
3818	Front spring perch-right	1909-19		80	MH	Gamut	274A	1	
3818B	Front spring perch-right	1919-24		50	MH	Garret	274B	1	
3819	Front spring perch-left	1909-19		80	MH	Gander	275A	1	
3819B	Front spring perch-left	1919-24		50	MH	Gastar	275B	1	
3820	Front spring perch bushing	1909-24		05		Gangue	230	4	
3821	Front spring perch nut	1909-21	Order 2828						
3821B	Front spring perch nut	1921-24		05		Garble	240	1	
3823	Front spring pad	1909-24	1 1/2" x 5 3/4"	05		Gannet	262	1	
3824	REAR SPRING	1909-24	8 leaf	6 50	MH	Ganoid	333	1	
3824B	REAR SPRING	1922-24	9 leaf—Sedan	6 75	MH	Ganoine	388	1	
*3824C	Rear spring	1924		5 00	MH	Ganoipo	384R	1	
3825	First leaf (main leaf)	1909-19	Tapered ends	1 50		Gantlope	361A	1	
3825B	First leaf (main leaf)	1918-24		1 35		Gallop	355	1	
3825C	First leaf (main leaf)	1922-24	9 leaf spring—Sedan	1 35		Gantry	389	1	
3826	Second leaf	1909-19	Tapered ends	1 25		Gantols	362A	1	
3826B	Second leaf	1918-24	Square ends	1 10		Galore	362B	1	
3826C	Second leaf	1922-24	9 leaf spring—Sedan	1 10		Gancine	391	1	
3827	Third leaf	1909-19	Tapered ends	1 10		Ganza	363A	1	
3827B	Third leaf	1918-24	Square ends	95		Garnish	363B	1	
3827C	Third leaf	1922-24	9 leaf spring—Sedan	95		Garget	392	1	
*3827D	Third leaf	1924		85		Gargis	379R	1	
3828	Fourth leaf	1909-19	Tapered ends	95		Gaphare	364A	1	
3828B	Fourth leaf	1918-24	Square ends	85		Gender	364B	1	
3828C	Fourth leaf	1922-24	9 leaf spring—Sedan	85		Genera	393	1	
*3828D	Fourth leaf	1924		70		Genesl	380R	1	
3829	Fifth leaf	1909-19	Tapered ends	80		Garden	365A	1	
3829B	Fifth leaf	1918-24	Square ends	75		Genus	365B	1	
3829C	Fifth leaf	1922-24	9 leaf spring—Sedan	75		Genet	394	1	
*3829D	Fifth leaf	1924		55		Genevo	381R	1	
3830	Sixth leaf	1909-19	Tapered ends	75		Garland	366A	1	
3830B	Sixth leaf	1918-24	Square ends	60		Ghoul	366B	1	
3830C	Sixth leaf	1922-24	9 leaf spring—Sedan	60		Ghaut	395	1	
*3830D	Sixth leaf	1924		40		Ghauva	382R	1	
3831	Seventh leaf	1909-19	Tapered ends	70		Garlic	367A	1	
3831B	Seventh leaf	1918-24	Square ends	45		Giant	367B	1	
3831C	Seventh leaf	1922-24	9 leaf spring—Sedan	45		Ginour	396	1	
3832B	Eighth leaf	1909-24	Square ends	35		Gimlet	368B	1	
3832C	Eighth leaf	1922-24	9 leaf spring—Sedan	35		Gimnal	397	1	
3832D	Ninth leaf	1922-24	9 leaf spring—Sedan	30		Gingival	398	1	
3833	Rear spring clip	1909-24		20		Game	326	1	
3833B	Rear spring clip	1922-24	9 leaf spring—Sedan	20		Gelder	1737	2	
3834	Rear spring clip nut	1909-24	Order 2548						
3835	Rear spring clip bar	1909-24	1/2" x 1 1/2" x 1" x 1/4"	05		Gascon	329	2	
3837	Rear spring tie bolt	1909-24	3/8" x 2 1/2"	05		Gastric	1352	1	
3837B	Rear spring tie bolt nut	1909-24		02		Gaufer	1353	1	
3838	Rear spring tie bolt	1922-24	9 leaf spring—Sedan	05		Gaudil	1355	1	
*3838B	Rear spring tie bolt	1924		03		Gaudob	383R	1	
3840B	Rear spring hanger	1909-24		25		Gaulute	91 1/2C	2	
3841	Rear spring hanger bar	1909-24		05		Gauluva	7649	2	
3842	Rear spring leather pad	1909-24		05	MH	Gavel	94	1	
3843	Rear spring perch	1909-24		40	MH	Gavot	2804	2	
3844	Rear sp. perch bushing	1909-24	3/8" bore x 3/4" dia. x 2"	05		Gawky	172	4	
3845	Rear spring perch nut	1909-24	1 1/2" x 16 thds.	05		Gazara	174	2	
3846	Spring perch oiler	1917-24		05		Bilge	2944	4	
3847B	Front spr'g clamp assembly with bolt and nut	1916-24	(for 6 leaf spring)	10		Gown	2953	2	
3848	Rear spr'g clamp assembly with bolt and nut	1909-17		10		Gecko	376	2	
3848B	Rear spr'g clamp assembly with bolt and nut	1918-24		10		Gemmy	378	2	

STARTING CRANK

3901	Starting crank handle	1909-22		20		Heron	520	1	
3902	St. crank handle bolt	1909-22	1/2" x 4 3/8"	10		Hesper	521	1	
3903	St. crank sleeve	1909-22	1 1/2" bore x 1 1/2" x 2 3/4"	10		Herper	523	1	
3905	St. crank ratchet pin	1909-24	1 3/8"	05		Hestern	4491	1	
3906	St. crank ratchet	1909-24		20	MH	Hetman	528B	1	
3908	St. crank spring	1909-24		03		Hilding	626	1	
3909	St. crank handle spring	1915-22		02		Hitter	5911	1	
3910	St. crank assy.	1909-24		50	MH	Hiren	5931	1	

RADIATOR—THERMO-SYPHON

3925	Radiator	1909-16		20 00	MH	Hominy	1100C	1	
3925B	Radiator	1917-23		16 00	MH	Honey	8700B	1	
3925C	Radiator less shell	1917-23		15 00	MH	Hop	8736B	1	
3925D	Radiator	1923-24		16 00	MH	Hophnl.	8700D	1	
3925E	Radiator—less shell	1923-24		15 00	MH	Hoppet	8736E	1	

*Six leaf spring for Roadster.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word No.	Fac. No.	No. per Car	Req.
----------	--------------	------	----------------	-------	------------	---------------	----------	-------------	------

RADIATOR—THERMO-SYPHON—Continued

3926	Radiator cap	1909-24		\$ 0 15	MH	Hothr.	8714	1	
3928	Radiator pad	1909-19	Leather	05		Hovel	1105	2	
3929	Radiator stud	1909-19	3/8" x 2 1/4"	05		Hoxy	1162A	2	
3929B	Radiator stud	1919-24		05		Hoax	1162B	2	
3929C	Radiator stud nut	1909-24		03		Hive	1154	2	
3930	Radiator stud spring	1909-24	Order No. 2742						
3931 1/2	Rad. stud washer nut	1909-24	3/8" x 24 thds.	03		Huffish	1161	2	
3932	Radiator rod	1909-23	20 3/4" long	15	MH	Huller	1111E	1	
*3932B	Radiator rod	1909-24	20 3/4" long	15	MH	Hullb	1111C	1	
*3932C	Radiator rod	1923-24		15	MH	Hullooc	1111D	1	
3934	Radiator rod nut	1909-24	Order 3006B						
3939	Outlet connection pipe	1909-24	1 3/4" x 12"	25		Humlc	1121	1	
3940	Outlet connection cock	1909-24	Order 3079						
3944	Outlet connection hose	1909-24	1 3/4" x 2 3/4"	10		Hungry	507B	2	
3945	Outlet conn. hose clip	1909-24	2 3/4" dia.	05		Huncer	554B	4	
3947B	Radiator shell	1917-23		1 00	MH	Hymnal	8737B	1	
3947C	Radiator shell	1923-24		1 00	MH	Hymnet	8737C	1	
3975	Radiator stud spring upper thimble	1919-24		02		Hump	1115	1	
3976	Radiator stud spring lower thimble	1919-24		03		Hurst	1114	2	
3977	Radiator apron	1923-24		50	MH	Hushal	8816	1	

RADIATOR FAN

3960	Fan and pulley assembly	1909-20		1 25	MH	Hutten	619	1	
3961	Fan blade	1909-20		10		Hyades	611	4	
3961B	Fan blade rivet	1909-20	doz.	05		Hyad	1566	16	
3961C	Fan blade assy.	1920-24		25	MH	Iambe	620	1	
3962B	Dr. fan pulley with bush	1920-24		70	MH	Iaon	618B	1	
3963	Fan drive pulley	1909-20	Steel, lower	25	MH	Hydrant	602A	1	
3963B	Fan drive pulley	1920-24		30	MH	Hydromel	602B	1	
3964	Fan belt	1909-16	23" long, fabric	35		Hydrate	609A	1	
3964C	Fan belt	1917-20	26" long, fabric	35		Impel	609B	1	
3964E	Fan belt	1920-24	Rubber	35		Idolish	609C	1	
3966	Fan shaft	1909-20	1 1/2" x 4 1/2"	25	MH	Hyper	606A	1	
3966B	Fan shaft	1920-24		20	MH	Iasius	606B	1	
3967	Fan bracket	1909-16		40	MH	Hypo	604A	1	
3967B	Fan bracket	1917-24		30	MH	Idyl	604B	1	
3968	Fan bracket bolt	1909-24	1/2" x 2 3/4"	10		Hyperc	605	1	
3970	Fan grease cup	1909-24		10		Hyppish	601	1	
3973	Fan adjusting screw	1909-24	3/8" x 1 1/2"	02		Groast	645	1	
3973B	Fan adj. screw nut	1909-24	Order 3006B						
3974	Fan driven pulley bush	1917-20		15		Knag	8757A	1	
3974B	Fan driven pulley bush	1920-24		15		Ibhar	8757B	2	
3980	Fan pulley plug	1920-24		03		Ibidem	633	1	
3981	Fan pulley gasket	1920-24		02		Icarian	634	1	
3982	Fan shaft cap	1920-24		02		Icilius	635	1	
3983	Fan shaft felt washer	1920-24		01		Iconism	637	1	
3984	Fan blade screw	1920-24		02		Ictus	652	4	
3985	Fan blade screw washer	1920-24	Order 3261C						
3986	Fan shaft nut	1920-24	Order 2719						

MUFFLER

4025B	Muffler assembly	1909-24	Includes 306T & 4037C	2 25	MH	Jocasta	1200C	1	
4026B	Muffler head—front	1917-20		35		Julep	1202C	1	
4026C	Muffler head—front	1921-24	Pressed steel	10		Julian	1202D	1	
4027	Muffler shell—outer	1909-24	5" dia.						



Part No.	Name of Part	Year	Specifications	Price	Tax Code	Fac. No.	Req. per Car	
HOOD—Continued								
4056C.	Hood block—L.	1923-24.		\$ 0 20	Kinate.	8742B.	1	
4057.	Hood board—right.	1909-16.	22 3/4" long.	25	Jorum.	1340	1	
4057B.	Hood block—right.	1917-23.		20	Kine.	8741AR.	1	
4057C.	Hood block—R.	1923-24.		20	Kinic.	8741B.	1	
4060C.	Hood pad (on dash).	1917-23.		08	MH.	Kite.	8711AR.	2
4060D.	Hood pad (on rad. shell).	1917-24.		15	MH.	Kid.	8710	1
4060E.	Hood pad (on dash).	1923-24.		08	MH.	Kidab.	8711B.	2
4061B.	Hood clasp (on dash).	1917-23.		05		Kit.	8720AR.	1
4061C.	Hood clasp (on dash) screw	1917-24.		02		Knee.	8763.	2
4061D.	Hood clasp (on dash).	1920-23.		05		Kitten.	8720BR.	1
4061E.	Hood clasp (on dash).	1923.		05		Kittib.	8720CR.	1
4061F.	Hood clasp (on dash).	1923-24.		05		Kittor.	8720D.	1
4073.	Hood block support—front right.	1917-23.		05		Knot.	8743AR.	1
4073B.	Hood block support—front right.	1923-24.		05		Knuse.	8743B.	1
4074.	Hood block support—front left.	1917-23.		05		Kiln.	8744AR.	1
4074B.	Hood block support—front left.	1923-24.		05		Kilpe.	8744B.	1
4075.	Hood block support—rear right.	1917-23.		05		King.	8745AR.	1
4075B.	Hood block support—rear right.	1923-24.		05		Kinglet.	8745B.	1
4076.	Hood block support—rear left.	1917-23.		05		Kirk.	8746AR.	1
4076B.	Hood block support—rear left.	1923-24.		05		Kirket.	8746B.	1
FORD CARBURETOR (MODEL "NH")								
6200B.	Carburetor.	1920-24.		4 50	MH.	Meconate 553A4.	1	
6201.	Float with lever.	1920-24.		25		Mutate.	6333B.	1
6202B.	Float chamber and bushing assembly.	1920-23.		50		Meander.	6318B.	1
**6202C.	Float chamber.	1923-24.		30		Meang.	4802F.	1
6203.	Gasket—float chamber.	1920-24.		03		Meazling.	555B.	1
6204.	Gasket—spray nozzle.	1920-24.		01		Megalia.	4820B.	1
6205.	Gasket—mixer chamber.	1920-24.		02		Meheln.	6367B.	1
6206.	Lever—throttle.	1920-24.	Order 6070.					
6206B.	Lever—aux. throttle.	1920-24.	Order 6077.					
6207B.	Mixer chamber.	1920-24.		2 50		Melange.	6343R.	1
6208.	Adj. needle clamp nut.	1920-24.		05		Melanie.	4812B.	1
6209.	Throttle plate.	1920-24.		02		Mellot.	4517B.	1
6210.	Float lever pin.	1920-24.		01		Melissa.	6320B.	1
6211.	Float chamber screw.	1920-24.		05		Meniver.	6284.	1
6212.	Float valve seat.	1920-24.		05		Mercly.	6321B.	1
6213.	Spray needle assembly.	1920-24.		15		Mertiny.	6335B.	1
6214B.	Spray needle.	1920-24.		20		Mercury.	6341C.	1
6215.	Air passage vent plug.	1920-24.		05		Merils.	6273R.	1
6216.	Drain valve plug and hdl.	1916-24.		10		Merops.	6329.	1
6217.	Throttle lever stop screw.	1920-24.	Order 6064.					
6218.	Aux. throttle lever spring.	1920-24.	Order 6076.					
6219.	Float valve seat gasket—fibre.	1920-24.		01		Mesapia.	6322C.	1
6220.	Gasoline inlet needle.	1920-24.	Order 4453A.					
**6221.	Drain valve body.	1923-24.		15		Mesapob.	6328D.	1
KINGSTON CARBURETOR (MODEL "L-4")								
6150.	Carburetor complete.	1921-24.		4 50		Mason.	553A1.	1
6151.	Drain valve body.	1921-24.		15		Mockish.	6328C.	1
6152.	Float chamber.	1921-24.		50		Modish.	4802E.	1
6153.	Mixing chamber.	1921-24.		2 50		Moellon.	6340G.	1
6154.	Carburetor inlet elbow.	1921-24.	Order 6056.					
6155.	Float with lever.	1921-24.		50		Medicate.	6333G.	1
6156.	Float chamber gasket.	1921-24.		05		Mohock.	555D.	1
6157.	Mixing chamber gasket.	1921-24.		05		Monish.	6367E.	1
6158.	Float valve seat gasket.	1921-24.		03		Monitory.	6322F.	1
6159.	Constant air supply lever assembly.	1921-24.		30		Moholl.	6327D.	1
6160.	Throttle lever assembly.	1921-24.		30		Mohsite.	4836D.	1
6161.	Spray needle assembly.	1921-24.	Order 6115.					
6162.	Drain valve body clamp nut.	1921-24.		05		Moldore.	6395.	1
6163.	Mixing chamber nut.	1921-24.		10		Molcty.	4810C.	1
6164.	Constant air supply sp'g.	1921-24.	Order 6125.					
6165.	Spray needle sleeve.	1915-21.		20		Molary.	4812C.	1
6166.	Float lever pin.	1915-21.		02		Mollah.	6320C.	1
6167.	Constant air supply plate.	1921-24.	Order 6068.					
6168.	Throttle plate.	1921-24.	Order 6209.					
6169.	Drain valve plug assy.	1915-21.		10		Monest.	6329B.	1
6170.	Throttle lever adj. screw.	1921-24.	Order 6120.					
6171.	Air valve stop assembly.	1921-24.		15		Moolah.	6397.	1

**Used with mixing chamber have slots at bottom.
 Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	Req. per Car
KINGSTON CARBURETOR (MODEL "L-4")—Continued								
6172	Float valve seat	1921-24		\$ 0 20		Morana	6321E	
6173	Air valve shaft assembly	1921-24		20		Morbosse	6381B	
6174	Air valve	1921-24		30		Mordant	6355B	
6175	Gasoline valve	1921-24		30		Mediery	6324D	1

FORD CARBURETOR PARTS (MODEL "G")

4451A	Float with lever	1914-21		25		Muzzle	6333AR	1
4452A	Spray needle assembly	1914-21		15		Myrtle	6335AR	1
4453A	Gasoline inlet needle	1914-21		15		Myrtic	6324A	1
6041	Mix chamber	1914-20		2 50		Maadlah	6340AR	
6042	Mix chamber top	1912-14-20		49		Maarath	4801R	
6043	Mix chamber top screw	1912-20		01		Maaziah	4808R	
6044	Mix chamber top gasket	1914-20		02		Maabadis	6317R	
6044B	Mix chamber bottom gasket	1916-20		03		Macacus	6367AR	
6045	Mix chamber nut	1912-20		07		Macarize	4810AR	
6046	Float chamber and bush assembly	1914-20		50		Macerate	6318AR	
6047	Float lever pin	1914-20		03		Maces	6320AR	
6048	Float valve seat	1914-20		10		Macigno	6321AR	
6049	Float valve seat gasket	1914-19	Fibre	01		Madeira	6322A	
6051	Spray needle clamp nut	1912-20		05		Magilph	4812AR	
6052	Spray needle	1914-20		30		Maglify	6341AR	
6053	Spray nozzle gasket	1912-14-20	Fibre	15		Maibem	4820AR	
6055	Gas inlet elbow	1913-20		01		Manacle	4859	
6057	Low speed tube with nut	1915-20		15		Mandubi	6360R	
6058	Low speed tube retaining screw	1912-14-20		03		Manilus	4814AR	
6060	Low speed boss screw	1912-14-20		03		Mannish	4816AR	
6061	Strangling tube	1912-14-20		15		Mappery	4817R	
6062	Strangling tube retainer	1912-14-20		02		Marabou	4818R	
6064	Throttle lever stop screw	1911-21		02		Margaric	4520A	
6065	Throttle lever clamp screw	1911-19		02		Marcaron	4521AR	
6068	Throttle plate	1912-14-20		10		Marikina	4517AR	
6070	Throttle lever	1912-14-20		10		Maritime	4836A	
6070B	Throttle lever—oversize	1912-14-20		10		Markable	4836AR	
6071	Throttle lever adj. lock nut	1911-20		02		Martinet	4528R	
6074	Aux. throttle plate	1915-20		03		Masora	6337AR	
6076	Aux. throttle lever spring	1914-20		02		Manther	6342A	
6077	Aux. throttle lever assy.	1914-21		15		Mazurka	6327A	
4463	Float lever holding screw nut	1912-19		02		Mazarine	4805AR	
4464	Float lever holding screw	1913-19		03		Mazime	4853AR	
6081A	Drain valve plug and handle	1912-19		03				

Parts for 1909-13 Carburetors supplied by Holley Carburetor Co., Detroit, Mich.

KINGSTON CARBURETOR PARTS (MODEL "L-2")

6101A	Carburetor float assy.	1917-21		60		Moslem	6333FR	1
6102	Throttle lever	1913-20		30		Miasma	4836CR	
6103A	Constant air supply lever	1913-20		30		Michael	6327CR	
6104	Gas valve cap	1910-16		20		Microdon	3005	
6105A	Air valve cap	1915-16		30		Millola	6357AR	
6105B	Air valve cap	1917-20		30		Militant	6357BR	
6106A	Float chamber	1917-20		1 00		Militate	4802DR	
6107A	Mix chamber	1917-20		2 50		Miltonic	6340FR	
6108	Mix chamber gasket	1913-16		05		Milvine	6367CR	
6108A	Mix chamber gasket	1917-20		15		Mimesis	6367DR	
6109	Throttle gate	1915-20	Use 6068					
6110A	Constant air supply gate	1915-20		10		Mimosa	6337CR	
6111	Mix chamber nut	1913-20		10		Mimulus	4810BR	
6114	Gas valve retainer nut	1910-16		10		Minaret	3027	
6115	Spray needle assembly	1910-21		40		Medal	6335D	1
6118A	Float to lever screw	1917-20		03		Minerva	4853B	
6120	Throttle lever adjusting screw	1913-20		03		Mingler	4520B	
6121	Throttle lever clamp screw	1910-20		03		Minikin	4521BR	
6122	Gas valve operating lever shaft	1913-16		15		Minious	6320DR	
6123	Air valve shaft	1915-20		20		Miniver	6381AR	
6124A	Spray needle sleeve	1913-20	Order 6165					
6125	Constant air supply sp'g.	1915-16		03		Minum	6342C	
6126	Float valve seat	1915-16		15		Minutia	6321CR	
6126A	Float valve seat	1917-20		20		Miphka	6321DR	
6127A	Gasoline valve	1917-21		30		Moral	6324CR	1
6128	Air valve	1915-20		30		Misarto	6355AR	
6129	Float valve seat gasket	1915-16	Fibre	03		Miscall	6322DR	
6129A	Float valve seat gasket	1915-16						Order 6049

Parts for 1909-16 Carburetors supplied by Byrne Kingston Co., Kokomo, Ind.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts


Part No.	Name of Part	Year	Specifications	Price	Tax Status	Code Word	Fac. No.	Req. per Car
CARBURETOR ATTACHMENTS								
4127A	Carb. adj. rod brkt.	1909-23	On dash	\$ 0 05		Lastage	1357R	1
4129A	Carb. adjusting rod	1909-24		10	MH	Latten	7920	1
4130	Carb. flange bolt	1909-24	Order 3073					
4130B	Carb. flange bolt nut	1909-24	Order 3066B					
4134	Carb. flange gasket	1909-24		05	MH	Lecturn	1380B	1
4431	Carb. priming rod	1909-24		05	MH	Loach	2000	1
4582	Carb. hot air pipe	1912-24		20	MH	Monkey	686	1
4583	Priming bell crank	1919-24	Cars with starter	05	MH	Tenet	7691	1
4585	Priming rod plate	1919-20	Coupe	10		Thrum	7664	
4586	Priming rod plate	1919-20	Sedan	10		Thruuse	7665	1
4587B	Priming rod	1919-23	17 1/2"	15	MH	Thule	6629BR	1
4588B	Priming rod	1919-23	13 1/2"	15	MH	Thumb	6627AR	1
4588C	Priming rod	1922	16 1/2"	15	MH	Thuyga	6630AR	1
4588D	Priming rod	1923-24	13 1/2"	15	MH	Thunga	6627B	1
4588E	Priming rod	1923-24	17 1/2"	15	MH	Thunio	6629C	1
4588F	Priming rod	1923-24	16 1/2"	15	MH	Thuzi	6630B	1
4589	Priming rod	1919-24	14 1/2"	05	MH	Thunder	8797B	1
4589B	Priming rod	1922-24	20 1/2"	05	MH	Thuja	8797A	1

FENDERS—56 INCH TREAD

4800B	Front fender—right	1917-23		4 00	MH	Nook	7976	1
4800C	Front fender—right	1923-24		4 00	MH	Nooker	7976B	1
4801B	Front fender—left	1917-23		4 00	MH	Noose	7977	1
4801C	Front fender—left	1923-24		4 00	MH	Noosib	7977B	1
4802F	Rear fender—right	1917-24		3 50	MH	Norse	8850	1
4802G	Rear fender—right	1922-24	Four-door Sedan	3 75	MH	Nosle	7730	1
4802H	Rear fender—right	1923-24		4 00	MH	Nosma	8850B	1
4803F	Rear fender—left	1917-24		3 50	MH	Nougat	8851	1
4803G	Rear fender—left	1922-24	Four-door Sedan	3 75	MH	Nousel	7731	1
4803H	Rear fender—left	1923-24		4 00	MH	Nousic	8851B	1
4804D	Rear fender iron—R & L	1913-24	Touring car	15		Smile	5405	2
4804E	Rear fender iron—right	1913-23	Torpedo & Coupe	50		Shire	5563AR	1
4804F	Rear fender iron—left	1913-23	Torpedo & Coupe	50		Shrub	5390AR	1
4804G	Rear fender iron—R & L	1916-17	Sedan	25		Shubble	8154A	2
4804K	Fender iron—R & L	1918-24	Sedan	15		Shoggle	8154B	2
4804L	Rear fender iron	1921-24	Touring	10		Shophan	7395	2
4804M	Rear fender iron—right	1923-24		50		Shopher	5390B	1
4804N	Rear fender iron—left	1923-24		50		Shophic	5390B	1
4805B	Rear fender iron bolt	1915-24	Touring 3/4" x 3/8"	03		Shorage	7171	6
4805C	Rear fender iron bolt nut	1915-24	3/8" x 1 1/4" x 18 thds.	02		Gram	341	
4806B	Fender eye bolt	1909-24		05		Pepsin	1942	4
4806C	Fender eye bolt washer	1909-24		01		Perish	1943	4
4806D	Fender eye bolt nut	1909-24	Order 2825B					
4808	Front fender iron bolt (side)	1910-24	3/8" x 1 1/4"	03		Module	1323	2
4808B	Front fender iron bolt (bottom)	1910-24	3/8" x 1 1/4"	03		Griffin	347	2
4808C	Front fender apron to frame bolt	1915-24	3/8" x 3/8"	03		Placid	4088	4
4808D	Front fender iron bolt nut	1910-24	Order 2515					
4808E	Front fender apron to frame bolt nut	1915-24	Order 3088E					
4809	Front fender iron—R & L	1909-24		60		Sistom	343	2
4850	Front fender apron brkt.—R	1917-24		10		Siritch	8854	1
4851	Front fender apron brkt.—L	1917-24		10		Sirius	8855	1
4852	Front fender iron brkt.—R	1915-24		10		Sirrah	7984	1
4853	Front fender iron brkt.—L	1915-24		10		Slskin	7998	1
4854	Rear fender iron brkt.	1915-24		10		Sistine	7483	2
4855	Rear fender to R. B. shield brkt.	1915-23		05		Sivan	7994	2

RUNNING BOARDS AND SHIELDS—56 INCH TREAD

4812	Running board—R	1909-24	44 3/4" long	1 25	MH	Shrew	5418	1
4813	Running board—L	1909-24		1 25	MH	Shrilly	5480	1
4814C	R. B. shield—R	1917-24		2 40	MH	Shrine	7986	1
4814D	R. B. shield—R	1922-24	Four-door Sedan	2 40	MH	Shuhite	7747	1
4815C	R. B. shield—L	1917-24		2 40	MH	Shroud	7987	1
4815D	R. B. shield—L	1922-24	Four-door Sedan	2 40	MH	Shunites	7748	1
4816	R. B. truss rod—front with nuts	1909-24		35	MH	Skybird	5804	1
4817	R. B. truss rod—rear with nuts	1909-24		35	MH	Skyman	5805	1
4817B	Truss rod nut	1909-24		03		Skyward	339	4
4818B	R. B. bracket assy.	1909-24		1 10		Skyiah	2926	2
4819	R. B. to rear fender bolt	1909-20		03		Musty	1344B	4
4819B	R. B. to rear fender bolt	1921-24	3/8" x 1 1/4"	03	</			

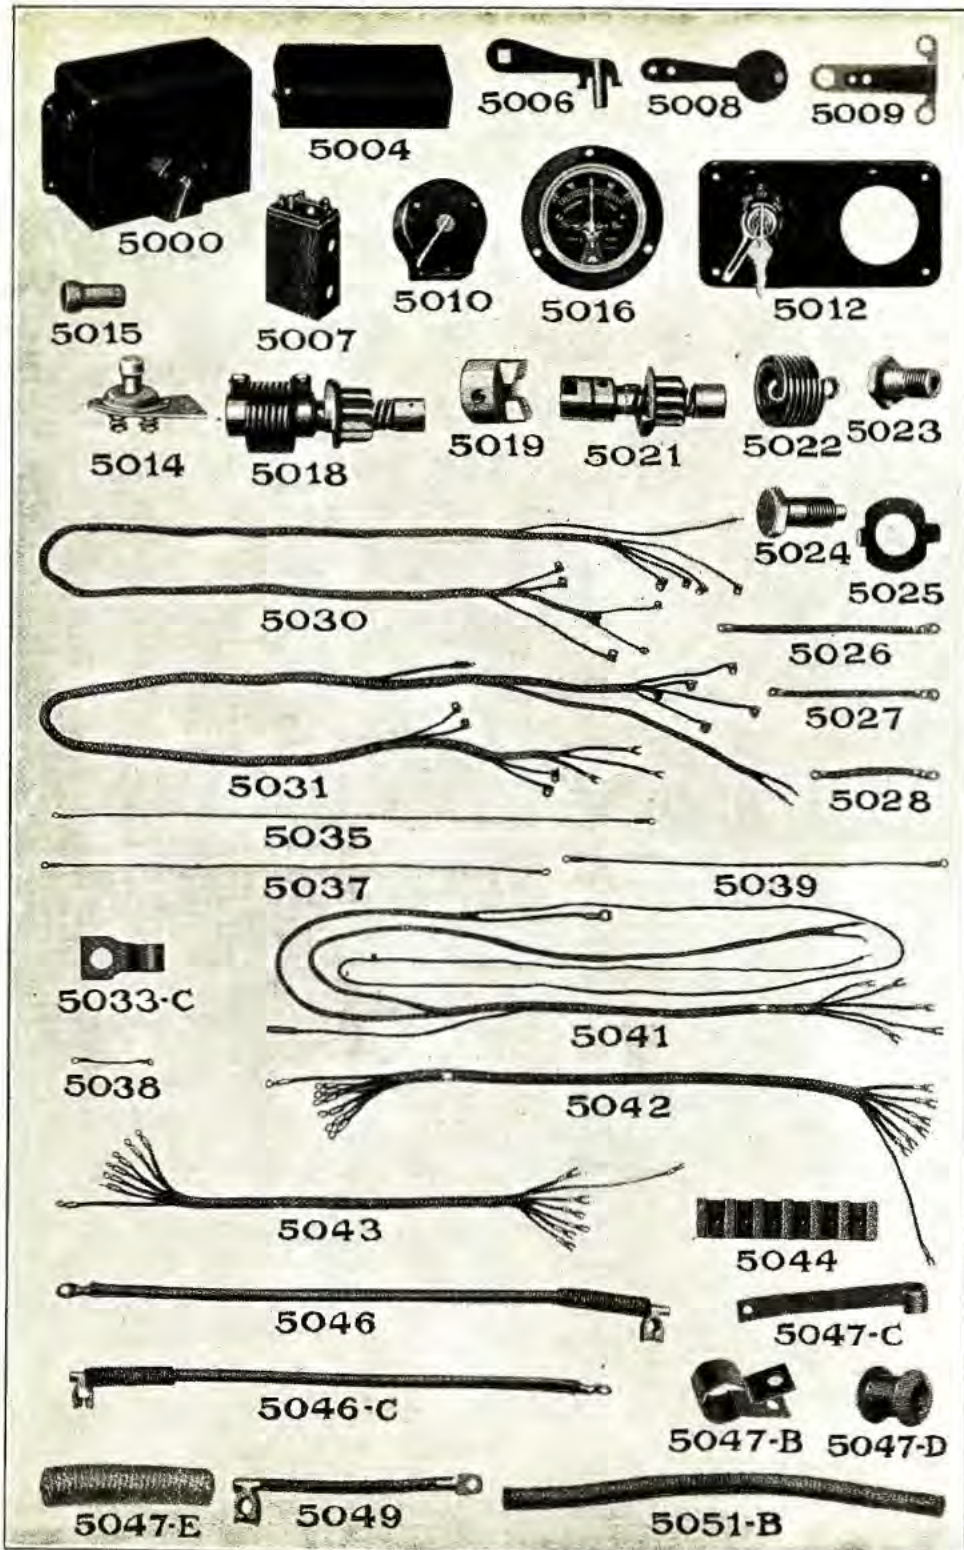

Part No.	Name of Part	Year	Price	Tax Status	Code Word	Fac. No.	Req. per Car
RUNNING BOARDS AND SHIELDS—56 INCH TREAD—Continued							
4819D	R. B. to rear fender nut.	1909-24.	Order 2514				
4820	R. B. to front fender bolt and nut.	1909-20.	Order 4808C and 3088E				
4820C	R. B. to front fender bolt	1921-24.	Order 4805B				
4821	R. B. to shield clamp.			\$0 05	Skulk	5478	
RUNNING BOARD—TRUCK							
4830	Running board—R. or L.	1918-24		50	MH	Gull	TT-5418.2
4831	Running board bracket.	1918-24		35		Heck	TT-2926.4
4832	R. B. bracket brace	1918-24		15		Hedge	TT-2927.2
4833	R. B. bracket brace	1918-24		30		Hedging	TT-2929.1
4834	R. B. bracket—rear	1918-24		35		Hecale	TT-2925.
4835	R. B. bracket and brace assy.—frt.	1918-24		50		Hedonic	TT-2928.
4836	R. B. bracket and brace assy.—rear.	1918-24		1 10		Hehmin	TT-2930.
FORD SPARK COIL							
5000	Coil (includes switch)	1909-22		8 65	MH	Negus	1383
5001	Coil (starter type)—less switch.	1909-24		7 90	MH	Neil	1383B
5002	Coil box with cover (includes switch)	1914-24		2 25	MH	Nenia	5858
5003	Coil box with cover—less switch	1919-24		1 50	MH	Nepeta	5858B
5004	Coil box cover	1915-24		25		Neptune	7910
5005B	Switch cover	1918-24		10		Nonage	5835B
5006	Switch plug	1914-24		05		Nopal	5815A
5007	Coil units, 3 1/2" x 2 3/8" x 5"	1914-24		1 60	MH	Noggin	5845
5008	Vibrator with tungsten point	1914-24		10		Nonce	6797
5009	Vibrator bridge with tungsten point	1914-24		10		Novia	6702
SWITCH							
5010	Switch assembly (on coil)	1914-22		65		Nidor	5873
5012	Switch (ignition) (on instr. board)	1919-24		1 00		Tolad	7675E
5013B	Key (switch)—give serial number	1919-24		10		Thrall	5815C
5014	Starting switch (on floor board)	1919-24		65	MH	Topaz	8792
5014B	Starting switch bracket bolt—long	1920-24		03		Toparch	8760
5014C	Starting switch bracket assembly	1922-24		30		Tophet	8696
5014E	Starting switch cover and plunger assy.	1922-24		20		Topical	8698
5015	Extension (starting switch plunger)	1919-24		10		Tetric	8793
AMMETER							
5016	Ammeter	1919-24		65		Tassel	7680
5017	Ammeter lens and rim	1919-24		20		Tensor	8105
5017B	Ammeter lens	1919-24		05		Tensure	8121
BENDIX DRIVE							
5018	Bendix	1919-24		4 00		Tattler	1883
5019	Bendix head	1919-24		50		Thine	2007
5020	Bendix key	1919-24		02		Tholl	1751
5021	Bendix shaft and gear	1919-24		3 50		Thurl	2026
5022	Bendix spring	1919-24		35		Tinge	2006
5023	Bendix shaft spring screw	1919-24		03		Tinsel	1983
5024	Bendix head spring screw	1919-24		05		Tipple	1781
5025	Bendix spring screw lock washer	1919-24		01		Tipsey	1782
WIRING							
5026	Spark plug wire 15" No. 1 cyl.	1909-24		10	MH	Nohob	1365
5027	Spark plug wire (also magneto to coil) 11 1/2" No. 2 cyl.	1909-24		10	MH	Nachor	1366
5028	Spark plug wire, 8" No. 3 and 4 cyls.	1909-24		10	MH	Nalad	1376
5030	COMMUTATOR WIRE (non starter type)	1909-22		80	MH	Nandu	7502A
*5030B	Commutator wire	1922-24		1 00	MH	Nantes	7502C
5031	Commutator wire (starter type)	1919-24		1 00	MH	Trifle	7502B
5033	Com. wire loom support	1909-24		03		Napple	1390
5033B	Commutator wire terminal retainer	1921-24		01		Nappy	2124
5033C	Wire on dash clip	1919-24		01		Naptha	7688
5034	Ammeter to cut-out wire—Sedan 33"	1919		15	MH	Topic	7683A
5035	Ammeter to cut-out wire—Sedan 51"	1919-24		20	MH	Topmast	7683B
5036	Ammeter to cut-out wire—Coupe 23"	1919		15	MH	Torch	7684A
5037	Ammeter to cut-out wire—Coupe 46"	1919-24		15	MH	Rabid	7684B
5038	Ammeter to ignition switch wire—5 3/4"	1919-24		10	MH	Torpid	7681
5039	Generator to cut-out wire—23"	1919		15	MH	Trash	7687
5040	Terminal block to switch wire—35"	1919-24		05	MH	Trench	8894B
5041	Lighting wire	1919-24		90	MH	Tromp	7682B
5041B	Lighting wire—truck	1921-24		1 00	MH	Tronage	TT7682
*5041C	Lighting wire	1922-24		50	MH	Tronco	7661
5042	Switch wire—Sedan	1919-24		75	MH	Troth	7485B
5043	Switch wire	1919-24		70	MH	Truce	7686B
*5043B	Switch wire	1922-24		40	MH	Trudge	7660

*Used on cars without starter with switch on instrument panel.


Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Tax Price	Code Status	Fac. Word No.	No. per Car	Req.
WIRING—Continued							
5044	Terminal block	1919-23	\$ 0	05	Teller	1950AR	1
†5044B	Terminal block	1923-24	10		Tellib	1950B	1
*5044C	Terminal block	1922	05		Tellod	1951AR	1
†5044D	Terminal block	1923-24	10		Telluf	1951B	1
5045	Terminal block to dash screw	1919-21	01		Tocsin	2073	2
5046	Battery to switch cable 28"	1919-24	80	MH	Tepor	1889B	1
5046C	Battery to switch cable—truck 24"	1921-24	80	MH	Teraph	T1889	1
5047	Battery to switch cable 33"	1920	75	MH	Pantry	1889C	1
5047B	Battery to switch cable support—truck	1920-24	10		Teredo	2116	1
5047C	Battery to switch cable support	1920-24	10		Terete	2112	1
5047D	Battery to switch cable support bush	1928-24	05		Tereus	2113	1
5047E	Battery to switch cable sleeve	1921-24	05		Tergum	2120	1
5048	Ground cable—20"	1919	70	MH	Terse	1890A	1
5049B	Ground connector	1919-24	30	MH	Testacy	1890B	1
5050	Ground cable—11 1/2"	1920	60	MH	Parish	1890C	1
5051	Switch to motor cable—27 1/2"	1919-24	50	MH	Tether	1891	1
5051B	Switch to motor cable sleeve	1921-24	30		Tettish	2119	1
5052	Battery cable terminal bolt	1919-24	02		Pelvis	1937	2
5052B	Battery cable term. bolt nut	1919-24	01		Pennon	1938	2
CUT-OUT							
5055	Cut-out (electric)	1919-21	1 00	MH	Tendril	7677B	1
STARTER PARTS							
5056	Motor mounting gasket	1919-24	02		Theme	1768	
5057	Gen. head gasket	1919-24	02		Thane	1774	
5058	Gen. mounting screw—short	1919-24	03		Thrack	1755	
5059	Bendix cover screw	1919-24	01		Thrave	1765	
5060	Term. block to wire screw	1919-24	01		Thwack	2015	
5061	Ammeter to plate screw	1919-24	01		Thwart	5819	
5062	Motor mounting screw	1919-24	02		Thymet	5510	
STARTING MOTOR AND PARTS							
5099	Starting motor	1919-24	17 00	MH	Tidbit	1877	
†5100	Armature	1919-24	5 00		Tabid	1949	
†5101	Cover band	1919-24	10		Tallage	1801C	
5102	Brush end bracket	1919-24	30		Talmen	1868	
5103	Bracket assem. (mounting)	1919-24	1 30		Tawny	2037	
5104	Brush	1919-24	20		Tanvat	1806	
5105	Shaft bushing—rear	1919-24	30		Tapnet	1759	
5106	Shaft bushing—front	1919-24	10		Tapster	1789	
5107	Field coil assembly	1919-24	2 50		Targum	1871	
5108	Brush holder assem.	1919-24	45		Talpa	1864B	
5109	Terminal insulator—outer	1919-24	02		Talus	1795	
†5110	Terminal insulator—inner	1919-24	01		Tambac	1794	
5112	Terminal nut	1919-24	03		Tambour	1791	
†5113	Field screw	1919-24	02		Tamis	1788	
†5114	Brush end bracket to yoke screw	1919-24	05doz.		Tamkin	1808	
5115	Brush tension spring	1919-24	05		Tampon	1809	
5116	Terminal washer	1919-24	01		Tarras	1792	
5117	Terminal washer—inner, steel	1919-24	01		Tarsic	1798	
5118	Motor yoke assembly	1919-24	3 50		Tartly	1852	
GENERATOR AND PARTS							
5119	Generator	1919-24	17 00	MH	Tetter	1879	
†5120	Armature (less bearings)	1919-24	4 50		Tanling	1925	
5121	Small bearing	1919-24	1 10		Tannic	1838	
5122	Large bearing	1919-24	1 25		Tantum	1841	
5123	Terminal bolt	1919-24	03		Tegmen	1836	
5124	Brush end bracket	1919-24	25		Telary	1894	
5125	Large brush	1919-24	15		Tempean	1844	
5126	Small brush	1919-24	15		Tempter	1845	
5127	Large bearing disc	1919-24	03		Tendry	1847	
5128	Small bearing felt	1919-25	02		Tenter	2033	
5130	Head	1919-24	50		Tercol	2044	
5131B	Small brush holder	1919-24	10		Termor	1821	
5132B	Brush holder ring	1919-24	03		Terrapin	1996	
5132C	Brush holder assem.	1919-24	40		Ternary	1865	
5132D	Brush holder assem. less small brush holder	1919-24	30		Ternate	1920	
5133	Terminal insulator outer	1919-24	03		Terras	1827	
5134	Terminal nut	1919-24	03		Tiling	1818	
5134B	Small brush holder stud nut	1919-24	01		Tilmus	6754	
5135	Oiler	1919-24	05		Testern	1837	
5136	Pinion to shaft pin	1919-24	05doz.		Testudo	1750	
5137	Pinion	1919-24	35		Throng	1752	
5138	Small bearing felt retainer	1919-24	02		Theban	1832	

†Also for generator. †Used with steel dash. ††Armature may be exchanged with dealer at \$4.00.
*Used on cars without starter with switch on instrument panel.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

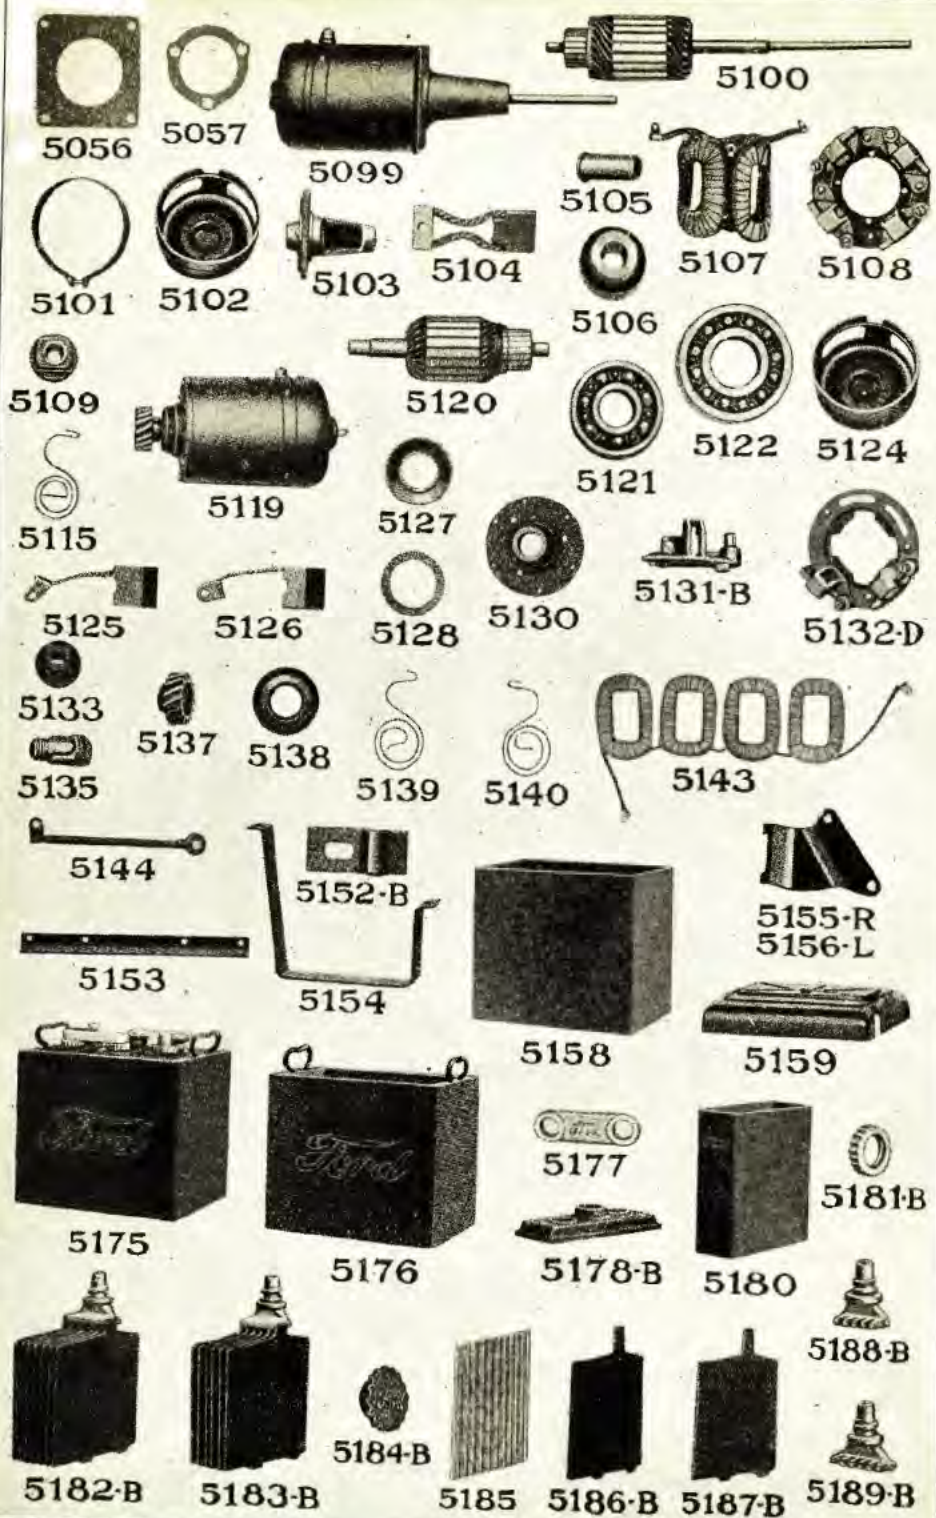

Part No.	Name of Part	Year	Price	Tax Status	Code	Fac. No.	Req. per Car
GENERATOR AND PARTS—Continued							
5139	Large brush spring	1919-24	\$ 0 05		Theist	1967	
5140	Small brush spring	1919-24	05		Themia	1988	
5141B	Small brush holder stud	1919-24	02		Theoric	1823C	
5142	Terminal washer	1919-24	01		Thermal	1831	
5142B	Small brush holder stud washer	1919-24	05/1oz.		Phrase	2058	
5143	Field winding assembly	1919-24	1 50		Tholus	1978	
5144	Brush to terminal wire	1919-24	05		Thorp	1851	
5145	Generator yoke assembly	1919-24	3 00		Thorite	1887	

BATTERY BRACKET AND PARTS

5150	Bracket assem.	1919-23	75	MH	Tattoo	8841AR	
*5150B	Battery bracket assy.	1923-24	75	MH	Tattub	8841B	1
5151	Clamp bolt	1919-24	03		Rustic	8846	
5151B	Clamp bolt nut. Order 2825B						
5152	Clamp	1919-23	05		Tetrad	8844AR	
5152B	Battery clamp	1921-24	05		Thecal	8844B	2
5153	Battery support angle—truck	1921-24	15		Theine	TT8816	1
5154	Battery box support—truck	1921-24	20		Thenal	TT8817	2
5155	Battery clamp support—rear—truck	1921-24	15		Theodas	TT8818	1
5156	Battery clamp support—front—truck	1921-24	15		Theorbo	TT8819	1
5158	Battery box—less cover	1921-24	75		Twite	7671	1
5159	Battery box cover assembly	1921-24	60		Twangle	5491	1
5160	Battery box cover door	1921-24	10		Tobine	5493	

BATTERY (FORD)

5175	Battery	1919-24	116 50	MH	Twain	7670	1
5176	Battery case assembly	1919-24	1 25		Tocher	5434	
5177	Cell connector	1919-24	15		Tockast	5435	
5178	Cell cover	1919-23	30		Toddler	5436AR	
5178B	Cell cover	1921-24	25		Tofus	5436B	
5178C	Cell cover	1923-24	25		Tofute	5436C	3
5179	Terminal post gasket	1919-23	01		Tolasa	5437AR	
5179B	Terminal post gasket	1921-24	01		Tomatus	5437B	
5179C	Terminal post gasket	1923-24	01		Tometas	5437C	
5180	Rubber jar	1919-24	65		Tolerant	5438	
5181	Terminal post nut	1919-24	64		Tollage	5439AR	
5181B	Terminal post nut	1921-24	64		Tompson	5439B	
5182	Negative group assembly	1919-23	2 00		Tolsey	5440AR	
5182B	Negative group assembly	1921-24	1 80		Tonsure	5440B	
5183	Positive group assembly	1919-23	2 00		Toman	5441AR	
5183B	Positive group assembly	1921-24	1 80		Toom	5441B	
5184	Filler plug with gasket	1919-23	1 15		Tombac	5444AR	
5184B	Filler plug with gasket	1921-23	15		Torment	5444B	
5184C	Filler plug	1923-24	10		Tormel	5442C	
5185	Plate separator	1919-24	05		Tomrig	5445	
5186	Positive plate	1919-23	25		Tomryla	5427AR	
5186B	Positive plate	1921-24	25		Tormina	5427B	
5187	Negative plate	1919-23	25		Tonguy	5428AR	
5187B	Negative plate	1921-24	25		Torosc	5428B	
5188	Negative terminal post	1919-23	20		Torpent	5425AR	
5188B	Negative terminal post	1921-24	15		Torply	5425B	
5189	Positive terminal post	1919-23	20		Torsel	5426AR	
5189B	Positive terminal post	1921-24	15		Torrive	5426B	

SPARK PLUGS

5201	Spark plug "Ford" (Champion)	1909-23	160		Tirzah	1386A3	4
5203B	Spark plug porcelain "Ford" (Champion)	1909-23	130		Titrate	3760C	4

REPAIR TOOLS

1349	Hub cap wrench	Regular equipment	15		Pacal	1349	
1387	Adjustable wrench	Regular equipment	45		Pacos	1387	
1903	Pliers	Regular equipment	25		Paddy	1903	
1917	Double end wrench	Regular equipment	15		Pagan	1917	
2335	Spark plug & cyl. head bolt wrench	Regular equipment	40		Pavid	5893	
2336	Tool roll	Regular equipment	20		Pawky	1979	
2337	Oil can	Regular equipment	1 30		Paxos	1384	
2338	Tire pump	Regular equipment	1 30	MH	Payser	1368	
2340	Tire irons, each	Regular equipment	1 15		Pelage	4069	
2343	Jack	Regular equipment	1 40		Poser	3389	
TT4069X	Tire iron (large). Old No. 5Z-322		40		Pathos		
5Z-152	Rear axle housing bolt nut wrench. Old No. 3Z-616		40		Parvis		
5Z-153	Socket wrench for crank shaft bearing bolt nut. Old No. 3Z-644		50		Passim		
5Z-154	Body bracket connecting bolt R. & L. wrench Old No. 3Z-719		30		Proverb		
5Z-155	3/8" L. socket wrench. Old No. 3Z-645 and 3Z-775		45		Paatel		
5Z-156	Crank shaft bearing bolt wrench. Old No. 3Z-782		45		Poloy		
5Z-157	Connecting rod cap bolt nut I wrench (Cylinder No. 4). Old No. 3Z-2010		40		Quack		
5Z-158	Drive shaft housing stud nut wrench for 1/2" nut. Old No. 3Z-620		45		Parent		

*Used with steel battery box. †Not subject to regular discount.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Price	Tax Status	Code	Fac. No.	Req. per Car
REPAIR TOOLS—Continued							
5Z-159	Connecting rod T wrench. Old No. 3Z-783		\$ 0 55		Pygmy		
5Z-160	3/4" T socket wrench. Old No. 3Z-643		60		Parfit		
5Z-161	Body bracket connecting bolt T wrench, front and center. Old No. 3Z-673		50		Prater		
5Z-162	Large cam gear lock nut wrench. Old No. 3Z-655		75		Pavan		
5Z-163	Generator third brush adjusting wrench. (Used only on generators built during 1919)		20		Quaver		
5Z-165	Drive shaft pinion T wrench. Old No. 3Z-790		60		Puzzle		
5Z-193	Spindle cone adjusting open end wrench. Old No. 3Z-699		35		Profile		
5Z-195	3/8" open end wrench. Old No. 3Z-646		25		Pastor		
5Z-196	Rear axle entering wrench. Old No. 3Z-627		30		Potion		
5Z-204	Exhaust pack nut open end wrench. Old No. 3Z-624		90		Porash		
5Z-206	Rear axle nut open end wrench. Old No. 3Z-675		55		Porite		
5Z-209	Connecting rod clamp screw wrench. Old No. 3Z-647		45		Parrott		
5Z-210	Fly wheel cap screw wrench. Old No. 3Z-1179		65		Palm		
5Z-212	Body bracket connecting bolt holding open end wrench. Old No. 3Z-686		25		Precn		
5Z-232	Spindle arm bushing driver. Old No. 3Z-1956		40		Quincy		
5Z-249	Generator third brush adjusting wrench. (New Style)		20		Quatch		
5Z-280	Valve grinder. Old No. 3Z-804		75		Palater		
5Z-285	1/4" hex. brace wrench. Old No. 3Z-786		65		Prince		
5Z-286	Rear axle nut and housing plug brace wrench Old No. 3Z-751		65		Pulpit		
5Z-287	Rear wheel puller assembly. Old No. 3Z-612		80		Panary		
5Z-289	1/2" brace socket wrench. Old No. 3Z-1173 and 3Z-1223B		65		Parsee		
5Z-290	Piston ring squeezer. Old No. 3Z-652		30		Patle		
5Z-314	Transmission clutch disc drum puller. Old No. 3Z-614		65		Papaw		
5Z-319	Valve spring lifter. Old No. 3Z-4730		30		Palpus		
5Z-323	Bendix shaft head puller. Old No. 3Z-4712		80		Queach		
5Z-324	Trans. band ratchet wrench. Old No. 3Z-2034		50		Poplin		
5Z-325	Connecting rod cap bolt nut brace wrench with universal joint for No. 4 connecting rod. Old No. 3Z-2304		2 00		Quadra		
5Z-326	Small time gear and trans. driven gear puller. Old No. 3Z-611		1 70		Pantile		
5Z-361	Large time gear puller. Old No. 16Z-4992		7 00		Queasy		
5Z-362	Cam gear puller (3-spoke design)		6 50		Pantier		
5Z-457	Valve seat reamer. Old No. 20Z-340		2 50		Papula		
20Z-340-1	Valve seat reamer cutter. Old No. 3Z-617-2		1 50		Papur		
21Z-356	Valve seat reamer handle. Old No. 3Z-617-3		1 00		Pasha		

REPAIR TOOLS—TRUCK

5Z-288	Rear wheel puller assembly. Old No. 3Z-2257		1 00		Hock		
3389X	Jack		2 40		Hog		

COTTER PINS

	Fac. No.		Fac. No.
1/4" x 1" cotter pins	421	3/8" x 1 1/2" cotter pins	66
3/8" x 1 1/2" cotter pins	753	1/2" x 1 1/2" cotter pins	544
1/2" x 1 1/2" cotter pins	82	3/4" x 1 1/2" cotter pins	88
Price, per dozen			\$ 0 05
Price, per gross			25
Price, per thousand			75

Part No.	Year	Code	Price	Tax Status
----------	------	------	-------	------------

FORD SPECIALTIES

*4095BX	Emergency kit		\$1 50	
7962ARX	Tire repair kit		140	
7962BX	Tire repair kit (small)		125	
M-111	Black touch-up enamel 1/2 pt.		11 00	
M-165	Black enamel (air-dry) 1 qt.		11 00	

ELECTRIC HORN

6432BRX	Electric horn complete	Ulcer	\$ 1 50
6432CX	Electric horn complete (battery type)	Ulema	1 60
7915X	Electric horn terminal wire 9'	Ulna	05 MH
7917BX	Electric horn to switch wire 35 3/4'	Ultra	10 MH
8028X	Horn switch assembly	Valiant	30 MH
6437CX	Battery horn bracket	Valinch	10

ELECTRIC HEAD LAMPS (STANDARD 1915-24)

6511HX	Head lamp assembly—per pair	Uktion	6 00
6511KX	Head lamp assembly—per pair	Unicorn	6 00
6594AX	Head lamp door assembly—used with 6511DX	Union	60
6594HX	Head lamp door assembly—with refracting lens	Uktion	65
6589X	Head lamp switch assembly—with screws	Ural	30 MH
8650X	Head lamp and horn switch assembly	Urdu	40 MH
8892ARX	Dimmer resistance coil with wires	Urbox	50 MH

*Consists of 1 spark plug, 2 headlamp bulbs and 1 tail lamp bulb in carton.

†Not subject to regular discount.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Code	Price	Tax Status
----------	--------------	------	------	-------	------------

ELECTRIC HEAD LAMPS (STANDARD 1915-24)—Continued

*8892BX	Dimmer assembly		Ureter	\$ 0 50	MH
*8890X	Dimmer cover		Uretos	10	
6572AX	Head lamp bulb—9-volt, 18 c. p., double contact, used with magneto without dimmer	1915-18	Urban	30	
6572HX	Head lamp bulb—6-8-volt, bright 21 c. p., dim 1 1/4 c. p. double contact, double filament, used with T6576HX lens	1922-23	Urlonte	40	
6572KX	Head lamp bulb—6-8-volt, 21 c. p., double contact, used with dimmer T8892X without starter or dimmer				
	T7320X with starter and T6576HX lens	1922-24	Urites	35	
6578X	Head lamp door lens gasket		Urclin	03	
6576HX	Head lamp lens—refracting, per pair in carton	1922-24	Uretic	50	
6592X	Head lamp plug—with thimble		Urus	10	
6585AX	Head lamp reflector		Urva	75	
6585BX	Head lamp reflector (dimmer type)		Urbos	90	
6580X	Head lamp focusing screw		Utas	03	
6591X	Head lamp focusing spring screw		Ute	01	
6574X	Head lamp bulb socket		Vagrant	15	
6574BX	Head lamp plug socket		Vaisya	15	
6586X	Head lamp reflector spring		Vail	05	MH
7487X	Switch to terminal wire—11 3/4" long		Valise	05	MH
7489X	Lamp to lamp wire—40" long		Vallum	10	MH
7490X	Lamp to ground wire—10 3/4" long		Vamp	05	MH
2122X	Head lamp wire bushing		Valvate	03	
4082X	Head lamp and tail lamp wire bushing		Valvule	01	

SIDE OIL AND TAIL LAMPS—1915-24

6561X	Side oil lamp, per pair		Van	4 50	
6568ARX	Tail lamp		Vandal	2 50	
6568BX	Oil tail lamp	1923-24	Vanadic	2 50	
7669X	Electric tail lamp assembly		Vanquish	90	
8786CX	Elec. tail lamp and License brkt. assy.		Vanquite	1 00	
6484AX	Tail lamp red lens	1915-24	Vault	15	
6484BX	Electric tail lamp red lens		Vales	15	
6484DX	Oil tail lamp side lens (red)		Valetium	10	
6405CX	Elec. tail lamp white lens		Valeiv	15	
6405EX	Oil tail lamp door lens (white) Edmunds & Jones design		Valeta	15	
6405FX	Oil tail lamp door lens (white) J. W. Brown design		Valeter	15	
6406X	Elec. tail lamp white lens retainer		Valevin	05	
6520X	Taillamp and head lamp dimmer bulb—6-8-volt—2 1/4 c. p., single contact		Valhalla	20	
6495X	Electric tail lamp bulb socket		Valguls	15	
2107X	Tail lamp wire clip		Vanessa	01	
2108X	Tail lamp wire spring		Vanfoss	03	
6409X	Tail lamp wire bushing assembly		Vanglo	03	
6410X	Tail lamp wire bushing support		Vanilla	01	
TT8821X	Tail lamp to ground wire assembly		Vanity	15	MH
6599X	Side oil and tail lamp fount		Vane	50	
6956X	Side oil lamp door		Vanish	50	
6957X	Tail lamp door		Vapid	50	
6957BX	Tail lamp door		Vapider	50	
6460X	Lamp burner		Varix	25	
6483X	Side oil lamp door lens		Vat	15	
6392X	Lamp wick		Vega	05	

TOURING CAR AND TORPEDO WINDSHIELDS—1915-22


†7840ARX	Windshield assembly		Vender	†12 75	MH
7818BX	Windshield hinge assembly—right	1917-22	Vent	30	
7819BX	Windshield hinge assembly—left	1917-22	Verb	30	
7820BX	Windshield frame assembly—upper	1917-22	Vermin	1 50	
7822BX	Windshield upper half assembly	1917-22	Verst	†5 75	MH
7823ARX	Windshield lower half assembly	1915-22	Vertex	†6 25	MH
7802ARX	Windshield lower frame only	1915-22	Venge	1 00	
7803ARX	Windshield lower frame filler block	1915-22	Verve	20	
7888ARX	Windshield block (frame filler)—upper	1917-22	Vesper	20	
7845ARX	Windshield bracket—right	1915-22	Vestal	50	
7845BX	Windshield bracket—right	1919-22	Vestado	50	
7846ARX	Windshield bracket—left	1915-22	Vestry	50	
7846BX	Windshield bracket—left	1919-22	Vexil	50	
7824ARX	Windshield glass clamp	1915-22	Veto	02	
7887X	Windshield frame—upper	1917-22	Vicar	75	
3827X	Windshield top snap loop	1915-22	Vine	02	
1154X	Windshield hinge bolt nut (Order 3929C)				
2449BX	Windshield glass clamp screw	1915-22	Viol	01	
2257BX	Windshield hinge to frame screw	1915-22	Virent	02	
292X	Windshield hinge spring (Order 2742)				
7851ARX	Windshield upper glass stop—nickel	1915-22	Vise	20	
7852ARX	Windshield lower glass stop—nickel	1915-22	Vitals	20	
7808X	Windshield hinge thimble	1915-22	Vitex	03	
7827AX	Windshield glass—upper	1915-22		†4 25	
7828X	Windshield glass—lower	1915-22		†4 50	

*Used on cars without starter with switch on instrument panel.

†Order 7845X-7846X extra for 1915-16 cars.

‡Not subject to regular discount.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

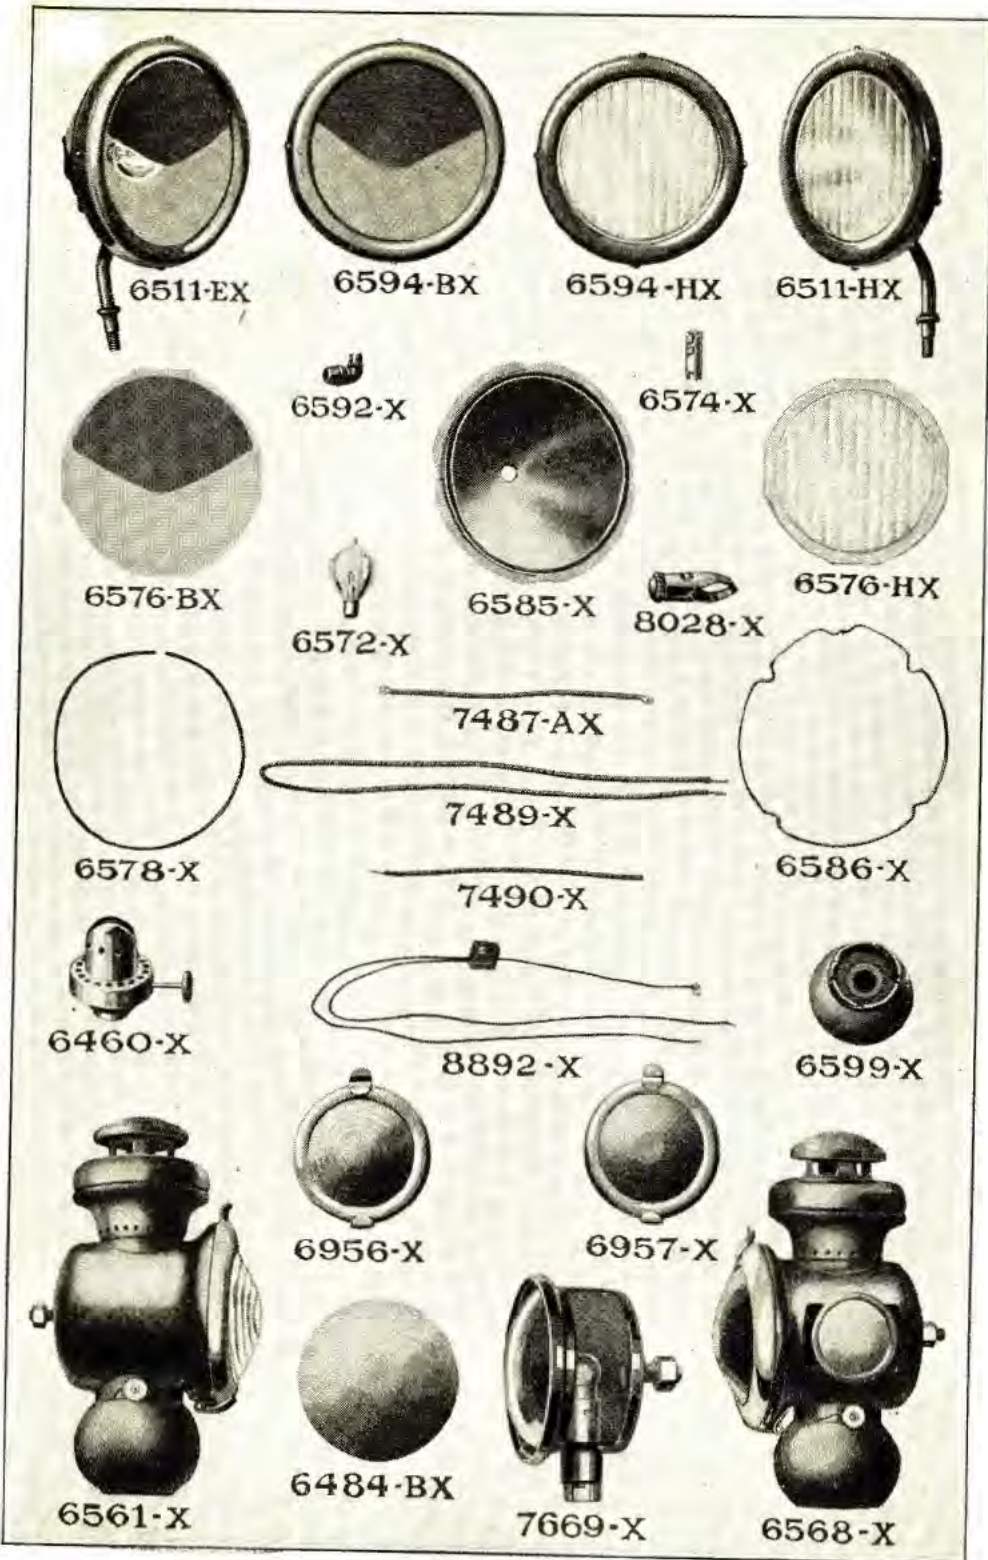

Part No.	Name of Part	Year	Code	Price	Tax Status
TOURING CAR AND ROADSTER WINDSHIELDS—1922-24					
T-7836X	Anti-rattler (windshield)	1922-24	Veadar	\$ 0 15	
6645X	Bolt (windshield bracket to instrument panel)	1922-24	Vacrius	03	
7837X	Bracket (windshield) assembly—R. H.	1922-24	Vactor	75	MH
7838X	Bracket (windshield) assembly—L. H.	1922-24	Vedotte	75	MH
7891X	Bracket (side oil lamp)	1922-24	Vedios	30	
9066X	Channel (windshield)—center	1922-24	Vegetus	35	
7816X	Cone (windshield frame)	1922-24	Vegetus	1 00	
7802BX	Frame (windshield) assembly—lower	1922-24	Vehmic	1 00	
7887CX	Frame (windshield) assembly—upper	1922-24	Velovic	1 00	
7888BX	Filler (windshield upper frame)—lower	1922-24	Vellma	05	
7847X	Filler (windshield upper frame)—upper	1922-24	Velltes	05	
7803BX	Filler (windshield lower frame)	1922-24	Vellito	10	
7827BX	Glass (windshield) upper	1922-24		14 00	
9534X	Glass (windshield) lower	1922-24		14 25	
7825X	Nut (windshield clamp stud wing)	1922-24	Vendue	15	
7842X	Nut (windshield cone lock)	1922-24	Venedi	02	
1307X	Nut (windshield brkt. to instrument panel bolt) lower	1922-24	Venene	05	
7851BX	Retainer (windshield glass)—upper	1922-24	Venew	20	
7852BX	Retainer (windshield glass)—lower	1922-24	Ventose	20	
7826X	Stud (windshield frame clamping)	1922-24	Ventore	03	
7833X	Washer (windshield clamp stud nut)	1922-24	Vepicos	01	
7840BX	Windshield assembly	1922-24	Veragri	114 00	MH
7822CX	Windshield (upper half) assembly	1922-24	Verbose	16 00	MH
7823BX	Windshield (lower half)	1922-24	Verity	16 25	MH
78064X	Windshield brkt. to body bolt	1922-24	Veritas	02	

TOURING CAR TOPS—1915-22

7940ARX	Touring car top complete	1915-22	Warm	127 00	MH
6882ARX	Touring car storm curtain (R. H.)	1915-22	Warp	2 00	MH
6883ARX	Touring car storm curtain (L. H.)	1915-22	Warren	2 00	MH
4966BRX	Touring car side curtain (R. H.)	1915-22	Wart	2 50	MH
4967BRX	Touring car side curtain (L. H.)	1915-22	Wash	2 50	MH
6894ARX	Touring car center deck complete	1915-22	Wasp	7 00	MH
6815ARX	Touring car side quarter pad	1915-22	Watt	1 00	
6940ARX	Touring car back stay and curtain assembly	1915-22	Wax	3 00	MH
8973ARX	Touring car front and rear extension rib	1918-22	Yawn	40	
8974ARX	Touring car front and rear upright rib	1918-22	Yell	40	
6832ARX	Touring car bow separator	1918-22	Whelp	05	
6860BRX	Touring car front extension rib socket (R. H.)	1918-22	Wealth	1 00	
6861BRX	Touring car front extension rib socket (L. H.)	1918-22	Weary	1 00	
3884BRX	Touring car rear extension rib socket (R. H.)	1918-22	Wedding	1 00	
3885BRX	Touring car rear extension rib socket (L. H.)	1918-22	Walt	1 00	
6862BRX	Touring car front upright rib socket (R. H.)	1918-22	Whig	1 00	
6863BRX	Touring car front upright rib socket (L. H.)	1918-22	Whilk	1 00	
3882BRX	Touring car rear upright rib socket (R. H.)	1918-22	Yauk	1 00	
3883BRX	Touring car rear upright rib socket (L. H.)	1918-22	Yawl	1 00	
7831ARX	Curtain to windshield hook	1915-22	Whame	02	
7832X	Curtain to body hook	1915-22	Whaul	02	
8992X	Rib socket cotter	1918-22	Wheeze	02	
3924ARX	Touring car top to windshield strap assembly	1915-22	Wharf	25	
3629ARX	Touring car rear stay strap assembly complete	1913-21	Wheat	40	
3629BRX	Touring car rear stay strap assembly complete	1921-22	Whiffet	40	
6829BX	Touring car extension support—upper	1918-22	Yell	10	
6830BX	Touring car extension support—lower	1918-22	Yecoman	05	
8937X	Touring car top snap fastener—single	1917-22	Will	05	
8938X	Touring car top snap fastener—double	1917-22	Willow	05	
3314ARX	Touring cap top prop rest with strap	1913-22	Wind	60	
3858X	Touring cap top prop rest arm	1913-21	Wine	25	
3624X	Touring car bow socket to seat iron japanned nut	1913-22	Wing	03	
6682X	Curtain celluloid 20" x 50"—.015 thick	1913-22	Wink	2 20	
4981ARX	Touring car top visor	1920-22	Wizen	50	
8940X	Curtain fastener eyelet	1917-22	Wrack	01	
8943X	Curtain fastener eyelet washer	1917-22	Wrasse	01	

TOURING CAR TOPS—1922-24

3573X	Brace (top extension)—R. H.	1922-24	Viable	35	
3574X	Brace (top extension)—L. H.	1922-24	Viac	35	
**3588X	Top clamping bracket assembly	1922-24	Viadrus	25	
**6902X	Glove fastener button	1922-24	Vizier	02	
††6940BRX	Curtain (rear) assembly	1922	Vizduct	2 50	MH
6940CX	Curtain (rear) assembly	1922-24	Vialis	2 50	MH
††4966CRX	Curtain (rear side) assembly—R. H.	1922	Viage	2 00	MH
4966DX	Curtain (rear side) assembly—L. H.	1922-24	Viabro	2 00	MH
††4967CRX	Curtain (rear side) assembly—L. H.	1922	Viatie	2 00	MH
4967DX	Curtain (rear side) assembly—L. H.	1922-24	Viabran	2 00	MH
6882BX	Curtain (front side) assembly—R. H.	1922-24	Vibidia	2 00	MH
6883BX	Curtain (front side) assembly—L. H.	1922-24	Vibius	2 00	MH
††6894BRX	Deck (top) assembly	1922	Vidette	6 50	MH
6894CX	Deck (top) assembly	1922-24	Viduall	6 50	MH

**Also used on 1922 Roadster top.

††Used on tops with straight side quarters. †Not subject to regular discount.

‡Used on cars without starter.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Code	Price	Tax Status
TOURING CAR TOPS—1922-24—Continued					
**6903X	Eyelet (side curtain rear glove fastener)	1922-24	Vidonia	\$ 0 02	
**6904X	Fastener (rear curtain glove)	1922-24	Vielle	02	
**7831BX	Hook (curtain to windshield)	1922-24	Venal	02	
6815BX	Pad (top side quarter) assembly	1922-24	Viewer	1 00	
**3314BX	Rest (prop) and strap assembly	1922-24	Vindil	40	
8975X	Rib (top)—center and rear	1922-24	Vincy	40	
8973BX	Rib (top)—front	1922-24	Viola	40	
8974BX	Rib (top)—center ext.	1922-24	Violist	40	
**3548X	Screw (front socket fastener)	1922-24	Vireton	05 00	
6860CX	Socket (top rib)—front—R. H.	1922-24	Virger	1 00	
6861CX	Socket (top rib)—front—L. H.	1922-24	Virid	1 00	
3882CX	Socket (top rib)—center—R. H.	1922-24	Viscid	1 00	
3883CX	Socket (top rib)—center—L. H.	1922-24	Viscum	1 00	
††3884CRX	Socket (top rib)—rear—R. H.	1922	Vishnu	1 25	
3884DX	Socket (top rib)—rear—L. H.	1922-24	Vishnet	1 00	
††3885CRX	Socket (top rib)—rear—L. H.	1922	Vivise	1 25	
3885DX	Socket (top rib)—rear—L. H.	1922-24	Vivlad	1 00	
6862CX	Socket (top rib)—center ext.—R. H.	1922-24	Vivual	1 00	
6863CX	Socket (top rib)—center ext.—L. H.	1922-24	Vitalize	1 00	
6844BX	Top center strainer	1922-24	Vitrally	40	
6846X	Top quarter strainer	1922-24	Vivify	40	
**3629CX	Strap (top stay)	1922-24	Virts	20	MH
**6901X	Stud (rear curtain glove fastener)	1922-24	Vitra	02	
3551X	Center support on rear socket	1922-24	Virile	05	
3564X	Center ext. support on centersocket	1922-24	Viatula	05	
3572X	Center ext. to brace support	1922-24	Vitrify	05	
7940BX	Top assembly	1922-24	Vivace	127 00	MH
**4981BX	Visor (top) assembly	1922-24	Vivary	75	
**6905X	Washer (side curtain rear glove fastener)	1922-24	Vivers	02	

TORPEDO TOP PARTS—1915-22

7941X	Torpedo top complete	1915-22	Wisdom	122 00	MH
8772X	Rib—upright	1918-22	Wenny	40	
8988X	Rib—front extension	1918-22	Wepit	40	
8989X	Rib—rear extension	1918-22	Whaling	40	
6870BX	Torpedo top rib socket—upright—(R. H.)	1918-22	Whallo	1 00	
6871BX	Torpedo top rib socket—upright—(L. H.)	1918-22	Whedle	1 00	
6872BX	Torpedo top rib socket—front extension—(R. H.)	1918-22	Whelm	1 00	
6873BX	Torpedo top rib socket—front extension—(L. H.)	1918-22	Wherry	1 00	
4907BX	Torpedo top rib socket—rear extension—(R. H.)	1918-22	Wherit	1 00	
4908BX	Torpedo top rib socket—rear extension—(L. H.)	1918-22	Whewer	1 00	
6937AX	Torpedo top side curtain—rear—(R. H.)	1915-22	Wood	1 50	MH
6938AX	Torpedo top side curtain—rear—(L. H.)	1915-22	Word	1 50	MH
6935AX	Torpedo top side curtain—front—(R. H.)	1915-22	Work	2 00	MH
6936AX	Torpedo top side curtain—front—(L. H.)	1915-22	World	2 00	MH
6950AX	Torpedo top back curtain assembly	1915-22	Worm	2 50	MH
6965AX	Torpedo top center deck complete	1915-22	Worry	4 50	MH
6806AX	Torpedo top side quarter pad	1914-22	Wrist	60	
3877X	Torpedo top prop rest with strap	1913-22	Yam	60	
4955AX	Torpedo top visor	1920-22	Yamper	50	

ROADSTER TOPS—1922-24

6935BX	Curtain (front side) assembly—R. H.	1922-24	Vocio	1 50	MH
6936BX	Curtain (front side) assembly—L. H.	1922-24	Vogle	1 50	MH
6937BX	Curtain (rear side) assembly—R. H.	1922-24	Voglite	1 00	MH
6938BX	Curtain (rear side) assembly—L. H.	1922-24	Vogue	1 00	MH
6950BX	Rear curtain assembly	1922-24	Volanna	2 50	MH
6965BX	Top deck assembly	1922-24	Volens	4 00	MH
6806BX	Top side quarter pad assembly	1922-24	Voleus	60	
8988BX	Top rib—front	1922-24	Volupia	40	
8989BX	Top rib—center and rear	1922-24	Volumna	40	
4907CX	Top rib socket assembly—rear—R. H.	1922-24	Volupy	1 00	
4908CX	Top rib socket assembly—rear—L. H.	1922-24	Volute	1 00	
6872CX	Top rib socket assembly—front	1922-24	Volvox	1 00	
6870CX	Top rib socket assembly—center—R. H.	1922-24	Vomer	1 00	
6871CX	Top rib socket assembly—center—L. H.	1922-24	Votary	1 00	
7941BX	Top assembly	1922-24	Voturl	122 00	MH


**Also used on 1922 Roadster top.

††For additional 1922 Roadster top parts see 1922 Touring Car top parts marked with a double asterisk.

‡Used on tops with straight side quarters. †Not subject to regular discount.

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

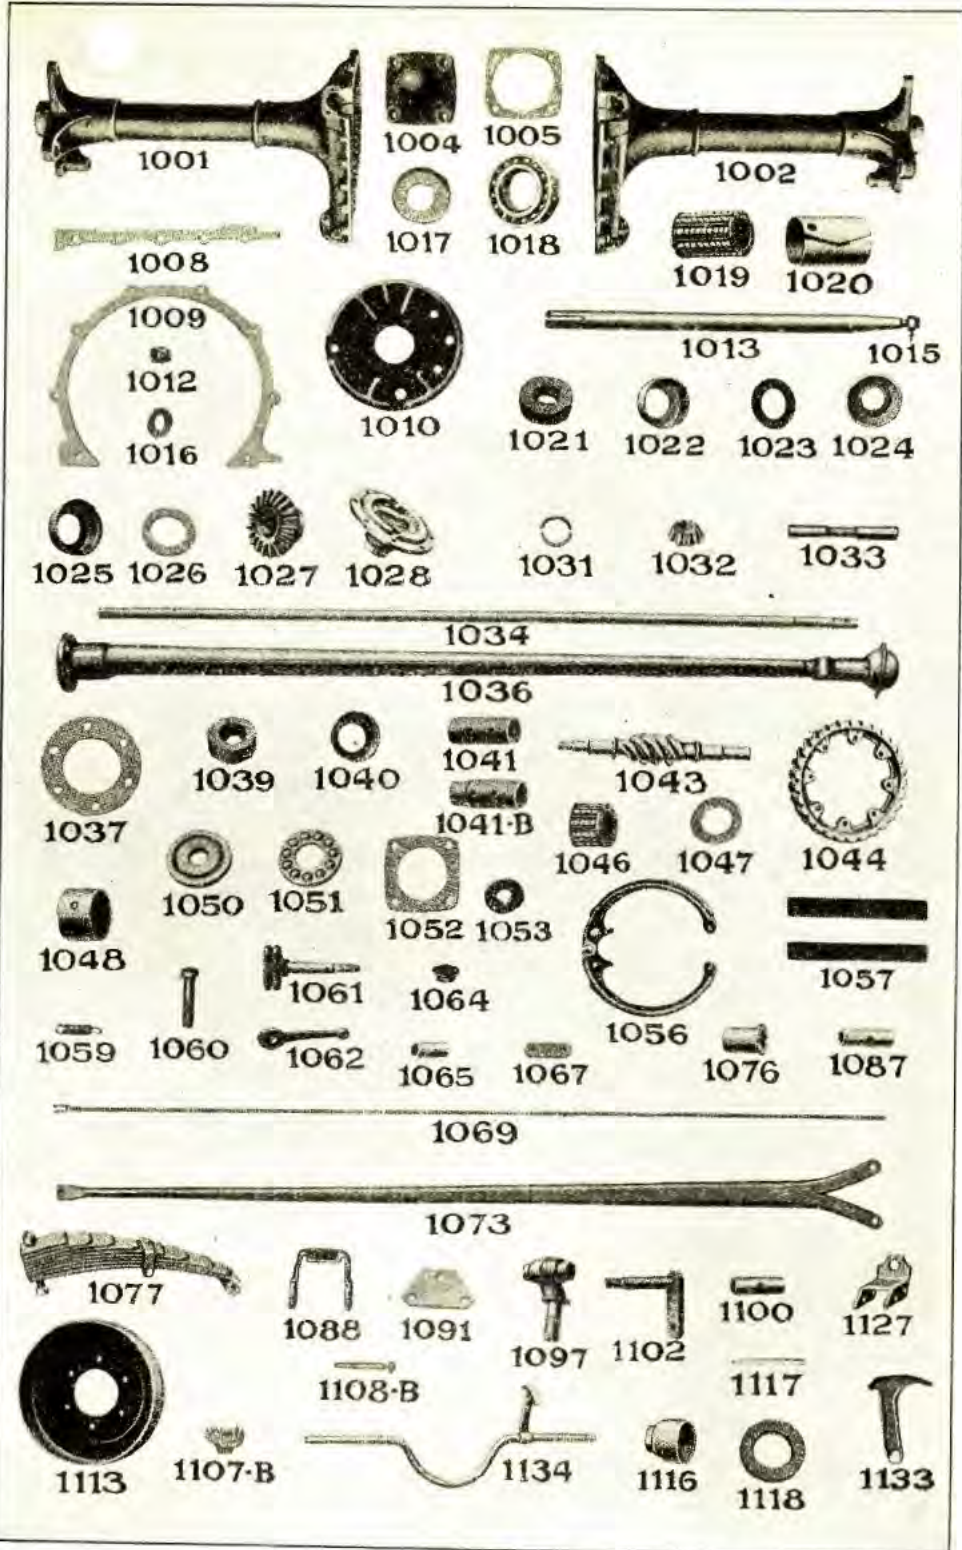

Price List of Parts for Model T One-Ton Truck

Part No.	Name of Part	Year	Price	Tax Code	Fac.No.Reg.
				Status Word	Model No. per Car
REAR AXLE					
1000	Rear axle assembly	1918-24	\$110 00	MH..Abed.	TT.. 95... 1
1001	Axle housing—right	1918-24	15 00	MH..Abys.	TT.. 4... 1
1002	Axle housing—left	1918-24	15 00	MH..Acme	TT.. 5... 1
1003	Axle housing bolt	1918-24	03	Avall.	TT.. 52... 13
1003B	Axle housing bolt nut. Order 2719	1918-24			
1004	Axle housing cap	1918-24	35	MH..Actor	TT.. 133... 1
1005	Axle housing cap gasket	1918-24	02	Acute	TT.. 134... 1
1006	Axle housing cap screw	1918-24	05	Adder	TT.. 72... 4
1007	Axle housing cap screw lock wire	1918-24	01	Addle	TT.. 140... 1
1008	Axle housing gasket—upper	1918-24	02	Agate	TT.. 138... 1
1009	Axle housing gasket—lower	1918-24	05	Agast	TT.. 139... 1
1010	Axle brake housing plate—right	1918-24	35	MH..Agile	TT.. 147... 1
1011	Axle brake housing plate—left	1918-24	35	MH..Akin	TT.. 148... 1
1012	Axle housing drain plug	1918-24	05	Alder	TT.. 136... 2
1013	Axle shaft	1918-24	4 00	MH..Alex	TT.. 48... 2
1014	Axle shaft cotter	1918-24	dz.10	Alms	TT.. 165... 2
1015	Axle shaft nut	1918-24	10	Alot	TT.. 166... 2
1016	Axle shaft washer	1918-24	03	Alot	TT.. 135... 2
1017	Axle shaft dust cap	1918-24	03	Alpha	TT.. 56... 2
1018	Axle shaft inner ball bearing assembly	1918-24	5 00	Alpine	TT.. 125... 2
1019	Axle shaft outer roller bearing	1918-24	1 25	Archer	TT.. 253... 2
1020	Axle shaft outer roller bearing sleeve—R	1918-24	35	Arera	TT.. 170... 1
1020B	Axle shaft outer roller bearing sleeve—L	1918-24	35	Areola	TT.. 161... 1
1021	Axle shaft bearing felt	1918-24	15	Argue	TT.. 143... 4
1022	Axle shaft bearing retainer	1918-24	05	Ark	TT.. 20... 2
1023	Axle shaft bearing retainer washer	1918-24	02	Arson	TT.. 23... 2
1024	Axle shaft felt retainer assembly	1918-24	20	Astral	TT.. 144... 2
1025	Axle shaft felt retainer cup	1918-24	03	Attwist	TT.. 145... 2
1026	Axle shaft felt retainer plate	1918-24	03	Attle	TT.. 146... 2
1027	Diff. gear	1918-24	1 15	MH..Aura	TT.. 13... 2
1028	Diff. gear case R. or L. half	1918-23	2 50	MH..Author	TT.. 11AR... 2
1028B	Diff. gear case—R. or L. half	1923-24	2 50	MH..Authus	TT.. 11B... 2
1029	Diff. gear case bolt. Order 1003				
1031	Diff. gear lock ring	1918-24	02	Avoke	TT.. 118... 2
1032	Diff. pinion	1918-24	50	MH..Awake	TT.. 14... 2
1033	Diff. pinion shaft	1918-23	20	MH..Awry	TT.. 15AR... 1
1033B	Diff. spider	1923-24	1 50	MH..Awryab	TT.. 15B... 1
1034	Drive shaft	1918-24	7 00	MH..Bait	TT.. 87... 1
1036	D. S. tube assembly	1918-24	10 00	MH..Balm	TT.. 153... 1
1037	D. S. tube flange gasket	1918-24	02	Bandit	TT.. 194... 1
1038	D. S. tube flange screw. Order 1006				
1039	D. S. felt	1918-24	10	Basil	TT.. 109... 1
1040	D. S. felt container	1918-24	03	Beaver	TT.. 110... 1
1041	D. S. to worm coupling	1918-20	1 00	Behind	TT.. 85A... 1
1041B	D. S. to worm coupling	1920-24	70	Bhang	TT.. 85B... 1
1042	D. S. to worm coupling pin	1918-24	01	Behold	TT.. 86... 2
1043	Worm—7 1/4 to 1	1918-24	6 00	MH..Berg	TT.. 16A... 1
1043B	Worm—5 1/6 to 1	1918-24	6 00	MH..Bernese	TT.. 16B... 1
1044	Worm gear—7 1/4 to 1	1918-24	10 00	MH..Bible	TT.. 12A... 1
1044B	Worm gear—5 1/6 to 1	1918-24	10 00	MH..Bifilar	TT.. 12B... 1
1045	Worm cotter. Order 1014	1918-24			
1046	Worm roller bearing	1918-24	90	Bight	TT.. 108... 2
1047	Worm roller bearing retainer	1918-24	02	Bigot	TT.. 106... 1
1048	Worm roller bearing sleeve	1918-24	1 20	Bilog	TT.. 107... 2
1049	Worm roller bearing housing screw	1918-24	03	Birch	TT.. 101... 2
1050	Worm thrust bearing collar	1918-24	80	Bird	TT.. 114... 2
1051	Worm thrust ball and separator assembly	1918-24	60	Bitter	TT.. 123... 1
1052	Worm thrust bearing plate	1918-24	15	Blaze	TT.. 22... 1
1053	Worm thrust bearing retainer	1918-24	15	Blanch	TT.. 111... 1
1054	Worm thrust bearing retainer nut Order 1015	1918-24			
1055	Worm thrust bearing retainer pin	1918-24	01	Blend	TT.. 112... 1
1056	Brake shoe	1918-24	1 50	MH..Blind	TT.. 2814... 2
1057	Brake shoe lining, each	1918-24	25	MH..Blink	TT.. 58... 4
1058	Brake shoe lining rivet	1918-24	dz.10	Blue	TT.. 68... 40
1059	Brake shoe spring	1918-24	05	Blunt	TT.. 67... 2
1060	Brake shoe bolt	1918-24	10	Sicon	TT.. 59... 2
1060B	Brake shoe bolt nut. Order 282S	1918-24			
1061	Brake expander	1918-24	40	MH..Bodkin	TT.. 61... 2
1062	Brake expander lever	1918-24	15	MH..Booth	TT.. 62... 2
1064	Brake expander adjustment collar	1918-24	15	Brig	TT.. 175... 2
1065	Brake expander bushing	1918-24	10	Bronze	TT.. 173... 2
1066	Brake expander pin	1918-24	01	Brook	TT.. 7... 2
1067	Brake expander link	1918-24	08	MH..Broom	TT.. 176... 4
1068	Brake expander link pin	1918-24	03	Brow	TT.. 177... 8
1069	Brake rod	1918-24	30	MH..Brush	TT.. 119... 2
1070	Brake rod support—right	1918-24	10	Buck	TT.. 120... 1
1071	Brake rod support—left	1918-24	10	Bug	TT.. 121... 1
1072	Brake rod support bolt	1918-24	02	Serene	TT.. T7181... 2
1072B	Brake rod support bolt nut. Order 3088E	1918-24			
1073	Rear radius rod—right	1918-24	2 80	Burn	TT.. 152... 1
1073B	Rear radius rod—left	1918-24	2 80	Burnet	TT.. 158... 1
1074	Rear radius rod bolt—front	1918-24	10	Acclaim	TT.. 84... 1

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

Insist upon genuine Ford Parts

Part No.	Name of Part	Year	Price	Tax Status	Code Word	Fac. No. Model No.	Req. per Car
REAR AXLE—Continued							
1075	Rear radius rod bolt—rear	1918-23	\$ 0 10		Abscind.	TT.. 83	4
1075B	Rear radius rod bolt nut. Order 2828	1918-23					
1076	Universal joint bushing	1918-23	60		Crape	TT.. 69	1
SPRING							
1077	Rear spring—right or left, each	1918-24	4 00	MH.	Cream	TT.. 333	2
1078	Spring leaf No. 1	1918-24	90		Creed	TT.. 334	2
1079	Spring leaf No. 2	1918-21	50		Crew	TT.. 362	2
1080	Spring leaf No. 3	1918-24	45		Crib.	TT.. 363	2
1081	Spring leaf No. 4	1918-24	40		Crisp	TT.. 364	2
1082	Spring leaf No. 5	1918-21	35		Croak	TT.. 365	2
1083	Spring leaf No. 6	1918-24	30		Crop	TT.. 366	2
1084	Spring leaf No. 7	1918-24	25		Croup	TT.. 367	2
1085	Spring leaf No. 8	1918-21	20		Crow	TT.. 368	2
1086	Spring leaf No. 9	1918-24	20		Crowd	TT.. 331	2
1087	Spring bushing	1918-21	20		Crumb	TT.. 332	2
1088	Spring clip	1918-24	45		Crusher	TT.. 326	2
1089	Spring clip nut	1918-24	05		Cry	TT.. 327	4
1091	Spring clip plate	1918-24	20		Cuff	TT.. 329	2
1092	Spring tie bolt	1918-21	15		Cuit	TT.. 330	2
1093	Spring tie bolt nut. Order 1089	1918-24					
1094	Spring tie bolt cotter	1918-24	dz. 05		Cure	TT.. 328	
1095	Spring clamp	1918-24	03		Curf	TT.. 375	2
1096	Spring clamp bolt	1918-24	03		Curse	TT.. 376	2
1096B	Spring clamp bolt nut. Order 3514	1918-24					
1097	Spring perch	1918-24	80	MH.	Dale	TT.. 2804	2
1098	Spring perch nut. Order 1015	1918-24					
1099	Spring perch cotter. Order 1014	1918-24					
1100	Spring perch bushing	1918-24	25		Demon	TT.. 172	2
1101	Spring perch bushing spacer	1918-24	05		Dean	TT.. 169	4
1102	Spring hanger assembly	1918-24	30		Dike	TT.. 91	4
WHEELS							
1105B	Rear wheel complete—dem.—Kelsey	1919-24	17 50		Duelist	TT.. 7698	2
1105C	Rear wheel complete—dem.—Hayes	1919-24	17 50		Dulcant	TT.. 7698B	2
1105D	Rear wheel—dem.—less rim & hub—Kelsey	1919-24	8 00		Duramen	TT.. 2817AR	2
1105E	Rear wheel—dem.—less rim & hub—Hayes	1919-24	8 00		Durance	TT.. 2817BR	2
1106C	Dem. rim only—Hayes	1919-24	3 50		Dumal	TT.. 8774B	2
1106D	Dem. rim only—Kelsey	1922-24	3 50		Dunny	TT.. 8774C	2
1106E	Dem. rim retainer ring—Kelsey	1922-24	45		Dupion	TT.. 178	2
1107B	Clamp and nut assembly—Kelsey	1918-24	15		Duledge	TT.. 8807	12
1108B	Clamp bolt	1919-24	05		Dullish	TT.. 8832	12
1109	Rear wheel complete, less tire	1918-24	16 50		Duel	TT.. 99	2
1109B	Rear wheel—solid tire design—less hub and tire	1918-24	12 25		Dueller	TT.. 2816	2
1110	Rear wheel complete, with solid tire	1919-24			Drone	TT.. 7645	2
1111	Rear hub	1918-24	2 25		Dumb	TT.. 40	2
1112	Rear hub flange	1918-24	40		Dusk	TT.. 149	2
1113	Rear hub brake drum	1918-24	1 25		Dutch	TT.. 3	2
1114	Rear hub bolt	1918-24	05		Dwarf	TT.. 28	12
1114B	Rear hub bolt nut	1918-24	62		Durity	TT.. 29	12
1116	Rear hub cap	1918-24	25		Dyke	TT.. 150	2
1117	Rear hub key	1918-24	03		Ear	TT.. 26	2
1118	Rear hub felt	1918-24	05		East	TT.. 162	2
FRAME							
1119	Frame assembly	1918-24	25 00	MH.	Eat	TT.. 300	1
1120	Side member—right	1918-24	9 00		Ebb	TT.. 301	1
1121	Side member—left	1918-24	9 00		Fish	TT.. 302	1
1122	Front cross member	1918-24	1 00		Flirt	TT.. 303	1
1123	Rear cross member	1918-24	4 00		Flock	TT.. 304	1
1124	Front corner bracket—right	1918-24	15		Fros	TT.. 305	1
1125	Front corner bracket—left	1918-24	15		Froth	TT.. 306	1
1125B	Front end spacer—right	1918-24	15		Fruitage	TT.. 319	1
1125C	Front end spacer—left	1918-24	15		Fruitful	TT.. 318	1
1126	Rear cross member gusset plate	1918-24	25		Ghost	TT.. 307	2
1127	Rear cross member reinforcement	1918-24	35		Fruition	TT.. 325	
TRANSMISSION CONTROL							
1133	Speed lever	1918-24	10	MH.	Hoe	TT.. 862	1
1134	Controller shaft with speed lever	1918-24	60	MH.	Hod	TT.. 1557	1

Of the net amount at which parts marked "MH" are billed to purchasers who purchase direct from the Ford Motor Company 40/41 represents the price of the goods and 1/41 represents excise tax.

